



Bluetooth 4.2



76mm Driver



AUX-IN



TF Card



FM Radio

Enjoy it.

BT-100 BLUETOOTH SPEAKER

Important Notes

- Safety and operating instruction should be retained for future reference.
- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
- Places exposed to direct sunlight or close to radiators.
- On top of other stereo equipment that radiate too much heat.
- Blocking ventilation or in a dusty area.
- Areas where there is constant vibration.
- Humid or moist places.
- Do not place near candles or other naked flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the power adaptor is properly connected.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

SAFETY INSTRUCTIONS

1. Read Instructions - All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be kept with the product for future reference.
3. Heed warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions - All operating and users' instructions should be followed.
5. Installation - Install in accordance with the manufacturer's instructions.
6. Power sources - This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Water and moisture - To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool (or similar).
8. Object and Liquid Entry - Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
9. Servicing - Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
10. Replacement parts - When replacement parts are required, ensure that the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
11. The highest environmental temperature suitable for this product is 35°C.
12. ESD hints - If the product maybe reset or not reset to operation of control due to electrostatic discharge, just switch off and reconnect again, or move the product to another location.

ERP2 (Energy Related Products) note

This product with ecodesign complies with the stage 2 requirements of Commission Regulation (EC) NO. 1275/2008 implementing Directive 2009/125/EC regard to standby and off mode electric power consumption of electronic household and office equipment.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.
2. The appliance is not intended to be operated by means of an external timer or separate remote control system.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
5. To prevent fire or shock hazard, do not expose this equipment to hot places, rain, moisture or dust.
6. Do not place this unit close to a strong magnetic field.
7. Do not place the unit on a amplifier or receiver.
8. Do not place this unit in a damp area as the moisture will affect the life of electric components.
9. If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the player. If this occurs, the system will not operate properly. Please leave the system turned on for about an hour until the moisture evaporates.
10. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.



Your products is designed a manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2013/56/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and poly ethylene (bags, protective foam sheet). Your system consists of material which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment. Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.




The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by us is under license. Other trademarks and trade names are those of their respective owners.

Many thanks to buy our product. This model includes below main features.

- Bluetooth function for audio streaming playback.
- PLL FM radio with station memory.
- MicroSD card playback
- Aux in.
- Built-in rechargeable battery power.

Location of controls:

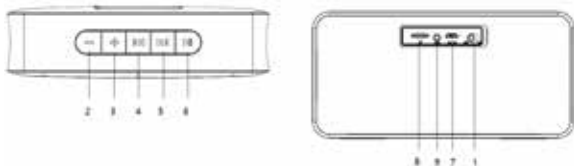

1. On/off switch: push it to power on or off the unit.
- 2-3. Volume +/- button: press and hold it to adjust the output volume level.
- 4-5. Previous/next button: Short press it to switch previous and next track.
6. Play and pause button: press it twice to switch the play mode between bluetooth/FM/micrSD and AUX IN.
7. DC 5V power jack and charging LED indicator.
8. microSD card slot.
9. AUX in jack.

Battery charging

This unit had built-in rechargeable lithium battery inside. Before start the playing, please follow up below step for charging.

1. Using the supplied USB to microUSB type charging cable connects the speaker with your USB charger (USB adaptor or USB output port like on PC, USB rating output: 5V/1A, other USB charger with current equal or above 1A). The microUSB connector should connect with the DC 5V power jack of speaker, and the another terminal connect with USB charger. Then plug your USB charger into the household AC power.
2. The charging LED will light on in red color during charging, and the red color LED will off when the battery is fully charged.
3. The speaker will off automatically when the battery power exhausted, please arrange recharge for playing.
4. The output sound may intermittent due to lower power. This is not malfunction. Please arrange it for recharging.

Important: We recommend connect the USB charger with rating output spec at DC 5V/1A, or equal or above 1A output current USB power. The general USB output on PC (personal computer) is 5V/1A (please reference your PC spec for checking). There may have some charging noise or abnormal function from speaker if the charging current is too low. If it happened, please remove the charging power and put the speaker in a while, then the speaker will reset the function in normal. Please kindly note this is not malfunction.

Notes:

Your battery lifetime will last longer if you follow up below simple guidelines for charging and storing.

- a. For charging first time, charge it at least 10 hours.
- b. Recharge and store the unit within the temperature range of 5°C~35°C (40°F~95°F).
- c. Do not charge longer than 24 hours. Excessive charging or discharging may shorten the battery's life.
- d. Battery life naturally shortens slowly over time.
- e. Please turn off the speaker if long time not to use.
- f. The speaker can play music during charging.
- g. Due to prolong charging and discharging, the unit battery life will be affected and playback time will also be shortened. We cannot guarantee the same playback consistently throughout and this is not include in our warranty and service.

Bluetooth operation

The speaker includes Bluetooth function which allows you to wireless playback the audio with other Bluetooth device like smart phone etc. Please follow up below for the operation.

1. Switch to Bluetooth mode, then the blue color LED will flare which means the speaker is ready to pair with other device.
2. Enable the Bluetooth function on your Bluetooth device, and search the available Bluetooth device(please reference your device manual for the operation).
3. Check the available Bluetooth device on the menu list of your device, and select "BLAUPUNKT BT100" in order to start pairing. Please key-in "0000" (4 zero) in case of a POP password required during pairing. The blue LED will become stable when the pairing is successful.
4. Select and play the music on your Bluetooth device. Then the sound will output from speaker.
5. During Bluetooth playback, you can short press the play/pause button to play or pause the music; short press the Previous/next button to select last or next track;

Phone call hands free: when the cell phone was paired with speaker, and an incoming call is arriving; short press the play/pause button can pick up the call; answer the phone call and talk aim to the microphone hole within 30cm(suggested distance) in order get better conversation sound quality; short press the play/pause button again can end the phone call and resume the music playback.

Notes:

- a. All Bluetooth devices are not guaranteed to pair successfully due to different design and brand.
- b. Please do not put your cell phone very close to the speaker during phone call hands free conversation, in order to avoid interference which will impact the conversation sound quality.
- c. The Bluetooth best working distance is within 10 meters without any obstacle in between.

FM radio operation

Before listen to the radio, please try to move the unit next to the window as you can, or plug on the audio cable as external antenna(optional) in order to get better reception.

Station Scanning: switch to FM radio mode, then Short press the play/pause button to auto scan and save the available FM station(max support up to 60 preset station) short press the previous/next button to select the last or next preset station; press and hold the volume +/- button to decrease or increase the volume.

TF/MicroSD card playback

Please copy the MP3 format music into the TF or MicroSD card device (max supported 32GB) before start the playing, and then insert the card into the slot on the rear panel of unit. Power on and switch to the MicroSD playback mode; the speaker will read out the card device automatically, and get the music output after few seconds.

In TF/MicroSD card playback mode, short press the previous/next button to select the last or next track; press and hold the volume +/- button to decrease or increase the volume. Short press the play/pause button to play or pause the music.

Notes:

- a. The TF/MicroSD card playback mode is only available when there have card device installed on the speaker successfully.
- b. The supported audio format is MP3 in TF/MicroSD playback mode, but not guarantee all mentioned audio file.
- c. Not all TF/MicroSD card devices are supported due to different design and brand, the max supported storage is 32GB.
- d. Please kindly insert the TF or MicroSD card into the slot properly.

AUX IN/ MP3 link mode

Using the supplied 3.5mm to 3.5mm stereo audio cable connect the AUX IN jack of unit with the line out or headphone jack on any other external audio player like mp3 player etc. Power on and switch to AUX IN playback mode; select and play the music from your external audio player, then the sound will output from the speaker.

Notes:

- a. In AUX IN mode, the main control is on your external audio player side. But you still can increase or decrease the volume on the speaker side.
- b. Please kindly note the AUX in mode is only available when the audio cable was plugged in.

Specification:

Power source: DC5V, 1A; (or DC 5V, rating current above 1A)

Bluetooth version: 4.2, best working distance within 10 meters

FM Frequency: 87.5~108.00MHz

TF/MicroSD card supported device till to 32GB max, support audio format MP3.

Rated power: 2 x 5W

Battery power: 3.7V/1200 mA rechargeable lithium battery

Charging time: approximately 4~5 hours base on DC5V, 1A input.

Music playback time: 4~5 hours around.

Power consumption: 10 Watt

Standby power consumption: < 0.5Watt

Accessory: 1 pcs x USB charging cable , 1 pcs x 3.5mm to 3.5mm audio cable

(The above spec may revise without prior notice)

Trouble shooting

1. The unit cannot power on.
 - a. Please charge the unit and try again.
 - b. Please contact the service center in case of issue remains.
2. There is no or intermittent sound output in Bluetooth mode.
 - a. Please turn off the Bluetooth, and repair with the speaker.
 - b. Please put your Bluetooth device closer with the speaker.
3. No available FM station or background noise in FM.
 - a. Please plug on the 3.5mm stereo audio cable and re-scan the available FM station.
 - b. Please tune to another FM station for listening.
 - c. Please try to move the unit next to the window in order to get better reception.
4. The speaker cannot read out the music in TF or microSD card.
 - a. Please check if you insert the TF or microSD card into the slot properly.
 - b. Please check if the audio format is in MP3.

Warranty information 1 year*

If you have issue with our SBWL-01 product please contact our service center.
Authorized Service Center Blaupunkt Speakers

Address: Envent World Wide Pvt. Ltd.,
Khasra No- 15/15 (4-16), Village Samalkha, Tehsil
Vasant Vihar, New Delhi-110037
E-Mail: wecare@blaupunkt-audio.in
Tel: 1800 843 4333

Please prepare and submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note - Important information:

Please use the original packaging or other suitable packaging to protect the unit in transit.