

 **BLAUPUNKT**



CAR MULTIMEDIA  
**MONTEVIDEO 4020**



*Enjoy it.*

**Operating and Installation Instructions**

# CAUTIONS

---

## Safety Notes

This car radio has been manufactured according to established safety guidelines. However, dangers may still occur if the safety notes in this manual is not observed. This manual is intended to familiarize the user with the car radio's important functions. Read this carefully, prior to using the car radio. Keep this manual in an easily accessible location. In addition, do observe the instructions of the devices used in conjunction with this car radio.

## Road Safety

Always observe the following notes for road safety:

- Car radio must be used in a way that compliments safety of the user when driving the vehicle. It is recommended for the user to at an appropriate location when operating the car radio. While driving, user is not recommended to use applications that can be prone to distraction e.g. streaming to videos, entering destination etc.
- User is recommended to proceed with proposed driving routes only if it does not violate any traffic regulations. Local traffic signs and regulations always prevail over the routes proposed.
- User is advised to keep the volume of the car radio to a moderate level for the protection of the ears and to increase the ability to hear any emergency warning signals (e.g. police and ambulance sirens). Do not increase the car radio volume while the car radio is muted as it is not audible. The car radio volume can be too loud when the car radio is unmuted.

## General Safety Notes:

Observe the following for protection against injuries:

- This car radio is intended for installation and operation in a vehicle with 12V vehicle system outage, hence the radio unit must be installed in a DIN slot. Observe the output limits of the car radio. Do not dismantle or modify the car radio. Installation and repairs, if necessary, should be performed by a specialist. We are not liable for any loss or damage caused or resulting from unauthorized disassembly or modification to the product.

- This car radio's core components may result to damage when the car is driven on bumpy roads for a prolonged period of time or if it is used to play non-standard or severely damaged discs.
- Please do not operate the car radio under extreme temperature conditions (extremely high temperature or extremely low temperature); make sure that temperature within the car ranges from -20°C to 80°C before you connect the car radio to the power supply
- For abnormalities, please refer to the "Troubleshooting" section. If the problem cannot be resolved, please press the Reset button to recover its factory settings. Otherwise, please contact respective installer/seller directly for help.
- As SD/USB file formats, codecs, bitrate, resolution and other parameters available in the market are not all the same, there is no guarantee that this car radio can play all media file formats.
- Different cars may have different configurations. It is normal that some CAN-Bus functions cannot be enabled because it is not supported by the user's car or this car radio.
- Solvents, cleaning and scouring agents as well as dashboard spray and plastics care products may contain materials which can damage the surface and screen of the car radio. Use only dry or slightly moistened cloth to clean the car radio surface and screen.

 
This manual may be updated from time to time without any notice.

## Road Safety

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

# KEY FUNCTIONS

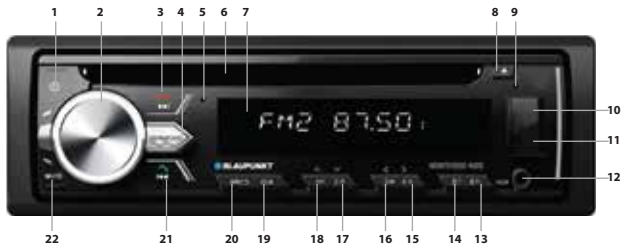


- 1 Press once to turn on or press and hold to turn off
- 2 • Turn knob left / right to increase / decrease volume
  - Radio mode : Press to select BAS-TRE-BAL-FAD-EQ-LOUD-LOC-STEREO, turn knob to adjust
    - BAS : Bass
    - TRE : Treble
    - BAL : Balance
    - EQ (Equalizer) : Flat/Pop/Rock/Classic
    - LOUD
    - LOC : Switch between Local (reduce receiving sensitivity when searching stations) or Remote (receive weak stations signal) searching.
    - STEREO : Switch between Stereo or Mono
- 3 • Radio mode : Press to increase radio frequency manually. Press and hold to increase radio frequency automatically
  - Phone (BT) mode : Press to end call or press to skip to next song
  - Playback mode : Press to skip to next track/chapter. Press & hold to fast forward current track.
  - NUM/FILE/DIR : Y/Z/(SPACE)/9
- 4 • Radio mode : Press to select radio band FM1-FM2-FM3-AM1-AM2 . Press and hold for automatic radio stations scan and save
  - Playback mode : Press to enter manual selection NUM/FILE/DIR
- 5 Microphone
- 6 DVD Slot
- 7 LCD Display
- 8 Eject
- 9 RESET
- 10 USB
- 11 SD
- 12 AUX-IN
- 13 • Radio mode : Use digit to select radio station or press and hold to save the station
  - Playback mode : Press to skip to next 10th song or press and hold to skip to the next folder
  - NUM/FILE/DIR : P/Q/R/6
- 14 • Radio mode : Use digit to select radio station or press and hold to save the station
  - Playback mode : Press to skip to previous 10th song or press and hold to skip to the previous folder
  - NUM/FILE/DIR : M/N/O/5
- 15 • Radio mode : Use digit to select radio station or press and hold to save the station
  - Playback mode : Press to turn on or off shuffle play
  - NUM/FILE/DIR : J/K/L/4
  - External screen : Repeat press and hold step, to shift from one folder to another
- 16
- 17
- 18
- 19
- 20
- 21
- 22

## KEY FUNCTIONS

 - 16** • Radio mode : Use digit to select radio station or press and hold to save the station
- Playback mode : Press to repeat 1/All
  - NUM/FILE/DIR : G/H/I/3
  - External screen : Repeat press and hold step, to shift from one folder to another
- 17** • Radio mode : Use digit to select radio station or press and hold to save the station
- Playback mode : Press to play the first 10 sec of each track
  - NUM/FILE/DIR : D/E/F/2
  - External screen : Repeat press and hold step, to move the selection downwards
- 18** • Radio mode : Use digit to select radio station or press and hold to save the station
- Playback/BT mode : Pause/Play
  - NUM/FILE/DIR : A/B/C/1
  - External screen : Repeat press and hold step, to move the selection upwards
- 19** • Press to switch between media RADIO-PHONE-DISC-USB-SD-AUXIN
- Press and hold for clock setting
  - NUM/FILE/DIR : S/T/U/7
- 20** Press to return to home page
- 21** • Radio mode : Press to decrease radio frequency manually. Press and hold to decrease radio frequency automatically
- Phone (BT) mode : Press to accept call or press to skip to previous song
  - Playback mode : Press to skip to previous track/ chapter. Press & hold to fast reverse current track.
  - NUM/FILE/DIR : V/W/X/8
- 22** Mute

## REMOTE CONTROL

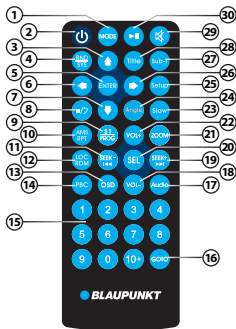

- 1** Press to switch between MODE : Radio - USB - CARD - AVIN - DVD
- 2** Press to turn on or press and hold to turn off
- 3** Up button
- 4** Radio mode : Press to select radio band FM1 - FM2 - FM3 - AM1 - AM2
- 5** Press to Enter to select the preferred option
- 6** Left button
- 7** Down button
- 8** Stop/return
- 9** Radio & DVD mode : Press to switch between Stereo and Mono
- 10** • Radio mode : Press to automatically search and save scanned radio station
- Playback mode : Press to repeat 1/All
- 11** • Playback mode : Press to skip to previous track/chapter. Press and hold to rewind current track.

# REMOTE CONTROL

- Radio mode : Press to decrease radio frequency manually. Press and hold to decrease radio frequency automatically
- 12 • Radio mode : Press to switch between Local (reduce receiving sensitivity when searching stations) or Remote (receive weak stations signal) searching.
- Playback mode : Press to enable or disable shuffle play
- 13 Press to display durations of media playback
- 14 Press to go to main menu (subject to media file's setting)
- 15 • Radio mode : Use digit button to select the desired station
- Playback mode : Use the digit button to select track
- 16 Press to manually key in the desired digit
- 17 Press to adjust Audio setting
- 18 Decrease volume
- 19 • Playback mode : Press to skip to next track/chapter. Press and hold to forward current track.
- Radio mode : Press to increase radio frequency manually. Press and hold to increase radio frequency automatically
- 20 Press to select the preferred option
- 21 Press to zoom in/out
- 22 Increase volume
- 23 Press to Slow down video playback
- 24 Press to select Angle (subject to media file's setting)
- 25 Press to go to setting
- 26 Left button
- 27 Press to select subtitle (subject to media file's setting)
- 28 Press to go to title (subject to media file's setting)
- 29 Mute
- 30 Pause/play

## GENERAL

Power supply .....	10.8~16V DC
Current consumption .....	max. 8 A
Maximum power output .....	4 x 45W channels (max)
Dimension (WxDxH) .....	160 x 178 x 50mm
Weight .....	1.15kg
Operation temperature .....	-20° ~ 60°

## FM Stereo Radio

Frequency range .....	87.7 - 108MHz
Preset memory stations .....	18

## AM/MW Radio

Frequency range .....	522 - 1620 MHz
Preset memory stations .....	12

## Audio Specification

Frequency response .....	?????
--------------------------	-------

## Input

USB 2.0 / microSD .....	Audio : MP3/WAV/WMA Video : DIVX/MP4/MPG Image : JPEG, JPG
-------------------------	--

Aux-in .....	3.5mm jack
--------------	------------

## Scope of Delivery

The scope of delivery includes:

 
- Car sound system
- Operating / installation instructions
- Remote control (include battery)
- Connecting cable
- Support frame
- Installation keys
- Trim ring
- Mounting bar

## TROUBLESHOOTING

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
Unable to start up	The car key is not inserted into the ignition; ignition is off	Insert the car key and turn on the ignition.
	Power Cable is not inserted into the main body.	Insert the power cable.
	Burnt power fuse .	Replace it with a new fuse.
	Drained car battery.	Charge or replace the car battery.
No sound	Audio cables are not properly connected to the unit.	Ensure proper connection of the audio cables.
	Mute setting is on.	Unmute the volume.
	Low volume.	Adjust the volume.
	No sound from front, rear, left & right speakers due to Fade-Balance settings.	Select Equalizer from Home Page to adjust setting.
Dim screen or black-&-white screen while playing video	Brightness, contrast ratio and color values are excessively adjusted.	Ensure brightness, color and contrast ratio values are in normal range.
Slow in SD card reading	The pixel of the picture file exceeds this system's capacity. SD card may contain corrupted files or virus.	Replace it with a new audio/video SD card with compatible file formats.
No rear-view reverse image	The rear camera is not appropriately connected with power supply.	Examine the camera's power supply connectivity.
	Camera's signal line not plugged in.	Insert the camera's signal line into the interface port of this unit.
Unable to search radio stations	Radio's antenna is not well inserted.	Ensure radio antenna is properly installed.
Unable to play the Disc	The Disc is not inserted properly.	Re-insert the Disc and ensure orientation is correct.
	The Disc is scratched, distorted or stained.	Replace it with a functioning disc.
	Unable to read files.	Ensure media files are supported by this unit.

# WIRING DIAGRAM

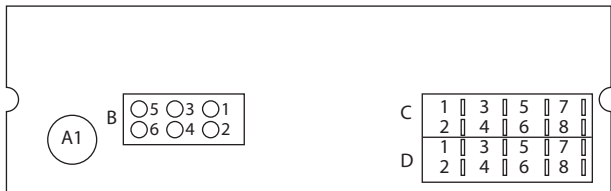

No.	Wire	A
1	Radio antenna	

No.	Wire	B
1	OUT	L
2	OUT	R
3	RCA	L
4	RCA	R
5	OUT	V
6	OUT	V

No.	C
1	REAR RIGHT +
2	REAR RIGHT -
3	FRONT RIGHT +
4	FRONT RIGHT -
5	FRONT LEFT +
6	FRONT LEFT -
7	FRONT LEFT +
8	REAR LEFT -

No.	Wire	D
1	-	-
2	-	-
3	-	-
4	YELLOW	B+
5	BLUE	ANT
6	ORANGE	ILL
7	RED	ACC
8	BLACK	GND

# INSTALLATION INSTRUCTION

## SAFETY

 
 
 
 
- Assign a mounting location that will not obstruct driver in any circumstances. Or cause injuries to drivers and passengers in case emergency brake or accidents.
- Ensure all wires are connected properly, and that the unit is functioning well before fitting the unit into the mount.
- Any unauthorized installation and modification may cause malfunction to the unit. Always use the parts that are included with the units only.

## CAUTION

- Disconnect the negative terminal of the battery (Refer to vehicle manufacturer's safety instructions). Be wary to not damage vehicle components when drilling holes.
- Make sure you do not damage vehicle components when drilling any holes.
- The cross sections of the positive and negative cables must not be less than 1.5 mm<sup>2</sup>.
- Do not connect the vehicle's plug connectors to the radio!
- Your vehicle may differ from the description provided here. Blaupunkt is not liable in case any damage caused by incorrect installation or connection.
- Please contact Blaupunkt dealers or vehicle's manufacturer if information provided here does not fit your specific installation requirement.

**When installing amplifier, first connect the device ground connections before connecting the plugs for the line-out jacks. Ground connection of external devices may not be connected to ground of car sound system (housing).**


## Supplied mounting hardware

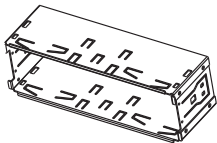




# INSTALLATION INSTRUCTION



 
1.

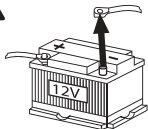

 
2.

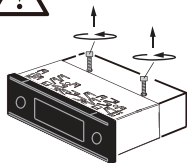

   3.




 4.

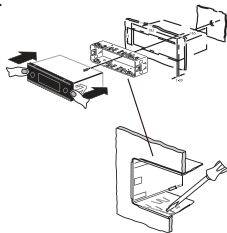


## DISMANTLE INSTRUCTION

 
1.

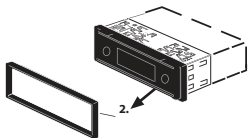

 2.

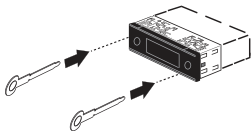

 3.

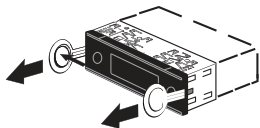

4.

