



User's Guide

Mobile phone BS 02



Enjoy it.

Contents

General Information	1
1. Safety	1
2. Product specifications	5
3. About the keys	6
4. Getting Started.....	8
4.1. <i>Insert a SIM card</i>	8
4.2. <i>Insert a memory card</i>	9
4.3. <i>Insert battery</i>	9
4.4. <i>Remove the battery</i>	9
4.5. <i>Charging the battery</i>	10
4.6. <i>Security settings</i>	10
5. Use this unit	11
5.1. <i>Power On/Off</i>	11
5.2. <i>Make a call</i>	12
5.3. <i>Receiving Calls</i>	13
5.4. <i>Emergency call</i>	13
5.5. <i>Functions available during a call</i>	14
6. Main menu	15
6.1. <i>Messaging</i>	15
6.2. <i>Call</i>	17

6.3. <i>Phonebook</i>	20
6.4. <i>Camera</i>	21
6.5. <i>Multimedia</i>	22
6.6. <i>Organizer</i>	25
6.7. <i>File Manager</i>	27
6.8. <i>Settings</i>	27
7. Target Keys	31
8. Maintaining the battery.....	32
9. Declaration of Conformity	32

General Information

Thank you for purchasing the product.

Our mobile phone meets the GSM network standards and the most stringent European standards.

This device can be used on various international networks, depending on the roaming rules of your service provider. To use the device, GSM service is required, provided by your service provider for a fee.

Many features of the device depend on the services provided by the network service provider.

For more information, please contact your service provider.

The user manual has been manufactured by the manufacturer and is not responsible for any printing, typing errors or changes, and may not be warranted to change the device without prior notice.

Copyrights, trademarks and copyrights mentioned in this document are the property of the current owner, copyrighted or partially copyrighted material is strictly prohibited without the prior permission of the holder.

We recommend that you read this guide carefully before using your device to use your device under the best conditions.

1. Safety

Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.

The owner of the device is responsible for the use of this appliance. Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

Never attempt to disassemble the appliance. Your device may be restricted by security rules to protect users and their environment.

The appliance is not waterproof. Never use your appliance in a humid, damp place (bathroom, swimming pool, etc.). Protect yourself from moisture and moisture.

Do not expose the unit to extreme temperatures (below -10 °C and above 55 °C).

Physical and chemical effects caused by the charger may cause the device to warm up during charging. Your device automatically protects the battery in extreme temperature conditions.

Do not leave the appliance near children (small removable parts may be accidentally swallowed).

Use the charger

If the power cord is damaged, it must be repaired by the manufacturer, its customer service center or by a qualified repair technician to avoid potential hazards. The charger should not be used for limited physical, sensory and mental ability, including children. Use only the charger recommended by the manufacturer. Any other charger may be hazardous and may result in loss of warranty. The mains voltage must be exactly the same as on the charger label.

Airplane

When traveling via airplane, your device must be switched off

whenever the crew or warning signals are instructed to do so. Using a mobile phone may be dangerous to the operation of the aircraft and may interfere with network communication. Use of the device despite the ban may have legal consequences.

Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

Electronic devices

To avoid demagnetisation, do not leave your device for a long time close to electronic devices.

Electrical medical devices

Your phone is a radio transmitter that can interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, and so on. We recommend that you keep a distance of at least 15 cm between the implant and the device, never wear your phone in the breast pocket. Follow the instructions of the manufacturer of the medical device. If you have a medical implant and have any other questions about using mobile or wireless devices, ask your doctor.

Use in hospitals

Hospitals and other healthcare facilities can use devices that are particularly sensitive to RF signals. Switch off your phone if prohibited signals are instructed to do so, or hospital staff ask for it.

Road safety

Observe the local laws and regulations regarding smartphone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; If the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

Use environment

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

Connect to another device

Do not connect an incompatible device. The COM port function is only used by the manufacturer and the service provider.

2. Product specifications

Power Supply Features:

- Input: (AC), 100-240 V- 50/60 Hz – 0.1 A
- Output: (DC), 5 V- 500 mA

Battery Type and Voltage:

- Li-ion battery, 3.7 V, 1000 mAh

Network type:






- GSM 900/1800 MHz




SAR values:

- 0.731 W/Kg (Head)
- 0.626 W/Kg (Body)

Note: Actual operating conditions depend on local conditions, network environment, and user habits.

3. About the keys

Buttons function	
	<p>Right softkey</p> <p>In standby mode, enter Names.</p> <p>In Menu mode: to return to the home screen.</p>
	<p>Left softkey</p> <p>In standby mode: enter the Main menu and select "OK" button in other menus</p>
	<p>Call (Dial) button</p> <p>Dialing and Receiving calls.</p> <p>In Idle mode, open the Call list</p>
	<p>Call End Button</p> <p>Press and hold to turn on/off the phone.</p>
	<p>Arrow keys (scroll in the menu) In standby mode, various functions can be set in the directions.</p>

	<p>Turning the flashlight on and off.</p>
	<p>SOS. In emergency, by pressing this button, alarms the previously set contacts for this function.</p>
	<p>Increase and decrease the volume during calls</p>

0-9 alphanumeric keypad: Press the corresponding keys to enter numbers when dialing or the characters of the numbers when writing text.

*** (Star) button:** in standby mode press and hold * to display the international prefix '+'.

(Dual Cross) button: in standby mode, press and hold to activate / deactivate Silent mode.



4. Getting Started

4.1. Insert a SIM card

To use your phone, you need to insert a valid SIM card to connect to the GSM network.

To avoid missing or damaged the contents of the SIM card, please DO NOT hold the metal part of the SIM card with your hands free and keep it away from electromagnetic devices. If the SIM card is damaged, it can not be connected to the GSM network. Before inserting or removing the SIM card, make sure that the device is turned off and removed from the back

of the device.

Note: Locate the SIM card slot on the back of the device and in the direction of the signal, with the collisions slide the card.

4.2. Insert a memory card

The memory card is not part of the basic package, but the memory of the device can be expanded with an SD card. Please make sure that the memory card is inserted correctly before use.

Note that the device may shake, the memory card may slide out of the slot, so please do not bend it, scratch the memory card or expose it to static electricity or dust, do not immerse it in water. Place the memory card in the slot on the back of the machine, with a chip down, as shown on the device.

Please be careful when using a memory card, especially when it is removed. Some memory cards must be formatted with a computer before use.

4.3. Insert battery

1. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.
2. Put back the back cover.

4.4. Remove the battery

To remove the battery, turn off the device, remove the cover, and then remove the battery at the top.

Note:

Please remove the battery when it is switched off, as it may

cause abnormal operation when the skin is switched on.

4.5. Charging the battery

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

1. If you use the battery at a persistently low charge, it may adversely affect the battery life and quality.
2. Use only the charger approved by the manufacturer for proper operation.
3. Do not remove the battery during charging.
4. Fill the unit for at least 4 hours before first use. This can increase the efficiency of the multiple charge and discharge cycles.

4.6. Security settings

PIN code

The PIN code protects the SIM card from an unauthorized user. The PIN is provided by a network service provider, along with a SIM card. Carefully enter a PIN code, after 3 incorrect attempts a SIM card will be locked and an unlock PUK code

will be entered. Please contact your service provider for more information.

PUK code

The PUK code is required to unblock the PIN code. The PUK (Personal Unblocking Code) code is provided by the network service provider along with the SIM card. Keep your PUK code in a safe place, do not discard it. If you have lost it, contact your network service provider.

If the SIM card is locked, the device asks for a PUK code. You have 10 attempts to enter the correct PUK code, after the incorrect code 10, your SIM card may be permanently locked.

Phone password

The phone password can be a 4-8-digit code that protects your device from unauthorized use.

The factory default password is "0000". When the feature is active, the phone asks for this code every time you turn it on. To protect your privacy, change the default password as soon as possible (Menu> Settings> Security Settings> Phone Security> Password Change). Set a password you can easily remember.

5. Use this unit

5.1. Power On/Off

Press and hold the End / On-Off button to turn the unit on or off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your readiness and make sure the SIM card is inserted correctly.

2. If you insert the SIM card into the device, the PIN request

and the phone password are active, the device prompts you for the password and PIN code and switches to standby mode. After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone

5.2. Make a call

5.2.1 Starting a domestic call

In Idle mode, press the number keys to enter the number you want to call, press the right soft key to clear the wrong numbers, press the left soft key (Options), then Call or the dial key to start the call if the specified number is correct.

5.2.2 Calling Linear Numbers

Some fixed line numbers can not be called without the corresponding extension. To enter a telephone center or trunk, press and hold the [*] key until "P / W" appears on the display. Then dial the extension.

5.2.3 Starting an international call

To make an international call, press and hold the [*] key until "+" international call sign appears on the display.

After entering the country call, enter the area code and then the phone number.

You can make an international call as follows: "+" Sign, country calling- full phone number dialing button.

5.3. Receiving Calls

When you have an incoming call, your device will respond properly if your service provider supports the number display, then the caller or caller name appears on the display (depending on whether you have saved it in the phone book).

1. Press the dial key or the left soft key and answer [Answer] to the incoming call.
2. If any button responds to the function, [Settings / Call Settings / Advanced Settings / Answer Mode / Anykey], you can answer any call using any key except the Right softkey and the End / Off button.
3. When the headset is connected to the unit and [Auto] is activated [Settings / Call settings / Advanced settings / Answering mode / Automatic receiving in headset mode], incoming calls are automatically received by your phone after 5 seconds of vibration or ringing.
4. If you do not want to answer the call, press the End / Off button to reject the call.

The End / Off button can also be used to disconnect the call.

5. During a call, you can use the volume keys on the side of the machine to reduce or increase the loudspeaker volume.
6. You can start an emergency call without a SIM card. Different networks may use different emergency numbers, so please contact your network service provider.

5.4. Emergency call

You can immediately make an emergency call without a SIM card. Different networks can use different emergency

numbers, so please contact your network operator.

5.5. Functions available during a call

Some operations and services are available during an active call. Many of these depend on network support, please check with your network service provider for these options.

Press the right soft key to activate the loudspeaker during an active call; Similarly, you can reset the call to the handset.

Press the left soft key [Options] to access the call during the active call in the menu, these are the following (some functions can only be used under special conditions):

Hold / Continue: Hold an active call or keep it from hold.

End call: Diverts the current call.

Contacts: Displays the search, add contacts, and other phonebook functions.

Call list: view call history.

Messages: You can enter the messages menu.

Recorder: records the ongoing conversation after activating this option. Use an SD card.

Mute: You can mute your device's microphone when you need to make a conversation while you are on the call so that someone on the other side of the line does not hear it.

Volume: Use the volume keys on the side of the device to control the volume of the call.

Swap: * You can exchange the held and active calls.

Conference *: Combine calls.

Note: The menu items marked with [*] only work under

special conditions. Such as: "Swap", which can only be achieved if one of the calls is held on the other active. To access the conference call, you need a service that you can activate with your network operator.

6. Main menu

6.1. Messaging

Message service is a network-dependent service that allows you to send and receive SMS. For more information, contact your network provider.

6.1.1 Write a message

In Menu mode, select Messages> Write message.

Note: To send the SMS, you must have the correct message center number from your network service provider. You can check and change the message center in Menu> Messaging> SMS settings> SIM> Profile>SMSC address settings.

While writing a message, press # to switch between input modes.

Press the left soft key [Options] during message editing to access the following functions:

Send to: You can specify the recipient of the message manually or select it from Names.

Input mode: Select the correct input method.

Insert a template: insert a pre-written SMS

Special: Select this point if you insert a number and name into the message.

Save: Save a message between drafts.

2. When the Sent message save function is activated [SMS settings / Save sent SMS], the messages that have been

successfully sent are automatically saved in the Sent items folder. If the feature is not activated, the sent messages will not be saved.

6.1.2 Incoming messages

You can store received messages on your device or on the SIM card and access it.

When you receive a message, a beep or vibration (as previously configured in the menu) ([Settings / User Profiles / Options / Personalization / Message]) will alert you to this or a graphic will appear on the display. Press the left soft key [View] to view the message, and the right soft key to return to the SMS menu to read other incoming messages.

If the SMS memory is full, you will see a "Memory full" indicator on the display and the SMS icon flashes. Before you can receive a message, delete some of the older ones. If the size of the new message exceeds the capacity of incoming messages, the information may be lost or incomplete.

In the message list, press the left soft key [View] to view the message. Pressing the left soft key [Options] repeatedly lets you choose:

- **Answer:** You can reply directly to the message.
- **Call sender:** Call the sender directly.
- **Forward:** Forward a message to another recipient.
- **Delete:** Deletes the message
- **Special:**
 - Use number: If the message contains a number, you can call or save it to the phonebook (Names).
 - Copy to SIM / Phone: Copy the message to the SIM card / phone (depending on the original storage).
 - Move to SIM / Phone: Move the message to SIM / Phone (will be deleted from the original storage)

location).

6.1.3 Drafts

You can view unfinished messages in this folder.

6.1.4 Outgoing messages

When [Save and send] is activated, unanswered messages are saved in this folder.

In the messages list, press the View soft key (left soft key) to read the selected message.

6.1.5 Sent messages

If the message is sent, the sent message is saved in the Sent Items folder.

6.1.6 SMS settings

You can modify and save SMS service parameters on your SIM card: SIM menu item:

- Profile name: profile name, SMSC address.
- Validity
- Handwritten: When this feature is on, a notification is received when the recipient has received the message.
- Response path
- Voicemail server

To validate the changes, press the left soft key [Save] or Options> Save.

To save outgoing SMSs, you can activate the SMS settings / Sent SMS save / On option. In SMS settings, you can save messages (Preferred storage) to your device or SIM card, or check SMS memory status.

6.2. Call

6.2.1 Call list

The machine logs missed calls, dialed calls, received calls, and their dates. You can only log calls if these features are supported by the network.

You can access the call log in standby mode by pressing the Dial key or Menu> Call list.

- Missed / Dialed / Received / All Calls

Displays the list of Missed / Dialed / Received / All Calls

- Delete call lists

Deletes the list of Missed / Dialed / Received / All Calls.

To call a selected phone number, press the Dial button once in the call log list. To view the details of the call, press the left soft key (Options) to access the following functions:

- View: View the details of the call.
- Call: You can make another call to that number.
- Send SMS: Send a text message to that number.
- Save to contacts: saves that number in the phone book (only this option is displayed for unsaved phone numbers).
- Add to Blacklist: Adds the selected number to the blacklist
- Editing Before Dialing: You can edit the number before dialing.
- Delete: Deletes the call details you have.

6.2.2 Call settings

In Menu / Preferences You can choose the following options:

- **Call Waiting** (Depends on network support): Turn on or off or answer the Call Waiting status.

When the phone is switched on, an alert is heard during a call, if it is called by another person, and the display shows the caller's number or name (depending on whether you have saved it in the phonebook).

- **Call divert** (depends on network support): Divert calls divert incoming voice calls to voicemail or other phone numbers, depending on the setting. The redirection may be

unconditional [All voice divert redirection] or conditional (redirect if not available; redirection if no response; redirection if busy). Use the up / down arrows to select the appropriate divert type from the list, press the OK button or the Left soft key [OK] to select one of the following options:

- On: Switches the incoming call to a new number or Voicemail (by type):
 - For a new number: Use the up / down navigation key to select this line, then use the left soft key or OK to enter it. Enter the full phone number to which you want to divert incoming calls.
 - To voicemail: If you have a voicemail, pressing the OK or Left soft key [OK] will cause the conditional or unconditional redirection to the voicemail if you have previously set your voicemail number in Menu> Messaging> SMS Settings> Voice Mail Server.
- **Special settings:**
- Blacklist: You can add numbers to the blacklist that you will not be able to receive while you are in the list.
 - Auto Call Recorder: Record the call.
 - Automatic redialing: When the function is active and the called party is busy, the machine automatically attempts to call again after a while.
 - Call time display
 - Call time reminder: indicates a preset time (or time interval) when the phone is ringing during a call.
 - Response Mode: You can set whether or not to receive the call or headset mode with any key.

Caller ID: You can set whether your calling number is visible to the called party (Send ID) or not (Hide ID).

6.2.3 Speed Dialing

You can set frequently dialed numbers to the numeric keys on your machine, so you can make calls to these numbers at the touch of a button. To set up speed dial, go to Menu> Settings> Speed Dial. In the Status menu, turn on the function by pressing OK (left soft key), then selecting On. In the Set Number menu, set a number for the different (2-9) keys. Key 1 dial the voicemail number (if previously set).

6.3. Phonebook

In Idle mode, use the right soft key to enter Names or to access Menu> Contacts. You can store and edit frequently-dialed contacts in the phonebook. You can save the numbers and names you frequently use to the SIM card and the device too. The number of contacts that can be stored on the SIM card depends on the card's capacity. You can store up to 200 contacts in phone memory. When you enter the phonebook, you can view all the contacts (stored on the SIM card and on your device). Various icons indicate which contact is saved for which storage. You can search for that contact by entering the first letter of the contact. After searching for a contact, you can dial the number by pressing the Dial button and press the End call button to disconnect the line.

Add new contact

In Standby mode, enter the phone number and select (left) Options> Save to Phonebook.

Select storage space (SIM or Phone) to save the phone number.

Enter contact details: name, phone number.

To save, press the Options (left) soft key and select Save.

Press Options (left soft key) to select one of the following options:

- **View:** You can view the details of that contact.
- **Send SMS:** Send a text message to the selected contact's phone number.
- **Call:** Call the selected phone number.
- **Edit:** Edit the selected contact.
- **Delete:** Deletes the selected connection.
- **Copy:** You can copy the selected connection from the device to the SIM card and vice versa.
- **Move:** Move the selected contact from the device to the SIM card and vice versa.
- **Add to blacklist**
- **Select more:** Tick the selected contacts and send them to SMS or delete the marked ones.
- **Photo contact:** You can set up a picture for the contact.
- **Phonebook settings**

Preferred storage: You can select whether the phone or SIM card (or both) should be the default save location for new contacts.

Extra Phone Numbers: You can change the owner's phone number and set a fixed call (if the network service provider supports the feature).

Memory status: view the number of contacts stored on the device and the SIM card, and how many contacts can be stored. The storage capacity of the SIM card may vary by card type.

6.4. Camera

Your device has a camera for taking photos. To store images, you need a memory card. Go to Menu> Camera. To take a

photo, press 0.

In Photo Preview mode, you can choose from the following options by pressing Options (left soft key) in the popup window:

- **Photos:** Opens saved photos.
- **Camera Settings:** Use the Up / Down Navigation Keys to move between Shutter Sound, Anti-Flicker, Scene Mode, White Balance, Self-timer, Continuous Shutter Functions. Use the 4 and 6 buttons to scroll through the setting options. To save the changes, press Save (left soft key).
- **Image Settings:** In this menu, you can adjust the image size and picture quality.

Attention! To save the images, you need a memory card.

6.5. Multimedia

6.5.1 Gallery

In this menu, you can view the images saved on the memory card. Press OK in the selected image, then Options (left soft key) to access the following functions.

View: view the selected image.

View style: Choose from matrix and list view.

Send: Send selected image via bluetooth.

Use as: set photos as wallpaper.

Rename: You can change the name of the image.

Delete: Deletes the current image.

Select more: Delete, copy, and send via bluetooth.

Mass Storage: displays the list of images on the memory card.

Image information: Here you can see the details of the picture, such as: resolution, size, creation time.

6.5.2 Video recorder

Insert a memory card to make a video recording. Go to Menu> Multimedia> Video recorder. To start recording, press 5. You can pause the recording by pressing button 5 again. To stop, press the right soft key.

By pressing the options (left soft key), the following options are available:

- Camcorder Settings: Press the 4-6 buttons to set the flip settings.
- Video settings: In this menu, you can adjust the video quality.
- Mass Storage: The default storage is the memory card.
- Reset default settings: reset parameters to default.

6.5.3 Video player

This menu item allows you to play video clips stored on a memory card.

Press Options (left soft key) to access the following functions on the selected video:

Playback: Plays the video, press 5 to start playback, then press this button to pause. Press the 4 and 6 buttons to move between the videos in the playback view. For full screen play, press the up navigation key, the down navigation button to stop.

Send: You can send the video via Bluetooth.

Rename: You can change the name of the video.

Delete: Deletes the selected video.

6.5.4 Audio Player

On the player interface, press the 5 button to select / play / pause the 4 and 6 buttons to move to the previous / next / audio file. You can adjust the volume using the volume key on the side of the device.

Using the left soft key [List] you can enter the playlist by

pressing the left soft key [Options] again to access the player program: play, details, update the list, settings.

In Settings, you can set repeating, mixing numbers, playing backgrounds.

6.5.5 Voice recorder

You can make voice recordings with the voice recorder.

Select Options (Left soft key)> "New recording", press the left soft key to pause the recording, stop the recording with the right softkey, the recording will be saved and a warning message will appear on the display.

After recording, you can access the following options by pressing the Left soft key [Options].

- New Recording: Create a new recording.
- List: To view the list of recordings, use the Options (left soft key) to select from the following options:
 - o Playback: Play back the current recording
 - o Resume: resume the selected recording.
 - o Rename: You can change the recording name.
 - o Delete: Deletes the selected recording.
 - o Send: You can send the video via Bluetooth.
- Settings: Adjust the recording quality.

6.5.6 FM Radio

In Menu mode, go to Multimedia> FM radio. To connect to a radio, connect the headset, which acts as an antenna. If you do not connect a headset to your device, you may not be able to receive radio reception or in very poor quality.

In the FM radio application, press the 5 button to play / pause, the 2 and 8 buttons to move between the channels. Use the buttons on the side of the device to adjust the volume.

Note: 1. If the Playback in background feature is active, you

can also listen to the radio in standby or menu mode. You can also listen to the radio with handsfree, but do not remove the headset.

2. The quality of radio broadcasting is influenced by the environment. You can improve the quality by manual search and by placing your device closer to the window.

Press Options (left soft key) to enter channel list, manually enter frequency (manual input) or perform automatic channel search.

6.6. Organizer

6.6.1 Calendar

To open Calendar- in menu mode- go to Organizer> Calendar. The calendar indicates the current month, highlighting the current date with color. Press the left soft key [Options] to choose from: Go to date, Go to Today, Go to Week view, Week start.

6.6.2 Alarm

In Menu mode, go to the Organizer> Alarm menu, where you can set 5 different alarms. The wake-up function also works when the device is switched off.

When the alarm clock sounds, press the Left soft key or the End call key to stop; press the Right soft key to the snooze.

To change the alarm details, select one from the list and press the left soft key [Edit]:

1. Activate / deactivate the alarm by selecting the status (press 4 and 6 to scroll through the options). In the alarm clock list, the active alarms are indicated by a check mark.

2. To change the alarm time (Time), scroll with the navigation keys (up and down) and use the numeric keypad to enter the

alarm / alarm time.

3. You can select Snooze duration (minutes) using the 4 and 6 buttons.

4. To set Repeat, press Options (left soft key)> Select and then select Alarm, Daily, or Pre-set Day (Custom) to be active. With Options> Save, save the setting.

5. Select the alarm tone to change the alarm sound. Press the left soft key [Options> Select] to display the list of ringtones, press the down / up navigation buttons to scroll through the list and listen to the alarm tone by pressing the left soft key [OK] to activate the selected sound.

To save the alarm parameters, press Save (left soft key).

6.6.3 Flashlight

To turn the flashlight on and off using the "Flashlight" button on the side of the unit, slide the button upwards to turn it on and down to turn it off.

6.6.4 Calculator

In Menu mode, go to Organizer> Calculator to open the calculator. The calculator in the machine can perform the 4 basic operations.

6.6.5 Bluetooth

In Menu mode, go to Organizer> Bluetooth to open bluetooth. You can make the following settings in the menu item:

- Bluetooth: Turns the function on and off using the left soft key.
- Visibility: When the feature is active, your device is visible to other bluetooth devices.
- My device: Find new devices and show paired devices.
- Change Device Name: You can change the device name for other bluetooth devices.

- **Advanced:** You can set the audio path and select the mass storage (you need a memory card to store attention files).

6.7. File Manager

In Menu mode, go to Organizer> File Manager. You can view all or the free storage of the memory card (if it is connected to a memory card). To view the files, select the device or memory card with the navigation keys, then go to the Options (left soft key) menu and select Open.

New Folder: Create a new directory on the current drive.

Rename: You can change the name of the file or directory depending on which one is selected.

Delete: Deletes the selected library or file, depending on which one you chose.

Within the Options menu, you can format the current drive by selecting Formatting.

Formatting the selected drive, deleting all the files and folders found on that drive. Attention! The operation can not be reversed, the data is permanently deleted.

6.8. Settings

6.8.1 Setting the Profile

Turn silent mode on or off

To activate the Silent mode, press and hold #. If you press and hold # again, you can activate the General Mode (or the mode that was set when you activated Silent Mode).

In Menu mode, go to Settings / User Profiles, then select Quiet mode. You can return to the General Profile in the same menu item.

Customize profiles

In Menu mode, go to the Settings / User Profiles menu, and

then select the profile you want to change. There are 5 profiles in the device: General, Silent, Meeting, Headset, Outdoor.

To change the profile, press [Options] and select Personalize. In this menu, you can change the following settings: alert type, ring type, ringing tone and volume of calls and messages, ring volume, keyboard sound, key volume, system alert, intelligent call alert.

In the Restore menu, you can reset the factory defaults for the profile.

Add a ringtone from a memory card

In Menu mode, go to User Profiles> Options> Personalization> Incoming Call, and then select Select from File.

Then, the device enters the File Manager where you can select from the music stored on the memory card (if there is a memory card in the device) by pressing the OK soft key.

6.8.2 Phone settings

- You can change the following in the Date and Time submenu:
 - Reset your home: you can choose the capital of the country where you live.
 - Set date and time: Use the navigation keys to highlight the line you want to set, and then use the numeric keypad to enter the time and date. To save, press Save (left soft key).
 - Enter Format: You can set the time and date format.
 - Update with time zone: When the function is active, time is updated based on the time zone.
- Language: You can select the language you want to use
- Preferred input methods: You can edit your keyboard input method according to your custom.
- Display settings: You can customize the display according to

your taste.

- **Wallpaper:** Choose a wallpaper for your phone from pre-installed wallpapers (System) or from your own files (Custom); this picture is displayed in standby mode.
- **Show date and time:** to set whether the date and time should be displayed on the display in standby mode.
- **Show service provider name:** to set whether the service provider name appears on the standby screen.

· Flying mode

In this menu item, you can turn the flying mode on and off. The flying mode turns off all network functions.

· Various settings:

- **LCD Backlight:** You can set the display backlight time and brightness.

6.8.3 Safety Settings

You can change security settings in this menu so you can not use your device or your SIM card in the appropriate settings.

· SIM Security

To change the SIM card and phone security settings in menu mode, go to Settings> Security Settings. To set the SIM card's settings, select SIM security, then press OK (left soft key). Within the SIM Security menu, you have the following options:

- **PIN lock:** Press the left soft key (On / Off) to activate or deactivate, the current status is indicated as [PIN lock] in the line. Enter the PIN code to activate the SIM PIN. If the PIN request is activated, you must enter a PIN whenever the PIN is requested. For more information, contact your service provider. Note: If the PIN is entered incorrectly three times, the SIM card will be locked, which can be cleared by entering the PUK code. The PUK code is required to unblock the PIN. The PIN and PUK codes can be found in the SIM card package;

otherwise contact your service provider.

- **Change PIN and Change PIN2:** In this menu, you can change the PIN / PIN2 codes, enter the new codes twice twice after entering the old code for which a message appears on the display. The code must consist of 4 to 8 digits. You can only change the PIN code if the PIN request is active.

- **Telephone security**

Press OK to turn the phone lock on or off, the current status is indicated by the [Phone Lock] line.

To activate the phone lock, you must enter the phone password. If this feature is active, the phone password must be entered every time you turn it on.

Note: The default phone password is 0000. Please change this to a unique code as soon as possible. The specified code may consist of 4 to 8 digits.

- **Auto lock**

In this menu, you can deactivate the keypad lock and set how fast it will be on when it is switched on (15 sec, 30 sec, 1 minute, 5 minutes).

6.8.4 Network Settings

Under Settings> Network Settings, you can select automatic (network access automatically) and manual network selection (from the displayed list to the network).

6.8.5 SOS Function Settings

To set the SOS function, go to Menu> Settings> SOS Settings.

- **Status:** activates the function (SOS button on the back of the device).
- **SOS numbers:** dial the numbers listed here by pressing the SOS button or sending an SMS message (if active) to the numbers in the list. The alarm chain lasts until one of the

numbers in the list answers the call. Attention! Do not enter a number where call reception is automatic.

- SOS SMS on / off: Enable and enable SOS SMS function.
- SOS SMS: In this menu item, you can edit the text of an emergency message. At the end of editing, save the message text using Save (left soft key).

To start the SOS alarm, press and hold the SOS button on the back of the machine. To cancel the chain, press again.

6.8.6 Hide menu

In the Menu> Settings> Hide Menu menu, you can hide features from the main menu. Enter the above menu, use the arrow keys to select from the list, then use the left soft key (On) to select the menu item you do not want to see in the main menu, then confirm with the right softkey (Done) and save the setting.

6.8.7 Restoring settings

To reset the settings- in the menu mode- go to Settings> Restore Settings to reset your device settings to factory defaults. Enter the phone password to reset. Selecting [Yes] will reset the device and restart the device. **Attention! This setting can not be undone and deletes all data on the device (such as names, messages, personal settings).**

7. Target Keys

The functions of the navigation key (arrow keys) 2 (up or down) can be assigned functions. Go to Menu> Settings> Target Key. Select the direction you want to set, and then press the Edit (left soft key). Use the navigation key to select the menu item you want to access from the list and press OK

(left soft key).

8. Maintaining the battery

The device has a rechargeable battery when the battery voltage is low, charge it as soon as possible to increase battery life.

When not using the charger, unplug it from the power source. Overcharging shortens battery life. For more than a week, do not leave the phone charging.

Temperature influences battery capacity.

Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 ° C or higher than 45 ° C, do not charge the battery.

Use the battery according to its intended purpose. Do not short-circuit the battery terminals.

Do not use a damaged battery.

If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced.

DO NOT throw the battery into a fire, follow local laws and regulations regarding the disposal of your old battery.

9. Declaration of Conformity

The Blaupunkt BS 02 is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53 / EU and 2011/65 / EU. The Declaration of Conformity is available on our website.



Import: HTM Mobile Ltd.

Address: 1118 Budapest, Dayka Gábor street 3.

For more information on this product, visit our website at www.htmmobile.hu or www.blaupunkt.com.