




# REVERSE CAMERA BC DH01




*Enjoy it.*

Operating and Installation Instructions

# Installation Diagram

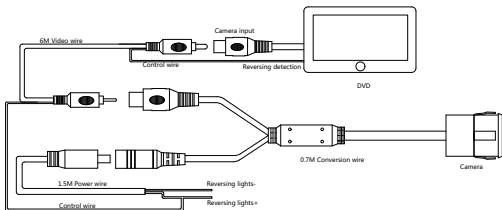

Ground the wire through the exterior body of the vehicle and keep connection intact.

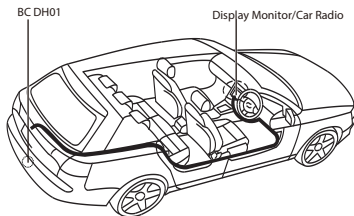

## Attention

- Remove protective film from camera lens before use.
- Take extra precautions when setting up the connection near petrol tank and wires.
- Please connect Red Wire with reverse light. ⊕

## SPECIFICATION

- Power Supply : DC12V±3V
- Current Consumption : 50mA
- Resolution : 600 TVL
- Optical Format : 1/3"
- Image Sensor : CMOS
- Effective Pixels : 1080 x 720
- Lens Angle : 170° (D), 120° (H), 100° (V)
- Electronic Shutter : 1/60
- ~ 1/100000 sec
- White Balance : Auto
- Humidity : up to 95%
- Water Proof : Yes
- Illumination Min. : 0.1 Lux
- TV System : PAL/NTSC
- Operation Temperature : -20°C ~ +70°C
- Storage Temperature : -20°C ~ +70°C

## Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of our products.

 
USA & CANADA : Product not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased as-is. No warranty, express or implied is provided in the U.S. and Canada.

## 1. Installation Locations

### 1.1 At tail light (with metal bracket)




i. Remove one side of the reverse light socket from its housing then remove the bulb from its socket




ii. Connect the reverse light power cable to the camera, screw the housing & camera back into position with a screwdriver

### 1.2 At hatch handle (with metal bracket)

 

 i. Use a screwdriver to remove the original hatch handle



ii. Mount the camera where the original hatch handle used to be

### 1.3 On the car bumper



i. Remove the rotating mount before installation. Drill an access hole for the camera cables

ii. Mount the camera onto the access hole & secure it in position with 3M tape/ screws

Pictures are for illustration purpose only, see actual vehicle for accurate installation location.

## TROUBLESHOOTING

Problem	Solution
Display monitor / car radio does not show reverse view when reversing	Examine if the viewing mode is set to correct reverse view
Display monitor / car radio does not show reverse view even after correcting the view setting	Restart the display monitor / car radio
Reverse view does not show even after restarting the display monitor/ car radio	Examine if the power supplies of the reverse light or the rear car plate light is properly connected
Reverse view does not show even though power supplies of the reverse light or the rear car plate light is properly connected	Examine if the power supply cables of the reverse light or the rear car plate light is damaged. Repair/replace if the cables are damaged

**Blaupunkt India Private Limited**  
**47, Atlanta Society, Nariman Point**  
**Mumbai- 400 021. Maharashtra. India.**  
**[www.blaupunkt.com](http://www.blaupunkt.com)**