

**BLAUPUNKT**

User Manual  
Mobile phone FM03i



*Enjoy it.*

## Contents

General Information .....	1
1. Safety .....	1
2. Product specifications .....	6
3. About the keys .....	7
4. Getting Started.....	9
4.1. Insert a SIM card .....	9
4.2. Insert a memory card.....	9
4.3. Insert battery.....	9
4.4. Remove the battery .....	9
4.5. Charging the battery .....	10
4.6. Maintaining the battery .....	10
5. Power On/Off.....	11
6. Call functions.....	11
6.1. Make a call.....	12
6.2. Receive call .....	12
6.3. Emergency call .....	12
6.4. Conference call.....	13
6.5. Available functions during call.....	13
6.6. Viewing/dialing Missed Calls .....	14
6.7. Dialing a previously dialed number .....	14

6.8. Speed Dial.....	14
7. Main Menu.....	14
8. Phonebook.....	15
9. Messages.....	16
9.1. Write a message.....	16
9.2. Inbox.....	17
9.3. Drafts.....	18
9.4. Outbox.....	18
9.5. Sent messages.....	18
9.6. Message settings.....	18
10. Call logs.....	18
11. Call settings.....	19
11.1. Call divert.....	19
11.2. Call Waiting.....	19
11.3. Advanced settings.....	20
12. Settings.....	20
12.1. Dual SIM Settings.....	20
12.2. Phone settings.....	20
12.3. Network Settings.....	22
12.4. Security settings.....	22
12.5. Connectivity.....	23

12.6. Restore settings.....	23
13. Audio player .....	23
14. Multimedia.....	24
14.1. Image viewer .....	24
14.2. Video recorder .....	24
14.3. Video player.....	24
14.4. Sound recorder .....	24
14.5. FM Radio.....	25
15. Fun & Games.....	26
16. Profiles.....	26
17. File manager .....	27
18. Organizer .....	27
18.1. Alarm clock.....	27
18.2. Torch .....	28
19. Extras.....	28
19.1. Calendar .....	28
19.2. Calculator.....	28
20. Camera .....	28
20.1. Making Photos .....	28
21. Declaration of Conformity.....	29

## General Information

Thank you for purchasing the product.

Our mobile phone meets the GSM network standards and the most stringent European standards.

This device can be used on various international networks, depending on the roaming rules of your service provider. To use the device, GSM service is required, provided by your service provider for a fee.

Many features of the device depend on the services provided by the network service provider.

For more information, please contact your service provider.

The user manual has been manufactured by the manufacturer and is not responsible for any printing, typing errors or changes, and may not be warranted to change the device without prior notice.

Trademarks and copyrights mentioned in this document are the property of the current owner, copyrighted or partially copyrighted material is strictly prohibited without the prior permission of the holder.

We recommend that you read this guide carefully before using your device to use your device under the best conditions.

## 1. Safety

### Safety regulations

Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.

The owner of the device is responsible for the use of this appliance. Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

### Airplane

When traveling via airplane, your device must be switched off whenever the crew or warning signals are instructed to do so.

Using a mobile phone may be dangerous to the operation of the aircraft and may interfere with network communication. Use of the device despite the ban may have legal consequences.

### Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

### Electronic devices

To avoid demagnetisation, do not leave your device for a long time close to electronic devices.

### Electrical medical devices

Your phone is a radio transmitter that can interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, and so on. We recommend that you keep a distance of at least 15 cm between the implant and the device, never wear your phone in the breast pocket. Follow the instructions of the manufacturer of the medical device. If you have a medical implant and have any other questions about using mobile or wireless devices, ask your doctor.

### Use in hospitals

Hospitals and other healthcare facilities can use devices that are particularly sensitive to RF signals. Switch off your phone if prohibited signals are instructed to do so, or hospital staff ask for

it.

### Road safety

Observe the local laws and regulations regarding smartphone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; If the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

### Use environment

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

### Note on using this unit

- Do not place the device close to magnetic cards or other magnetic devices. The phone's magnetism can erase the data found on the disc on the card.
- Wired telephone, television, radio may cause interference and may affect the operation of the mobile phone.
- Keep the appliance dry, all moisture may damage the electrical circuits.
- Keep the unit away from extreme temperature conditions.
- Keep the appliance away from places where the temperature can reach 60 ° C, such as dashboard, window

sill, fire, burning cigarette.

- Do not paint the appliance.
- Do not shake the appliance, do not drop it or crush it.
- Do not disassemble or modify the phone as this may damage the phone, which may cause leakage, which interrupts the internal circuits.
- Clean only the phone with a damp or non-static cloth. Do not use alcohol, thinner, benzene or other chemical, scouring agent to clean the appliance.
- The product may become warm during normal use or during charging. Do not leave the phone in a discharged state for a long time as it may cause data loss.
- Metal parts of the device may cause skin irritation.
- Do not put the device in the back pocket if it is damaged, damaging the phone. Do not put the device in the bottom of the bag as it may break.
- If the phone is in vibrating mode, place it in a place where it can not fall off during vibration.
- Do not press the display with a needle or other sharp object, as it may damage the LCD display, because it may cause the loss of warranty.
- Store the device in an appropriate location when not in use. Keep away from children.
- If the device is lost or stolen, contact your network service provider immediately to prevent the SIM card from being used by unauthorized persons. The service provider may ask for the IMEI number of the device that you can find on the battery sticker or by dialing the code \*#06#. Record this

number if you need it in the future.

- To prevent unauthorized use, lock the SIM card or the device, change the passwords if necessary.
- Always switch off the appliance before removing the battery. Otherwise, it may cause data loss.
- When leaving your vehicle, carry the appliance or put it in the glove compartment to prevent theft.
- Keep the device, battery, and charger away from children.

#### Notes on using the battery

- Do not disassemble or modify the battery as this may cause leakage, overheating, or explosion.
- Do not dispose of the battery in a fire as it may cause an explosion. Dispose of the old battery according to local regulations. Do not throw it into household waste.
- Do not short circuit the battery circuits with a needle or other metal object as it may cause leakage, overheating or explosion.
- If the battery liquid goes into the eyes, it may cause blindness. If this happens, do not rub your eyes, but rinse with water and seek medical attention immediately.
- If the battery liquid make contact with the skin, it may cause burns on the skin. Wash your skin with clean water and consult a physician immediately.
- Do not take the battery in your mouth as it may be poisonous.
- Do not continue to use the battery if it finds too hot or has changed its color or shape.
- Keep the battery dry.

- Do not store the battery near fire or other hot places. Store the battery in a cool, well-ventilated area and do not expose it to direct sunlight.
- Do not charge the battery for more than 24 hours.
- The battery can be charged for hundreds of times, but each charge will shorten its life and wear out after a while.
- When replacing a battery, use only a battery approved by the manufacturer. Using an incorrect battery may result the loss of the warranty..

### Qualified service

The product can only be repaired by a qualified person.

### Hearing protection

To avoid hearing loss, do not listen to music or radio for a long time at high volume.

## 2. Product specifications

**The device handles two mini SIM cards.**

### **Power Supply Features:**

- Input: (AC), 100-240V- 50/60Hz – 0,3A
- Output: (DC), 5V – 0.55A – 2.75W

**Battery Type and Voltage:** Li-ion battery 3,7V- 1000mAh

**Network type:** GSM 900/1800MHz

**SAR values:** 0,501W/Kg (Head) – 1,511W/Kg (Body)

Note: Actual operating conditions depend on local conditions, network environment and user habits.

The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an on/off facility.

### 3. About the keys

**1. Left soft key / Right Soft key:** Opens the menu item in the left / right corner of the screen.

**2. Dial key:** dial / answer the call and in standby mode, open the call list.

**3. End / Off Power Button:** Press and hold to turn the power on and off; briefly press it down, reject a call, or quit it from the menu.

**4. Ok key:** press to execute the indicated function. In standby mode, press to open the main menu.

**5. Navigation keys:** Press up / down / left / right directions to scroll through the menu. In standby mode, press the up / down / left / right arrows to access the quick and press OK to execute.

**6. 0-9 alphanumeric keypad:** Press the corresponding keys to enter numbers when dialing or the characters of the numbers when writing text.

In Idle mode: Press and hold "2" to "9" to use the Speed Dial feature (if set in the menu [Phonebook / Options / Phonebook settings / Speed Dial]).

**7. \* (Star) button:** In Menu mode, briefly press to lock the keypad. Press and hold „\*” to display „+” the international developer signal.

**8. # (Dual Cross) button:** in standby mode, press and hold to switch between General, Silent and Meeting mode.



## 4. Getting Started

### 4.1. Insert a SIM card

To use your phone, you need to insert a valid SIM card to connect to the GSM network.

To avoid missing or damaged the contents of the SIM card, please DO NOT hold the metal part of the SIM card with your hands free and keep it away from electromagnetic devices. If the SIM card is damaged, it can not be connected to the GSM network. Before inserting or removing the SIM card, make sure that the device is turned off and the back of the device removed.

Note: Locate the SIM card slot on the back of the device and in the direction of the signal, with the collisions slide the card.

### 4.2. Insert a memory card

The memory card is not part of the basic package, but the memory of the device can be expanded with an SD card. Please make sure that the memory card is inserted correctly before use.

Note that the device may shakes, the memory card may slide out of the slot, so please do not bend it, scratch the memory card or expose it to static electricity or dust, do not immerse it in water. Place the memory card in the slot on the back of the phone, withits chip facing down, as shown on the device.

Please be careful when using a memory card, especially when it is removed. Some memory cards must be formatted with a computer before use.

### 4.3. Insert battery

1. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.

2. Put back the back cover.

### 4.4. Remove the battery

To remove the battery, turn off the device, remove the cover and

then remove the battery at the top.

Note:

Please remove the battery when it is switched off, as it may cause abnormal operation when the device is switched on.

#### **4.5. Charging the battery**

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

1. If you use the battery at a persistently low charge, it may adversely affect the battery life and quality.
2. Use only the charger approved by the manufacturer for proper operation.
3. Do not remove the battery during charging.
4. Fill the unit for at least 4 hours before first use. This can increase the efficiency of the multiple charge and discharge cycles.

#### **4.6. Maintaining the battery**

The device has a rechargeable battery. When not using the charger, disconnect it from the power source. For more than a week, do not leave the phone charging. Temperature influences battery capacity. Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 °C or higher than 45 °C, do not charge the battery. Use the battery according to its intended purpose. Do not short-circuit the battery terminals.

Do not use a damaged battery. If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced. DO NOT throw the battery into fire, follow local laws and regulations regarding the disposal of the spent battery.

## 5. Power On/Off

Power on your phone: Hold down the End / On-Off button until the telephone powers on.

Power off your phone: Hold down the End / On-Off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your device and make sure the SIM card is inserted correctly.

2. If you insert the SIM card into the device, the PIN request and the phone password are active, the device prompts you for the password and PIN code and switches to standby mode.

After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone.

## 6. Call functions

If you have completed the steps in the previous chapter, the machine is ready to make and receive calls. For more information about call origination and basic call functions, see this chapter.

Note:

If you are using a headset, gently insert and unplug the jack plug to avoid possible injury.

## 6.1. Make a call

When the network service provider name appears on the display, the phone is ready to make and receive calls.

In Standby mode, press the number keys to enter the number you want to call, press the right soft key to clear the wrong numbers, press the left soft key (Options/Call) or the dial key to start the call if the specified number is correct.

To enter an international phone number format, press and hold the [\*] key until „+“ international call sign appears on the display.

## 6.2. Receive call

When an incoming call is alerted to your device if your service provider supports the number display, the display shows the caller's number or the caller's name (depending on whether you have saved it in the phone book).

1. Press the dial key or the left soft key and answer [Answer] to the incoming call.

2. If **Any key** responds function is active, [Menu / Call center / Call Settings / Advanced Settings / Answer Mode / Anykey], you can answer any call using any key except the Right softkey and the End / Off button.

3. When the headset is connected to the unit and [Headset] is activated [Menu / Call center / Call Settings / Advanced Settings / Answer Mode / Auto answer when headset mode], incoming calls will be automatically received by your phone after 5 seconds of vibration or ringing.

4. If you do not want to answer the call, press the End / Off button to reject the call.

The End / Off button can also be used to disconnect the call.

5. During a call, press the down / up navigation keys to reduce or increase the loudspeaker volume.

## 6.3. Emergency call

You can immediately make an emergency call without a SIM card.

Different networks can use different emergency numbers, so please contact your network operator.

#### **6.4. Conference call**

If supported by the network, multiple party calls can be made. In Idle mode, enter the phone number in the area code, in international format.

To dial, press the call key.

To add a new call, enter the second phone number and dial the desired number. You can also make a new call from the contacts stored in the phone book; during this active call, press Options, select Phonebook, locate the contact you want to dial, and then press the call key. When the call is back up, press Options and select Conference. You can repeat the above steps to add more calls.

#### **6.5. Available functions during call**

Some operations and services are available during an active call. Many of these depend on network support, please check with your network service provider for these options.

Press the right soft key to activate Handsfree during an active call; Similarly, you can reset the call to the handset.

Press the left soft key [Options] to access the services that can be used during the active call, which are the following (some features can only be used under special conditions):

**Hold:** You can hold an active call or keep it from hold.

**Retrieve:** It changes back the held call to active.

**End single call:** Aborts the active voice call.

**End all call:** Aborts all call

**Phonebook:** Open Phonebook during a call

**Call history:** view call history.

**Messaging:** You can enter the Messages menu.

**Mute:** You can mute your device's microphone when you need to

make a conversation while you are on the call so that someone on the other side of the line does not hear it.

**Volume:** Use the up and down navigation keys to control the volume of the call.

**\*Swap:** You can exchange the held and active calls.

**\*Conference:** Combine calls.

**\*Split:** Separates members of the conference call

**Note:** The menu items marked with **[\*]** only work under special conditions. Such as: "Swap", which can only be achieved if one of the calls is held on the other active. To access the conference call, you need a service that you can activate with your network operator.

## 6.6. Viewing/dialing Missed Calls

The display shows missed calls. To dial the missed call, press (Left) <View> and then press the call launcher or Options> Call to dial the number.

## 6.7. Dialing a previously dialed number

Press the call key in standby mode to display the most recently dialed numbers. Select the phone number you want to dial and then press the call key again or Options > Call.

## 6.8. Speed Dial

Speed dialing allows you to dial a phone number by holding down a key on your mobile phone keypad.

You can edit the service preferences (list of your favorite contacts) in Phonebook / (Options) Phonebook settings / Speed Dial.

In Idle mode, press and hold the keys "2" to "9" to use the Speed Dial feature.

## 7. Main Menu

In Idle mode, press the left soft key to enter the Main Menu. Within the Main Menu, you can access many functions and

actions: Phonebook, Messaging, Call Center, Settings, Audio Player, Multimedia, Fun & Games, Profiles, File manager, Organizer, Extras, Camera.

## 8. Phonebook

In Idle mode, use the right soft key to enter the Phonebook (Names) or access Menu > Phonebook. You can store and edit contacts here.

The number of contacts that can be stored on the SIM card depends on the card's capacity. You can store up to 200 contact cards in phone memory. When you enter the phonebook, you can view all the contacts (stored on the SIM card and on your device). Various icons indicate which contact is saved for which storage. You can search for that contact by entering the first letter of the contact.

After searching for a contact, you can dial the number by pressing the Dial button and disconnecting the line by pressing the end / Off button.

### Add a new contact

In standby mode, enter the phone number and select (left) Options > Save to Phonebook.

Select where to save the contact (SIM card or phone), enter the phone number name.

To save, press the Options (left) soft key (Done), then also press the Options (left) soft key (Save).

In Phonebook mode: Entering the menu is the first menu item:  
Add new contact

In Phonebook, the left soft key [Options] in the menu item provides the following options:

- **View:** View contact information
- **Send text message:** Send a message to the selected

contact's phone number.

- **Call:** Call the selected phone number.
- **Edit:** Change the contact information
- **Delete:** Deletes the selected contact.
- **Copy:** Copy the selected contact from the device to the SIM card and vice versa.
- **Add to blacklist:** Block inquiries from phone numbers.
- **Mark several:** allows you to select multiple contacts at a time.
- **Phonebook settings:** Other phonebook settings: Speed dial, Extra numbers (set fix contact list with the SIM PIN2 code, what the user can call), Memory status, Copy contacts (between SIM and Phone storages), Move contacts (between SIM and Phone storages), Delete all contacts (from SIM and Phone storages).

## 9. Messages

Message service is a network-dependent service that allows you to send and receive SMS. For more information, contact your network provider.

### 9.1. Write a message

In Menu mode, select Messaging> Write message.

Note: To send the SMS, you must have the correct message center number from your network service provider. You can check and change the message center in Menu> Messaging> Message settings> Text message > SIM1 / SIM2> Profile settings.

While writing a message, press # to switch between input modes. Text messages can consist of up to 612 characters (up to 252 characters for accented characters).

Press the left soft key [Options] during message editing to access the following functions:

- **Send to:** You can specify the recipient of the message

manually or select it from Names.

- **Sending:** After Adding a Recipient (which you can do by entering a direct phone number or from Contacts), you can send the message by selecting <Options> Send.

- **Input method:** You can select the correct input method. (You can also switch between the input modes while writing a message).

- **Writing language:** You can select the language for creating the message. It changes the input method.

- **Advanced:** Add a phone number or Name from the Phonebook.

- **Save:** Save message to Drafts.

## 9.2. Inbox

You can store received messages on your device or on the SIM card and access it.

When you receive a message, a beep or vibration (as previously configured in the menu) will alert you to this, or a graphic will appear on the display. Press the left soft key [View] or OK to view the message, and the right soft key to return to the SMS menu to read other incoming messages.

In the message list, press OK (Middle) to view the message. Press the left soft key [Options] to select from the following options:

- **Reply by SMS:** You can reply directly to the message in plain text form.
- **Reply by MMS:** You can reply directly to the message with a multimedia message.
- **Call sender:** Directly calls the sender of the message.
- **Forward:** Forward a message to another recipient.
- **Delete:** Deletes the message
- **Advanced:** Use the Phone Number / USSD Code specified in the message.

### **9.3. Drafts**

The unfinished, saved (You can see Options / Save Drafts) messages in this folder.

### **9.4. Outbox**

The unsent messages are saved in this folder.

In the message list, press OK (Middle) to view the message.

### **9.5. Sent messages**

If the message is sent, the sent message is saved in the Sent Items folder.

### **9.6. Message settings**

You can see or change the SMS and MMS message service parameters

In the text message menu item you can check or set:

- SIM1 / SIM2 specific settings
- Memory status
- Text message counter
- Save sent messages
- Preferred storage (Phone or SIM)

Multimedia message (MMS) menu item you can set:

- Data account: You can select from the network accounts you have created to use the setting you want to use to send the mms messages.
- Common Settings: Rules for sending / receiving MMS messages.

## **10. Call logs**

In Menu mode, select Call center / Call history to access Missed calls, Dialed calls, Received calls, All calls, Delete call logs.

When you open a call list, you can access the following options:

- View- view the details of a call.

- Call- to call a specific number
- Send text message- Send a text message to the selected phone number.
- Send multimedia message- Send a multimedia message to the selected phone number.
- Save to phonebook- Save phone number to the contact list. It is only visible if the phone number has not been saved yet.
- Add to Blacklist- block phone calls.
- Edit before a call- change the phone number before calling
- Delete- Deletes a specific item from the list

## 11. Call settings

### 11.1. Call divert

To divert a call From Menu mode, go to Menu > Call center > Call settings > SIM1 / SIM2 Call settings > Call divert.

Select the divert type (Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy), then press OK and Activate. Enter the divert number and press <OK> If you want to delete it, please follow the same menupath, but choose the Deactivate option.

To delete all redirects in Menu mode, go to Call center > Call settings > SIM1 / SIM2 Call settings > Call divert and select Cancel all diverts.

### 11.2. Call Waiting

If supported by the network, you can receive a second call (Call Waiting) during a conversation. You can turn on/off the call waiting feature in your device: Menu > Call center > Call settings > SIM1 / SIM2 Call settings > Call waiting (Activate / Deactivate).

Query status in the Call divert and Call waiting menus: you can check here if the service is active or not.

### **11.3. Advanced settings**

In Menu mode, go to Menu > Call center > Call settings > Advanced settings, where you can make the following settings:

#### Blacklist

The Blacklist menu option allows you to disable incoming calls from the numbers you entered. In the Blacklist menu, enter numbers you do not want to receive a call. After editing the number, select Options, then Done. You can activate or deactivate the function in the Reject numbers in blacklist menu item.

#### Answer mode

For a detailed description of the function, see Receive call (6.2).

## **12. Settings**

### **12.1. Dual SIM Settings**

In this menu you can set which SIM cards are used: SIM1 only, SIM2 only, Both.

### **12.2. Phone settings**

#### 12.2.1 Time and date

To set date and time, go to Menu> Settings > Phone settings > Time and date > Set time/date. After setting the correct time and date, press <Save> to finalize it.

This menu option allows you to specify the time and date format as well as the possibility of automatic updating.

#### 12.2.2 Schedule power on/off

You can set the device to turn on or off regularly at a predetermined time.

#### 12.2.3 Language

In Menu mode, go to Settings > Phone settings > Language. The display language can be adjusted separately.

#### 12.2.4 Writing language

Select the font used to enter text.

#### 12.2.5 Display

Customize the display according to your taste.

##### Wallpaper

Choose a wallpaper for your phone from the pre-installed wallpapers (System) or from your own files (User defined); this picture is displayed in standby mode.

##### Power on/off display

Customize the image / animation displayed when the device is turned on / off

##### Screen auto lock

You can enable automatic keylock and you can choose how long to turn on automatically.

##### Show date and time

You can enable or disable the display of date and time on the home screen.

#### 12.2.6 Dedicated key

You can assign functions to the middle navigation button of the machine. The Up, Down, Right, Left buttons have different applications / menus available.

#### 12.2.7 Flight mode

All network functions are turned off.

#### 12.2.8 Misc. Settings / LCD backlight

You can change the display brightness and standby time.

### **12.3. Network Settings**

Change SIM1 / SIM2 Network Settings (Automatic and Manual Network Selection).

GPRS data transfer preference settings: Data or call preferred.

### **12.4. Security settings**

Security settings can be changed in this menu, so the appropriate settings, the device or the SIM card can not be used by unauthorised person.

#### *SIM Security*

To change the SIM card and phone security settings, in the menu mode, go to Settings > Security settings. To set the codes for the SIM card, select PIN, then press Select (Left soft key). Within the menu item you can choose from the following options:

**PIN lock:** to switch the PIN code on / off: Press OK or Left softkey (On / Off) to activate or deactivate. Enter the PIN code to turn on or off the SIM PIN. If the PIN request is activated, every time you turn on the phone, you must enter the PIN code. For more information, contact your service provider. Note: If you enter a PIN incorrectly three times, the SIM card will be locked, which can be solved by entering the PUK code. PUK code resolves PIN blocking problem. The PIN and PUK codes are contained in a SIM card package; otherwise contact your service provider.

**Change PIN:** This menu item allows you to change the PIN code and enter the new code twice; after you enter the old code that displays the message on the display. The code must consist of 4 to 8 digits. PIN code is can only be changed if PIN code request is active.

#### *Phone security*

Press OK to lock Phone Lock on or off, the current status is displayed at the end of the line.

To activate the phone lock, you must enter the phone password.

If this feature is active, the phone password must be entered every time you turn it on.

Note: The default phone password is "1122". Please change this to a unique code as soon as possible. The specified code may consist of 4 to 8 digits.

## 12.5. Connectivity

This menu option allows you to add / edit the data account (profile) used for sending MMS.

### Bluetooth

To turn Bluetooth on, go to Menu > Settings > Connectivity > Bluetooth, then activate Bluetooth. You can set your device visibility for other Bluetooth devices by using the Visibility option.

**Bluetooth device pairing:** Within Bluetooth menu, select My device and then select Search new device. The device will make a list of visible devices. Select the device to be paired from the list and press <Pair>. Next, confirm the approval code displayed on both devices.

**Sending files via Bluetooth:** Select the file (image, music ... etc.) from your phone applications that you want to send. Go to Options > Send > Via Bluetooth, then select the recipient and press <OK> to send.

**Receive data via Bluetooth:** The phone asks you to receive and saves the file after confirmation.

## 12.6. Restore settings

To reset the factory settings (delete all user data from the device) In Menu mode, go to Settings > Restore settings. The factory password for restoration is "1122".

**Attention!** All user data is deleted from the device, deletion can not be undone.

## 13. Audio player

On the player interface, press OK to select  play / pause the

left / right navigation buttons to go to the previous / next  audio file, up/down navigation keys to change the repeat and shuffle settings, and the \* / # buttons to adjust the volume.

In List / Options, you can do the following:

Playback, Refresh List, Settings. In the Settings menu you can turn on/off the List auto gen. menu. If you turn it off, the menu list in the Options changes: the Refresh list menu disappears and the Add, Remove and Remove all menus appear instead of it.

## 14. Multimedia

### 14.1. Image viewer

The application used to view the images stored on your device. In Menu mode, go to Multimedia > Image viewer.

### 14.2. Video recorder

Press the center navigation key (Record) to start recording.

To stop recording, press <Stop> with the Right softkey.

Your video will automatically be saved.

### 14.3. Video player

In Menu mode, select Multimedia > Video Player, select the video you want to watch, then press the center navigation key to start playback.

During video playback, you can use the following buttons:

Mid Navigator Button: Starts and pauses playback.

Navigation key up: Enable full display view

Navigation key down: Stop video playback.

Navigation key right and left: step.

Press Options to enable / disable Automatic Repeat.

### 14.4. Sound recorder

You can record with a voice recorder.

Select Options > New Record to start recording. Use the left soft key to pause and then resume the recording. Use the right soft key

to stop recording. The unit saves the recording and shows a warning message on the display.

After recording, you can access the following options by pressing the Left soft key [Options].

- **New record:** Create a new recording.
- **Play:** you can retrieve the current recording.
- **List:** List of saved recordings
- **Settings:** You can specify the save location and the recording quality

## 14.5. FM Radio

In Menu mode, go to Multimedia > FM radio. . No headphones need to be connected, but it's worth it for better quality.

In the FM radio application, press the left / right navigation keys to search the channels automatically forwards / backwards. Use the up / down navigation keys to fine-tune the frequency.

### Automatic Search

By selecting Options > Auto search, the device searches for and saves available channels. You can view saved channels in the Channel List menu. Select the channel you want to play from the list, then press the center navigation key, or select Options > Play.

### Manual Search

Go to Options > Manual Input, then enter the frequency of the channel frequency, confirm with OK, and then press OK.

### Play in background

To play in the background, select FM Radio> Options> Settings> Background play.

### Turn on the loudspeaker

To turn on the loudspeaker, select FM Radio > Options > Settings > Loudspeaker. The speaker can be switched off in the same menu

item.

### Recording

Choose the Record menu in the Options to record the currently broadcasted program. With the Left softkey you can pause the recording and the resume it, with the Right softkey you can stop it. In the Options > List menu you can play the file.

### **Comment:**

The quality of radio broadcasting is influenced by the environment. You can improve the quality by manual search and by placing your device closer to the window.

## **15. Fun & Games**

To access the games, go to Fun & Games in Menu mode. The game Memory is available on your device. For a description of the game thread, see the game's Help menu.

## **16. Profiles**

In Menu mode, go to the Profiles menu and then select the profile you want to use. There are 5 profiles in the device: General, Silent, Meeting, Outdoor and Headset.

### Personalize profiles

In Menu mode, go to the User Profiles menu, and then select the profile you want to change.

To change the profile, press [Options] and select Customize. In this menu you can change the following settings:

Alert type, Ring type, Ringtone for incoming calls, Ringtone volume, Message ringtone, Message volume, Keypad tone, Keypad volume, On / Off tones, System alert. Please note: Silent mode can't be modified.

## 17. File manager

In Menu mode, go to File manager. See all files stored on your device and on the memory card (if connected). To view the files, select the device or memory card using the navigation keys, then press the Center key.

Press Options to access the following options:

- **Open:** Opens the selected folder.
- **View:** You can see this option, when you select a picture file. It opens the picture.
- **New Folder:** Create a new folder on the current drive.
- **Rename:** You can change the name of the file or folder depending on which one is selected.
- **Delete:** Deletes the selected folder or file, depending on which one you chose.
- **Copy:** Copy the selected file to other place.
- **Move:** Move the selected file to other place.
- **Details:** Displays date and size info..
- **Image information:** Displays name, resolution and size info.
- **Use as:** Picture set as wallpaper, power on and power off display.
- **Play:** You can see this option, when you select an audio/video file. It opens the picture.

## 18. Organizer

### 18.1. Alarm clock

In Menu mode, go to the Alarm menu, where you can set up 5 different alarms.

When the alarm clock sounds, press the Left soft key to stop, or press the Right soft key to snooze.

The alarm clock also works while the device is turned off.

To change the alarm details, select one from the list and press Center key or Edit with the Left softkey.

- Status: Turn on or off the alarm.
- Time: You can set the alarm time by using the numeric keypad.
- Repeat: You can choose between Once, Everyday and Custom (selected days) options.
  - Alarm tone: You can set the alarm tone.

## 18.2. Torch

In Menu mode, go to Organizer > Torch to turn the flashlight on or off.

## 19. Extras

### 19.1. Calendar

To open Calendar- in menu mode- go to Extras > Calendar. The calendar indicates the current month, highlighting the current date with color. Use the navigation keys to scroll through the days. Select a date and press OK or the left soft key [Options] to choose from: Jump to date, Go to today.

### 19.2. Calculator

In Menu mode, go to Extras > Calculator. To perform basic mathematical operations, use the buttons corresponding to the calculator display.

## 20. Camera

Your device has a camera for taking photos.

### 20.1. Making Photos

In Menu mode, select Camera.

- Point the lens towards the object and adjust the image.
- Take the photo with the middle navigation key.

The image is saved in JPG format.

#### Camera Options:

Within the camera, you can choose from the following options by

pressing Options (Left soft key) in the popup window:

- Switch to video recorder: to enter video capture mode.
- Photos: Go to the directory of your saved photos (It opens Image viewer).
- Camera settings: LED Shutter Sound, EV, Contrast, Anti-Flicker, Scene Mode, White Balance, Delay-Timer
- Image Settings: Image size, Image quality
- Effect settings: Normal, Grayscale, Sepia, Green Sepia, Blue Sepia, Color invert(Negative)
- Storage: You can change, where the phone saves the photos: phone storage or memory card.
- Reset default: Resets camera settings.

## 21. Declaration of Conformity

The Blaupunkt FM03i is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53/EU and 2011/65/EU. The Declaration of Conformity is available on our website.



Designed and Engineered by  
Blaupunkt Competence Center Mobile Europe  
HTM Mobile Kft.

1118 Budapest, Dayka Gábor utca 3. Hungary

Assembled in P.R.C by

HONGKONG SYMSONIC TECHNOLOGY CO., LIMITED

FIAT B07, 23/F HOVER IND BLDG NO. 26-38 KWAI CHEONG RD NT  
HONG KONG

For more information on this product, visit our website at  
[www.htmmobile.hu](http://www.htmmobile.hu) or [www.blaupunkt.com](http://www.blaupunkt.com).