



Instruction Manual

FM/AM Alarm Clock Radio - BAC11AFC



Enjoy it.

CONTENTS




General Safety	4
Product Overview	7
Basic Operation	8
Battery Installation	8
Antenna	9
Setting the Time	9
Setting the Alarm	10
Snooze Function	11
Sleep Timer	11
Adjust Display Brightness	11
Volume Control	11
Radio Operation	
Listen to FM/AM Radio	12
Store FM Radio Stations	12
Troubleshooting	13
Specification	14

GENERAL SAFETY

Read this manual thoroughly before you start using the radio.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the product or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product

This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- No naked flame source, such as candles, should be placed on the product.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause fire or electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this product during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.



GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power supply from the wall socket.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the product must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

PRODUCT OVERVIEW

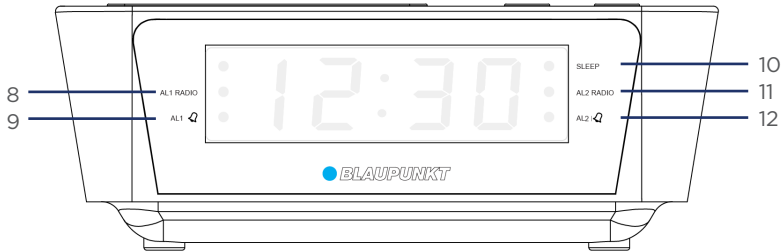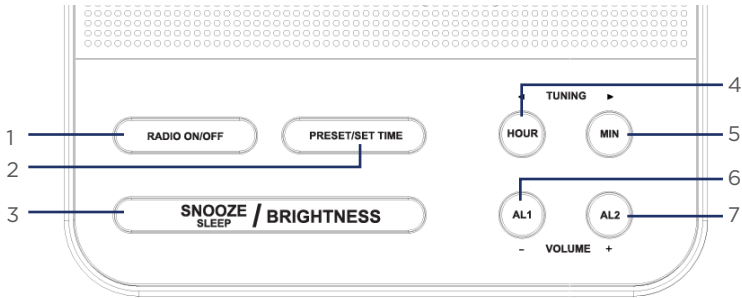


1. RADIO ON/OFF button
2. PRESET/SET TIME button
3. SNOOZE/SLEEP/BRIGHTNESS button
4. HOUR SET/TUNING- button
5. MIN SET/TUNING+ button
6. ALARM 1 SET/VOLUME- button
7. ALARM 2 SET/VOLUME+ button
8. ALARM 1 RADIO STATUS indicator
9. ALARM 1 BUZZ STATUS indicator
10. SLEEP STATUS indicators
11. ALARM 2 RADIO STATUS indicator
12. ALARM 2 BUZZ STATUS indicator

BASIC OPERATION

Back up Battery Installation

A Battery backup function has been added to this product to assist with keeping the correct time when the mains power is interrupted for short periods of time.

- Remove the battery compartment cover from the bottom of the unit.
- Insert 2x AAA batteries into the compartment, taking care to match the battery orientations marked on the inside of the compartment.
- Replace the battery compartment cover.

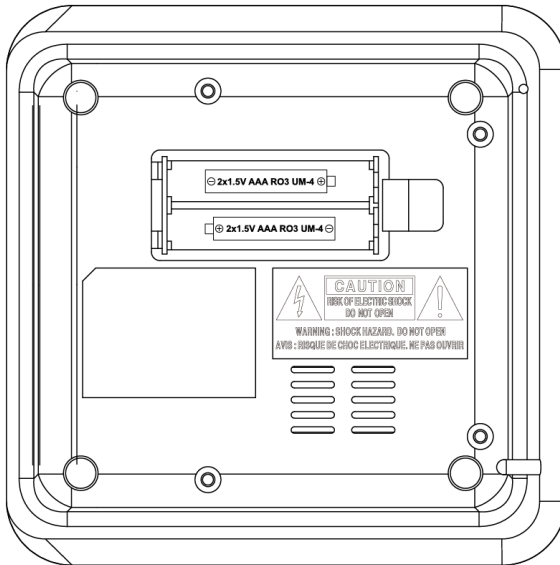

1. Battery is used for clock back up only to the maintain the clock operation without LED display when electrical power has been interrupted.
2. Always remove the battery if the unit is not going to be used for an extended period of time to avoid unnecessary battery drain.
3. Use only the size and type of battery specified.
4. Battery shall not be exposed to direct sunlight or any heat source.
5. The battery back-up system only meant to be used from short temporary power failures.
6. For longer duration the battery may become exhausted or there may be some deviation in accuracy.
7. Do not store the clock radio with backup battery fitted, otherwise it will run down and may leak and corrode.

BASIC OPERATION (CONT.)

Antenna

- Unwind and extend FM wire antenna to its full length for FM reception and place it in the position. Which permits best reception.
- If AM reception is weak, slightly rotate or re-position the unit to get the best possible reception.

Setting the Time

The time setting must be performed while in STANDBY mode.

1. Press and hold the SET TIME (2) button. The clock digits will flash on the display.
2. Repeatedly press the HOUR (4) button to set the hour.
3. Repeatedly press the MIN (5) button to set the minute.
4. Press the SET TIME(2) button to confirm the hour and minute digits will stop flashing.

NOTE: For faster scrolling numbers, press and hold the HOUR(4) and MIN(5) button.

BASIC OPERATION (CONT.)

Setting the Alarm

The alarm settings must be performed while in STANDBY mode and make sure radio time has been set.

1. Press and hold the AL1(6) or AL2(7) button (0:00) will be flashing and be shown on the display.
2. When '0:00' is flashing, set the alarm time by repeatedly pressing HOUR(4) and MIN(5), press AL1(6) or AL2(7) button to store the alarm time. And 'Buzz' or 'Radio' indicator will stop flashing.
3. Press AL1(6) or AL2(7) button repeatedly to select the type of alarm (the buzzer or radio station), the source indicator will appear on the display.
 - If FM/AM tuner is selected as alarm source, yet you are listening to radio at the preset alarm time, the current listened station volume will increase gradually to the maximum alarm volume means your alarm is activated.
 - If it is under standby mode at the preset alarm time, the last listened station (FM/AM) or buzz will be activated automatically.
4. Press AL1(6) or AL2(7) button repeatedly to activate or deactivate the alarm timer, the alarm indicator will appear on the display.
5. When the alarm sounds, press the AL1(6) or AL2(7) button or RADIO ON/OFF(1) button, the alarm will stop, and it will start again at the same time, next day.
6. To cancel the alarm, press AL1(6) or AL2(7) button twice briefly, the alarm indicator will disappear.

NOTE:

- When using the device, you can press and hold the AL1(6) or AL2(7) button to see what time the alarm was set. Then the alarm time will briefly appear on the display.
- When the alarm sounds, volume increase gradually to the maximum alarm volume. You can not adjust the alarm volume manually.

BASIC OPERATION (CONT.)

Snooze Function

When the alarm sounds (whether the buzzer or radio), it can be delay for a period of 9 minutes.

1. When the alarm is sounding, press the SNOOZE(3) button.
2. The alarm will stop, and repeats ringing 9 minutes later.

Sleep Timer

1. In radio mode, repeatedly press SLEEP(3) button to select the desired sleep time from 120, 90, 60, 30, 15 minutes.
2. When the sleep timer is activated, the sleep indicator will appear.
3. The radio will turn off and switch to standby mode automatically after the set sleep time has elapsed. The sleep indicator will disappear.
4. To deactivate the sleep timer, press SLEEP(3) button repeatedly until "OFF" appears.

Adjust Display Brightness

The brightness settings must be performed while in STANDBY mode. Press BRIGHTNESS(3) button repeatedly to select different brightness level:

- High
- Medium
- Low

Volume Control

1. In radio mode, to increase the volume level press VOLUME+ (7) button.
2. In radio mode, to decrease the volume level press the VOLUME-(6) button.

RADIO OPERATION

LISTEN TO FM/AM RADIO

1. Ensure the mains power is connected and powered ON.
2. Fully extend the antenna wire which is located at the rear of the apparatus.
3. Press the RADIO ON/OFF(1) button repeatedly to select the desired band.
4. Press the TUNING-(4) or TUNING+(5) button to tune into the desired station, press and hold the TUNING-(4) or TUNING+(5) button for auto forward or backward radio station searching.

Store FM Radio Stations Manually

You can store up to 10 FM/AM radio stations.

1. Tune to an FM/AM radio station.
2. Press and hold PRESET(2) button for two seconds. The preset number begins to blink.
3. Press TUNING-(4) or TUNING+(5) to select a number.
4. Press PRESET(2) again to confirm.
5. Repeat steps 1 to 4 to store other stations

NOTE: To remove a pre-stored station, store another station in its place.

Select a Preset Radio Station

In tuner mode, press PRESET(2) repeatedly to select a preset station.

TROUBLESHOOTING

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below.

Problem	Reason(s)	Solution(s)
No Power	<ul style="list-style-type: none">• Power cable not connected to wall socket.• Power socket is not switched on.	<ul style="list-style-type: none">• Make sure the plug is connected.• Switch the power on.
Radio reception weak	<ul style="list-style-type: none">• Extend or re-position the FM antenna.• Re-position the main unit for AM reception.	
No sound	<ul style="list-style-type: none">• Volume control set to minimum.	<ul style="list-style-type: none">• Increase the volume level
Time reset to 12:00	<ul style="list-style-type: none">• Backup batteries exhausted• Clock not set	<ul style="list-style-type: none">• Replace the batteries• Set the clock following steps on page 10
Alarm does not sound	<ul style="list-style-type: none">• Alarm mode not active• Clock not set• Alarm not set	<ul style="list-style-type: none">• Activate the alarm following steps on page 10• Set the clock following steps on page 10
No sound from the radio	<ul style="list-style-type: none">• Unit isn't ON.• Volume control set to minimum.	<ul style="list-style-type: none">• Switch the unit ON with the ON/OFF button• Increase the volume level

SPECIFICATIONS

Power Supply	AC 230-240V - 50/60Hz
Power Consumption	4W
Standby Power Consumption	<1W
Batteries	DC 3V (2x AAA, Not included)
Frequency	
FM	87.5 - 108MHz
AM	522 KHz-1620 KHz



CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd