

## 2-WAY COAXIAL SPEAKERS GTx 1xxx SERIES



GTx 1352



GTx 1402



GTx 1662



GTx 1692

*Enjoy it.*

# INTRODUCTION

---

Proper system planning is vital in order to maximize the device's performance and road safety. Plan your installation carefully to avoid compromising performance reliability of the system. Consult an authorized Blaupunkt dealer for installation or reparation. Read the manual carefully before operating the device for the first time.

## Safety Notes

Ensure to follow below safety notes during installation and wiring connection: -

- Disconnect the negative terminal of the battery. Refer to the safety notes of the vehicle manufacturer.
- Ensure positions of the holes are nowhere near the vehicle component to avoid any damage during drilling.
- Ensure cross section of the cable is no less than  $2.5\text{mm}^2$  if the positive and negative cables are too long.
- Incorrect installation may result in malfunction of the device or the car sound system.

## Installation and Connection Instructions

- Select a dry and well-ventilated location to install the device.
- The device must not be installed in overly exposed location such as on rear shelf, rear seat etc.
- The installation location must be suitable for screw holes and have stable ground support.

## Voltage Supply

- Use the supplied power extension cable to connect to the positive battery terminal.
- Firmly and carefully connect the ground lead to a bare metal point on the vehicle chassis.
- The control of the device should be a two-channel control, either via the preamplifier output of the car sound system. A control

solely via the right or left channel is also possible since the low-frequency portion of the music is generally identical on both channels.

## Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

## Recycling and Disposal



Do not dispose of your old unit in the household trash!  
Use the return and collection systems available to dispose of the old device.

 
 
This manual may be updated from time to time without any notice.

## SPECIFICATION

### GTx 1352

Pair of 3.5" 2-way coaxial speaker with Polypropylene Cone Composition including mounting hardware

- Max. Power Handling : 60W
- Normal Output Power (RMS) : 20W
- Impedance : 4ohms
- Frequency Response : 120Hz - 20,000Hz
- Sensitivity : 90±3dB
- Mounting Depth : 41mm
- Diameter Hole : 78mm

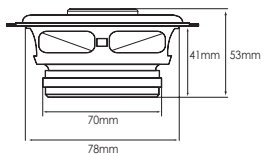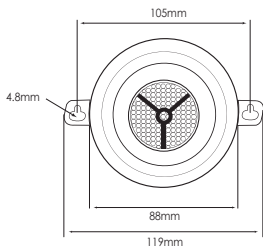

### Accessories



Screws (4x32mm) x2



 
 
U Clips x2

# SPECIFICATION

## GTx 1402

Pair of 4.0" 2-way coaxial speaker with Polypropylene Cone Composition including mounting hardware

- Max. Power Handling : 70W
- Normal Output Power (RMS) : 22W
- Impedance : 4ohms
- Frequency Response : 100Hz - 20,000Hz
- Sensitivity : 90±3dB
- Mounting Depth : 47mm
- Diameter Hole : 95mm

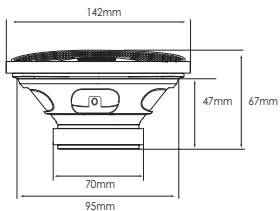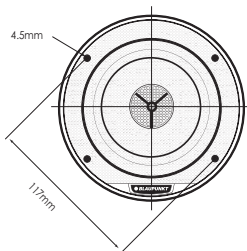

### Accessories



Screws (4x32mm) x4



 
U Clips x4

## SPECIFICATION

### GTx 1662

Pair of 6.5" 2-way coaxial speaker with Polypropylene Cone Composition including mounting hardware

- Max. Power Handling : 110W
- Normal Output Power (RMS) : 33W
- Impedance : 4ohms
- Frequency Response : 70Hz - 20,000Hz
- Sensitivity : 90±3dB
- Mounting Depth : 56mm
- Diameter Hole : 145mm

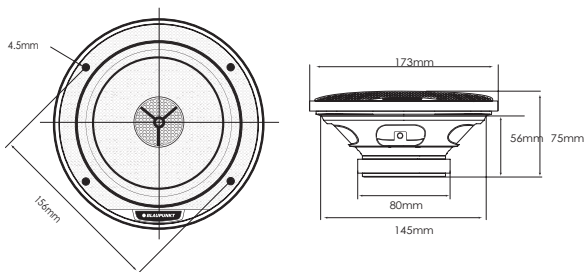

#### Accessories



Screws (4x32mm) x4



 
 
 
U Clips x4

## SPECIFICATION

### GTx 1692

Pair of 6.0" x 9.0" 2-way coaxial speaker with Polypropylene Cone Composition including mounting hardware

- Max. Power Handling : 115W
- Normal Output Power (RMS) : 35W
- Impedance : 4ohms
- Frequency Response : 60Hz - 20,000Hz
- Sensitivity : 90±3dB
- Mounting Depth : 74mm
- Diameter Hole : 153mm x 220mm

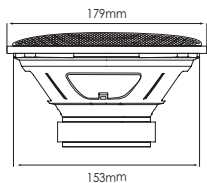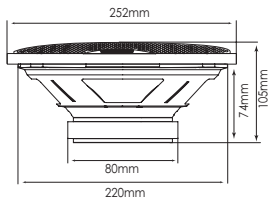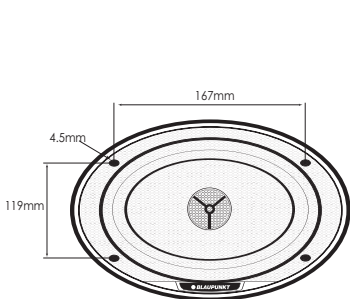

#### Accessories




Screws (4x32mm) x4




U Clips x4

## INSTALLATION

 
GTx 1352

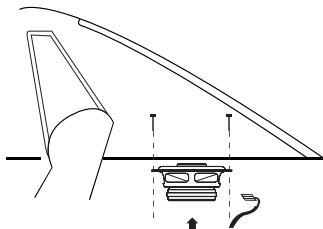


GTx 1402

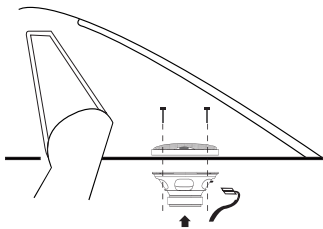 

GTx 1662

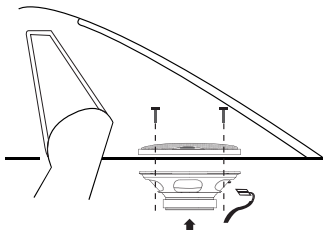 

GTx 1692

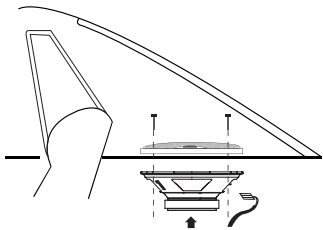 

## SPECIFICATION

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
Speaker does not work	Incorrect or loose wiring connection.	Ensure proper wiring connections of speaker.
	Fraying or broken cables.	Repair or replace if the cables are damaged.
	Speaker is damaged.	Replace with a new speaker.
Distorted and hissing sound	Voice coil or speaker cone is damaged.	Replace with a new speaker.



**Designed and engineered by Blaupunkt Competence Centre**

**GTx 1352**

4 111 21 042 58 01

**GTx 1402**

4 111 21 040 58 01

**GTx 1662**

4 111 21 039 58 01

**GTx 1692**

4 111 21 041 58 01