

Instruction Manual

32" Full HD Smart Monitor - BP32SM60



Enjoy it.

CONTENTS




General Safety	4
Installation	8
Wall or Arm Mounting Instructions	9
Controls and Connections	10
Remote Control	12
Initial Setup	15
Android Monitor™ - Home Screen	20
Add apps to Home Screen	20
Google Play	21
Google Assistant	22
Discover	23
Input Menu	24
Settings	25
Network & Internet	26
Device Preferences	
About & Time Settings	27
Input Settings	28
Power Settings	29
Picture Settings	30
Sound Settings	31
Home Screen & Screen Saver	32
Google Assistant Settings	33
FAQs	34
Specifications	35
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Monitor.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>The cover (or back) of the unit should not be removed to prevent risk of electric shock.</p> <p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Monitor, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the adapter.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry Monitor from the sides, always be sure to have assistance by another person. Do not carry the Monitor from the middle.

WARNING!

Toppling furniture and Monitor's can cause serious injury or death.

If a monitor is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the monitor.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor to a suitable support.
- Not standing the monitor on cloth or other materials placed between the monitor and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Monitor set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Monitor set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer. Please ensure the monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

 
Attaching the stand

Step 1 Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the Monitor screen flat on top, with the screen side facing down, as illustrated below.

Step 2 Align the stand leg to the installation point, as illustrated below. Tighten the screws (supplied) with a screwdriver to affix the stand to the panel. Place the Cap on top of the hole, it will click into place.

Step 3 Align the V stand to the base of the installed stand and tighten with screw.

Step 4 Now that both parts of the stand is tightned and complete, you can now stand the monitor up to be used.

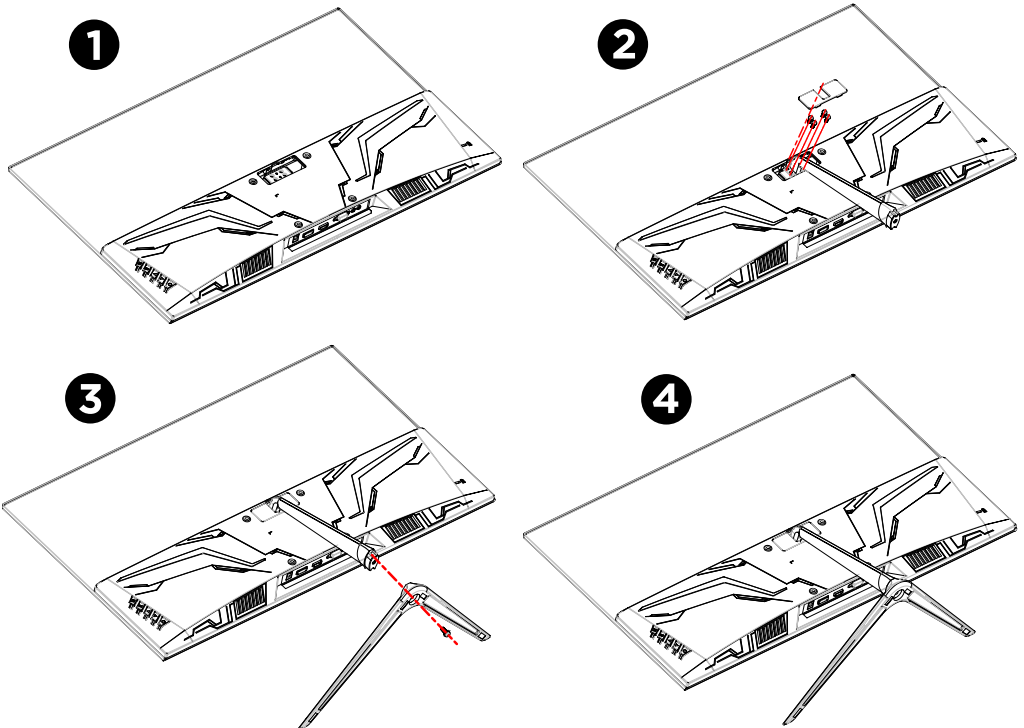

CAUTION!

INSTALLATION (CONT.)

Wall OR Monitor Arm Mounting Instructions

Please ensure the Monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the Monitor on your own.

 
BACK OF MONITOR

VESA PATTERN: 100 (w) x 100 (h) mm

M4 x 8 mm



CONTROLS AND CONNECTIONS

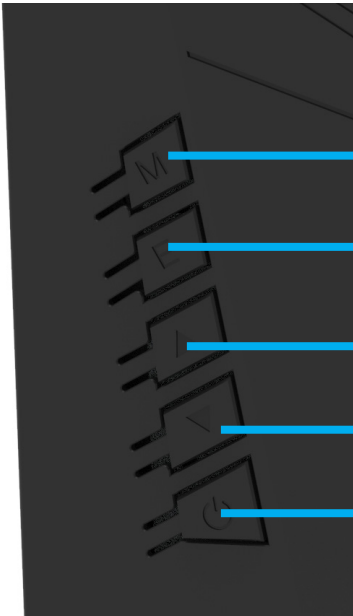

M - MENU / SELECT

E - EXIT / INPUT MENU

UP

DOWN

STANDBY POWER OFF/ON

CONTROLS AND CONNECTIONS

 


1. DC IN (POWER)
2. USB 2
3. USB 1
4. HDMI 2
5. HDMI 1 (ARC)
6. EARPHONE PORT




USB connection

Insert a USB storage device into the USB port to record, playback of video/music/photo.

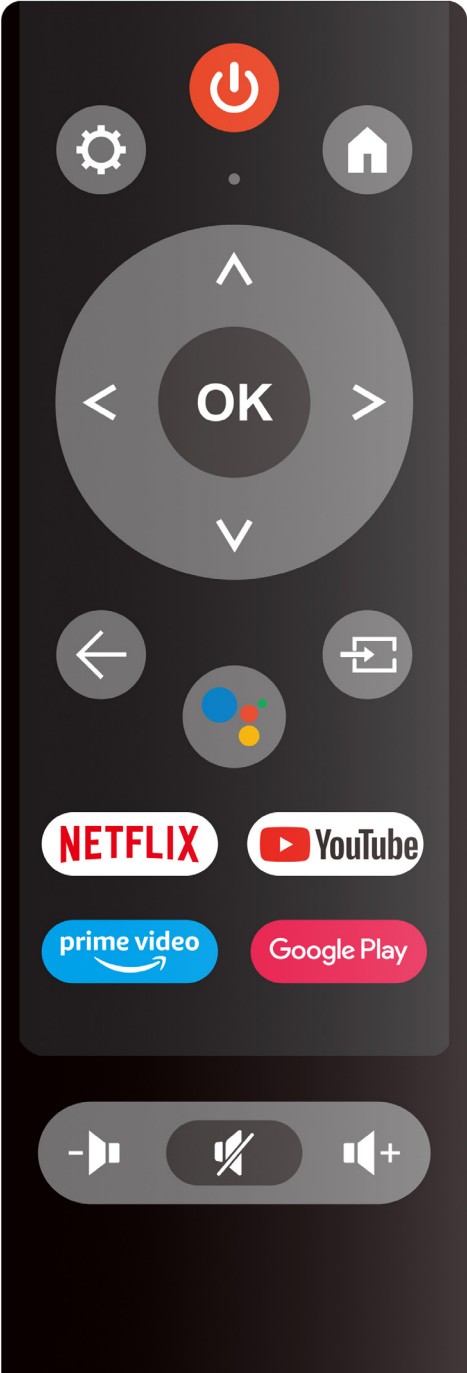REMOTE CONTROL



REMOTE CONTROL (CONT.)

Keys	Function
Power (⏻)	Switch between working and standby status.
Mute (🔇)	Turn on/off the sound.
NETFLIX	Open application.
 YouTube	Open application.
 prime video	Open application.
Google Play	Open application.
	Turn on Bluetooth remote control pairing or press the Google Assistant key to control your TV with your voice. (Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.)
Setup (⚙️)	Open setting menu.
◀, ▶, ▲, ▼	Select items or adjust values.
OK	In TV mode, open channel list. In OSD menu operation, confirm the operation.
Back (←)	Return to previous menu interface.
Home (🏠)	Show home page.
VOL+/-	Turn up/down the volume.
Source (📡)	Show signal source menu.

 
 
REMOTE CONTROL (CONT.)

Using the Remote Control

- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

How to open back of remote control to replace batteries

1. Look for the hole at the back side, middle of the remote.
Use this hole to to open the cover.
2. Place/Replace the batteries making sure that the 2x AAA batteries (included) polarities (+/-) match the battery compartment polarities (+/-).
3. When closing the back cover, place the bottom side edge of the battery compartment cover in first, then the top side. When pushed in will click shut.

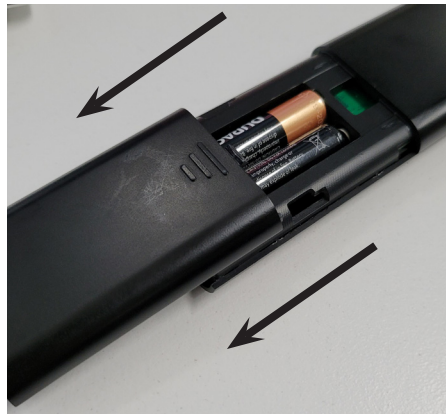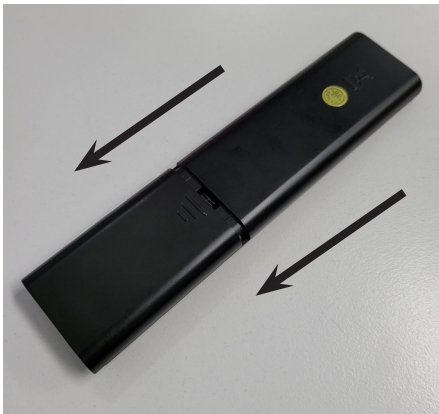


INITIAL SETUP


For the first initial setup, on screen setup wizard will guide you through setting up your Monitor. Please follow according to onscreen guide to setup your Monitor correctly.

Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the Monitor.

 Press **BACK** & **VOL-** (volume down) buttons for 3 seconds until red light starts to blink.

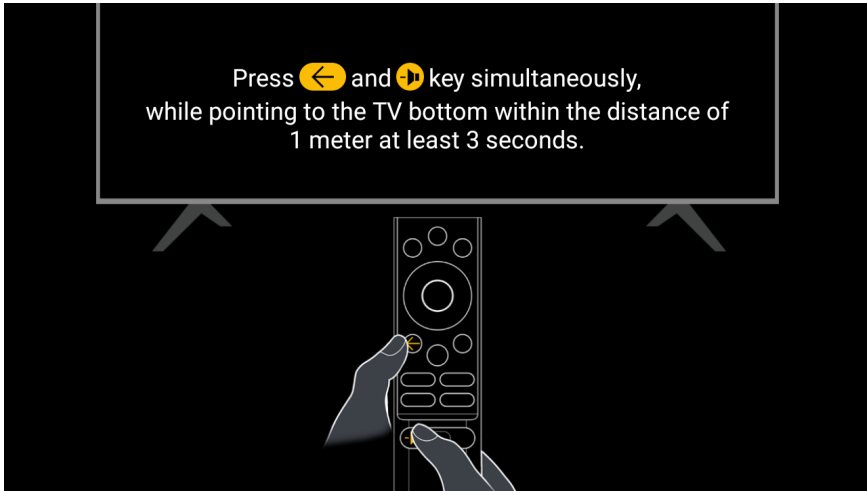

 Use the **▲/▼** buttons to select system language, then press **OK/SELECT** to confirm.

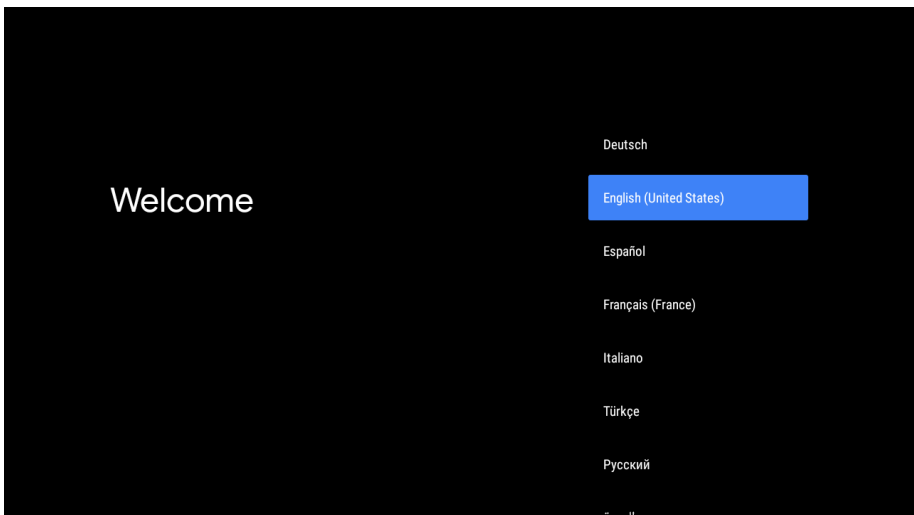

INITIAL SETUP (CONT.)

If you just want to use your Monitor normally, please select **“SKIP”**
To connect your Android™ smartphone to your Monitor, Select **“Continue”**.

Quickly set up your TV with your Android phone?

You can easily transfer your Android phone's Wi-Fi network and Google Account to your TV

Continue

Skip

Press ▲ / ▼ to select your Wi-Fi you wish to connect to, enter the password and then confirm to connect.

Select your Wi-Fi network

You can also connect an Ethernet cable to connect to the internet.

DQE-IPv6-Test

DQE-IPv6-Test_Wi-Fi5

PQ_2022

By accepting the Google Terms of Service to improve the product experience, Select **“ACCEPT”** to proceed with this condition.

Google

Google Services

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's Privacy Policy.

Click "Accept" to confirm your selection of these Google services settings.

Accept

Use location

Allow Google and apps with your permission to use location estimated from Wi-Fi. Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services

Help improve Android

 
Automatically send diagnostic information to Google

Services and your privacy


Google Assistant sends services you talk to a unique code

INITIAL SETUP (CONT.)

Select **“YES”** if you want your location identified on your Android Monitor. (Note: Select **“YES”** if you want Google to inform you on weather more accurately based on location).

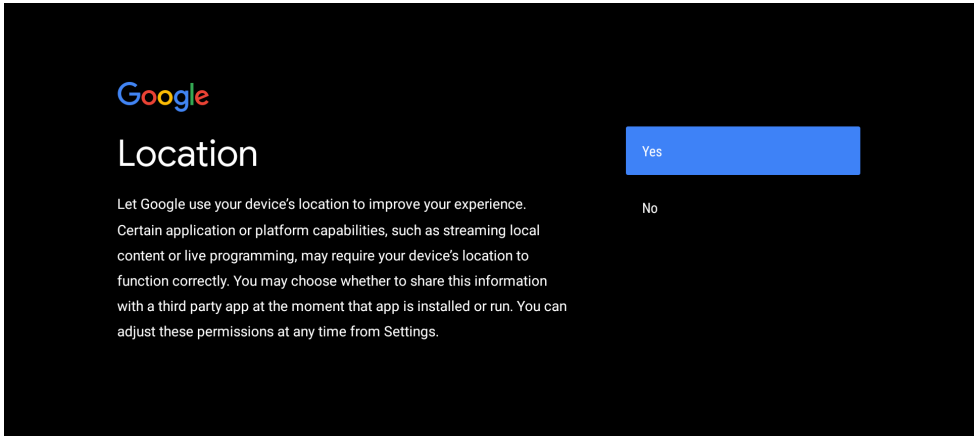


 By Agreeing and selecting **“YES”**, you agree to automatically send diagnostic information to Google to help improve your Google experience.

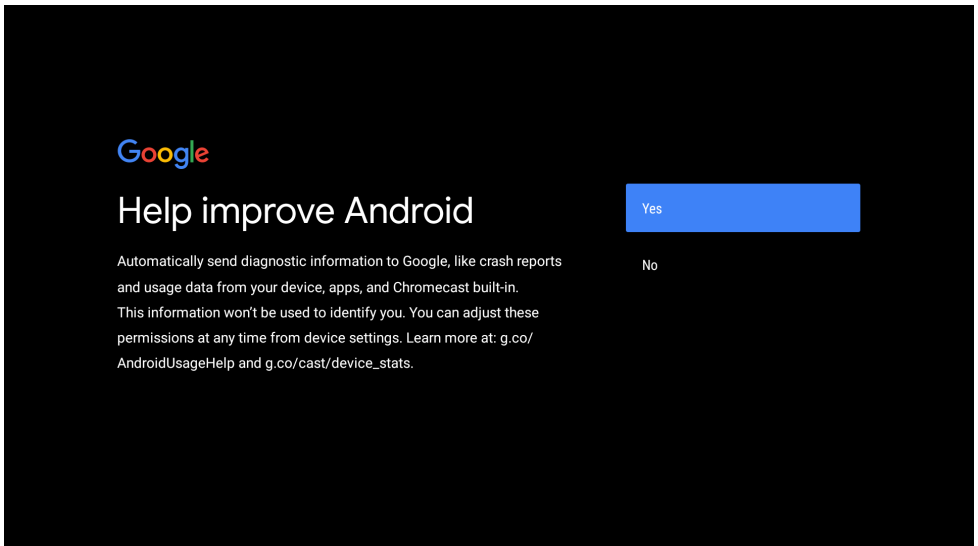


INITIAL SETUP (CONT.)

 Informational screens will now appear, you can scroll through steps by press **“RIGHT”** directional button to continue.

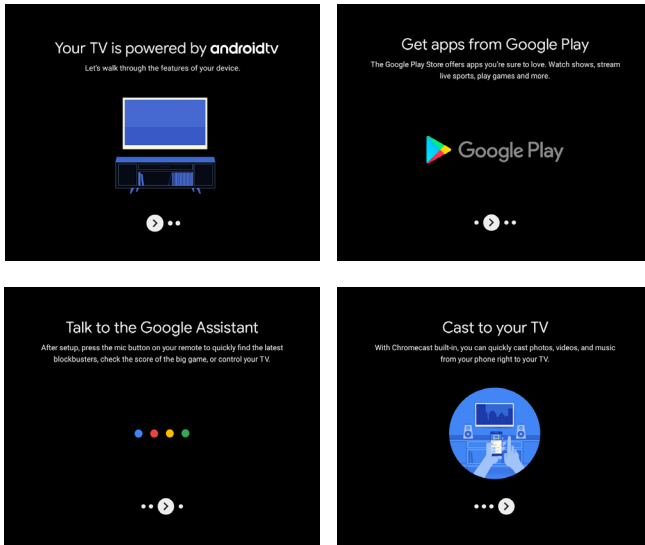

 Select the country you are using the device in with the ▲ / ▼ directional buttons.

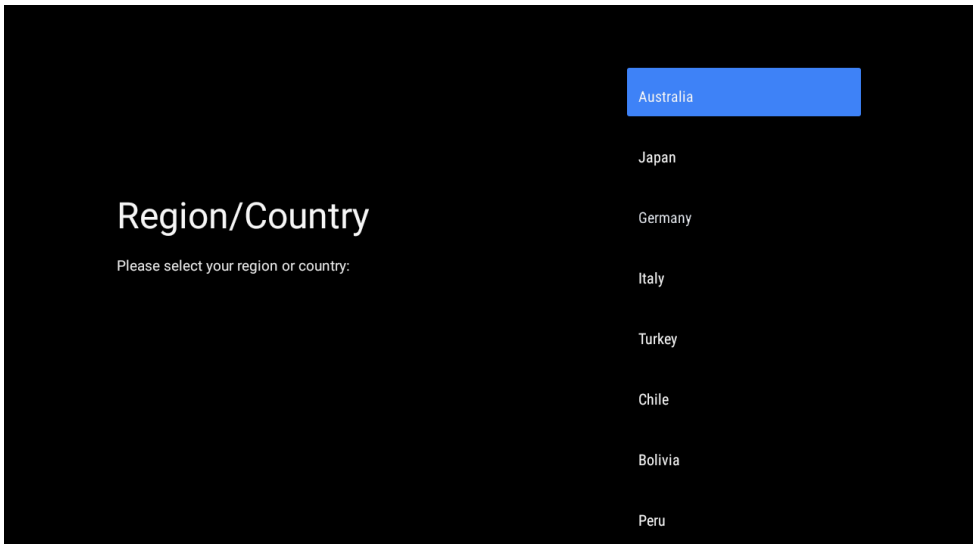


INITIAL SETUP (CONT.)


Select the TimeZone you are using the device in with the directional buttons.



 Please be sure in this step, select **“HOME”** if you are using this Monitor for use at home. Make sure to confirm once you have selected **“HOME”**.

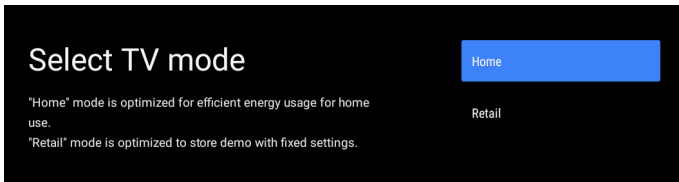

 
Make sure to set Chromecast built-in™ to ON, so you can cast all your favorite movies, shows, apps, games, and more directly to your Monitor.

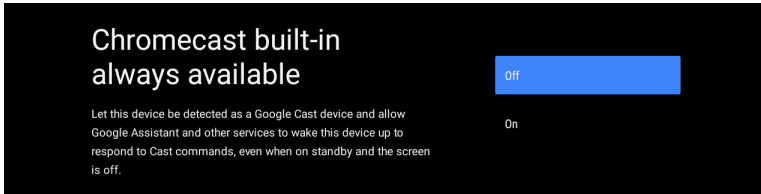

Android Monitor™ - HOME SCREEN

Once you have completed initial setup, you will now enter the Android Monitor home screen.

 - 1
- 2
- 3
- 4
- 5
- 6

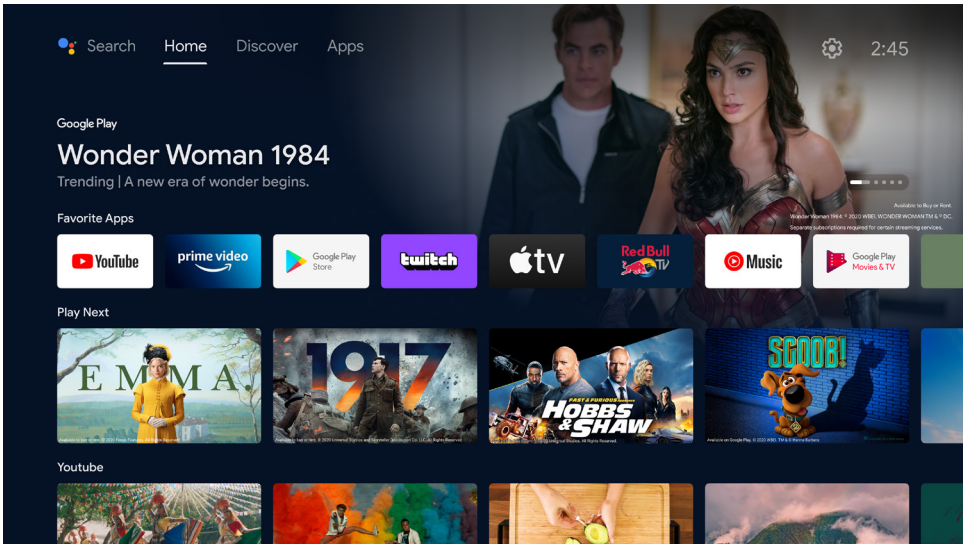


1. Press the Google Assistant button on your remote to do more on your Monitor with your voice.
2. **HOME** - Main page to enter Live Monitor, view your pre-installed and downloaded applications.
3. **DISCOVER** - Sign into your Google Account to get recommendations from your streaming services - organized into topics and genres based on what you watch.
Go to Page 23 to learn more.
4. **APPS** - Apps you have downloaded and apps you can search for to install.
5. **SETTINGS:** Select this if you want to access Monitor settings.
6. **TIME:** Displaying current time.
7. Each row past this point will display recommended content from the apps you already have installed.
Add Apps
At the end of this row of apps, Select the + box and add your app that you have downloaded and installed to the home screen of your Android Monitor.
8. Movies or Shows available to play next.

GOOGLE PLAY




To have access and to download applications from **Google Play**, you must sign in with a Google Account.

 Once you open **Google Play**, you will be prompted to sign in or create a new account.

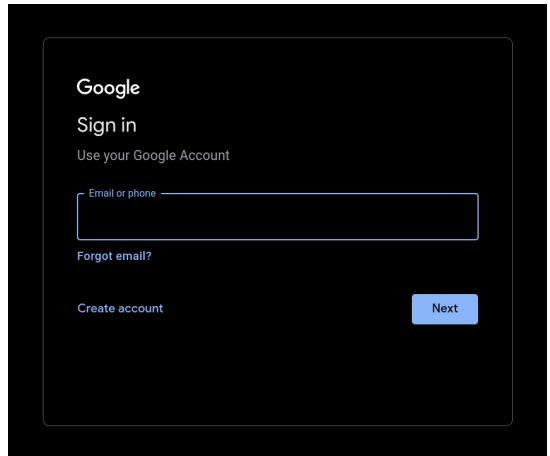

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download OR go to the search button, and search via entering text or pressing the Google Assistant button on the remote control.

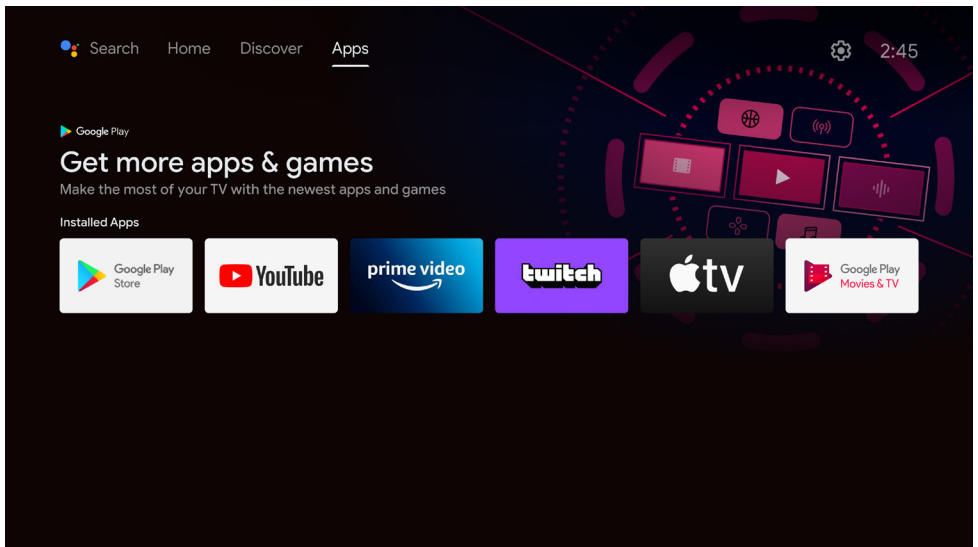


GOOGLE ASSISTANT

Do more on your Monitor with your voice. Press the Google Assistant button on your remote to quickly search 400,000+ movies and shows, get recommendations to match your mood, control smart home devices, and more.



 
Ask Google to search for the latest blockbuster, stream shows, or open multiplayer games. Have it dim the lights by connecting smart home devices. Manage tasks and see your calendar. Or ask it questions and see the answers on your Monitor.

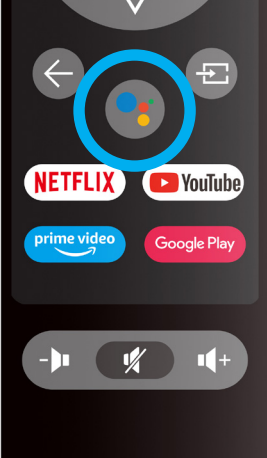

“What’s the weather today?”

DISCOVER

 Discover new movies and shows from the services you already have access to. Suggestions based on what you've watched and what interests you make it easier to find your next favorite.

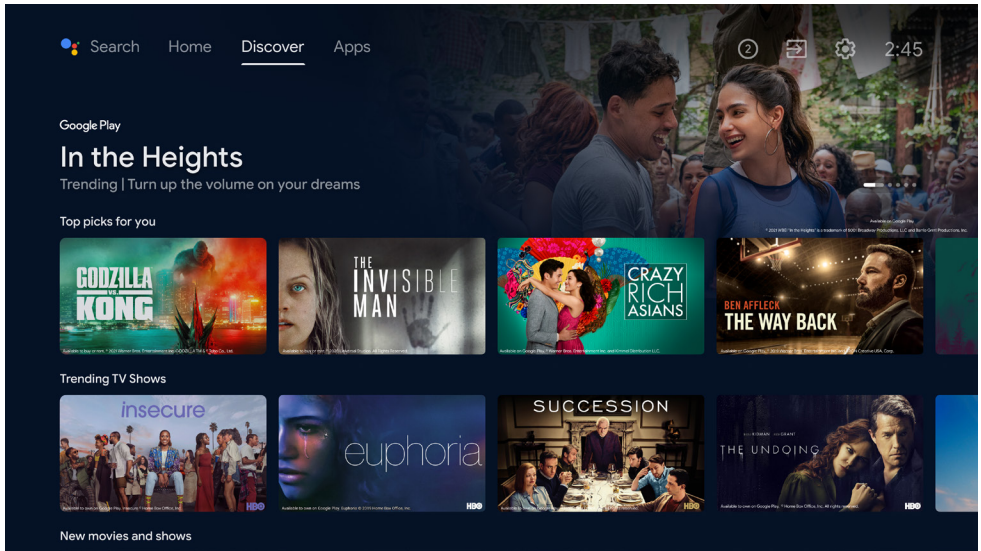

If you haven't already signed into Google Play using your Google Account. When selecting **DISCOVER** tab on the top of home page, you will be prompted to sign in.

 
Note: if already signed in, your Google Account will already appear.

1. Once signed into Google, you can select the apps you want recommendations for within the **DISCOVERY** section of Android Monitor.
2. Select (Tick) the apps you would like recommendations for.
3. Allow up to 10 seconds for Android Monitor to gather recommendations.
4. **DISCOVER** section will now display Movies or Monitor Shows recommended for you to watch.

INPUT MENU


To access **INPUT** menu, press the **INPUT** button on your remote control to have quick access to **INPUT** menu.

The options that are **AVAILABLE** will be highlighted, **PORTS** that are not in use, you will not be able to access.

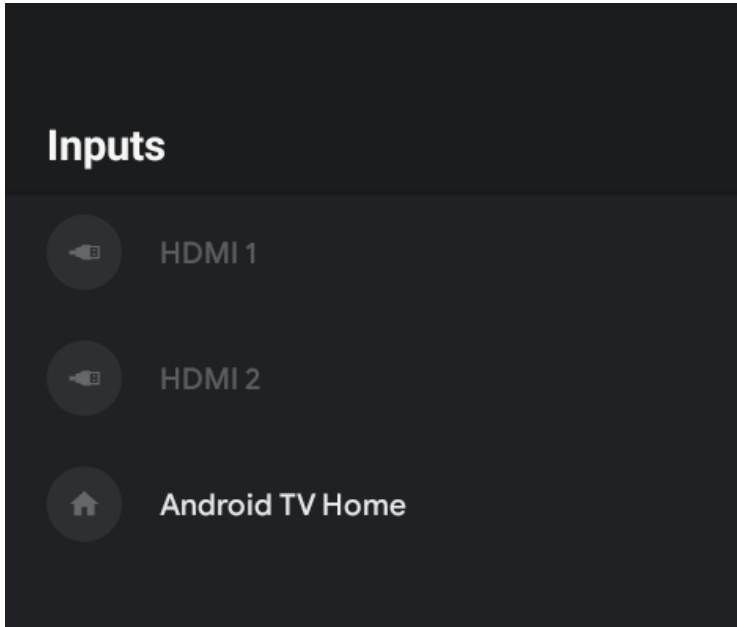


SETTINGS

 To access **SETTINGS** menu, select **SETTINGS (#5 on page 20)** via the HOME screen.

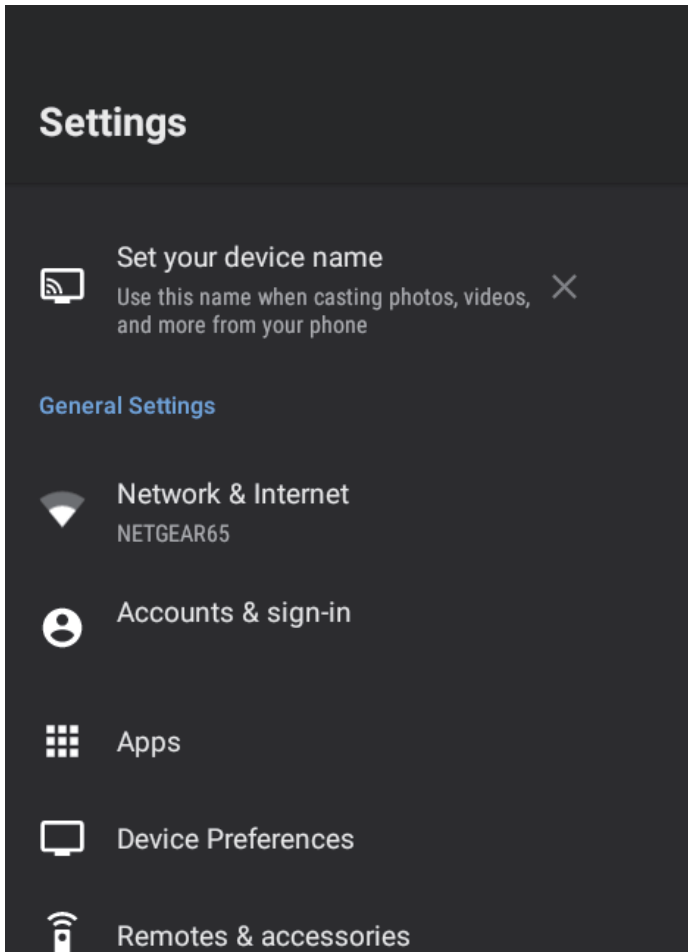


NETWORK & INTERNET

 To access **NETWORK** menu, select **Settings (#5 on page 20)** menu and go down and select **Network & Internet**.

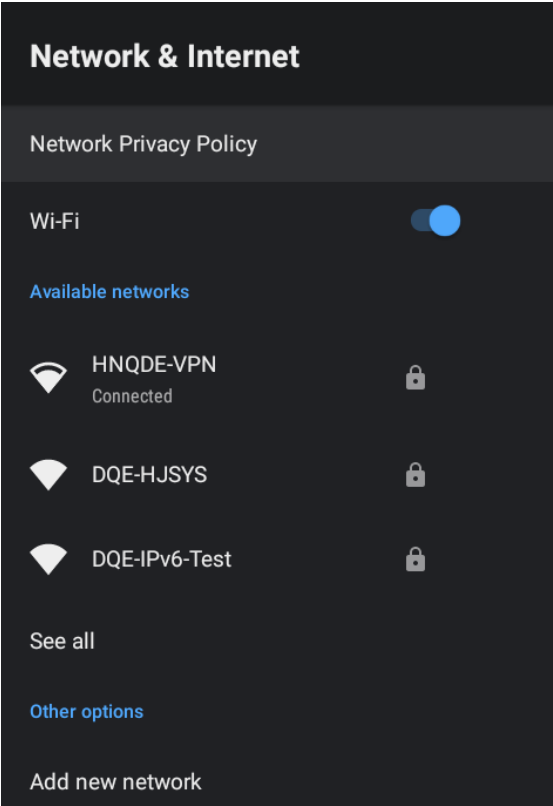


DEVICE PREFERENCES - ABOUT

 To access **ABOUT** menu, select **SETTING icon (#5 on page 20)** via the HOME screen. Then go down and select **“ABOUT”**.

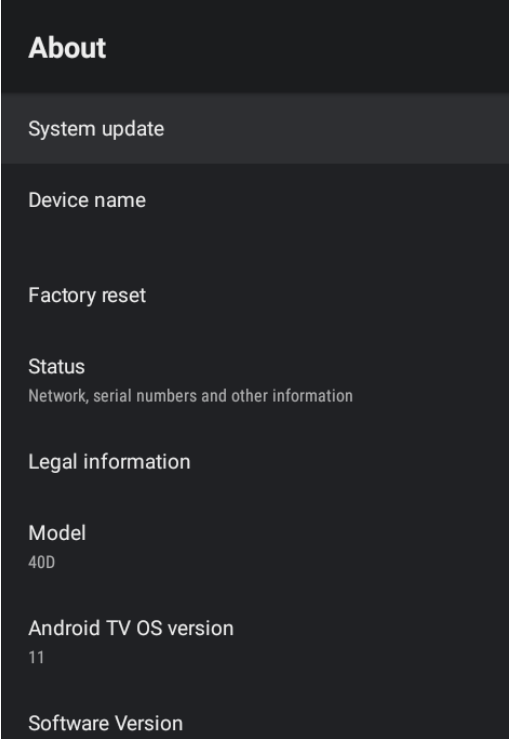

TIME


 
To access **DATE & TIME** menu, select **SETTING icon (#5 on page 20)** via the HOME screen. Then go down and select **“DATE & TIME”**.

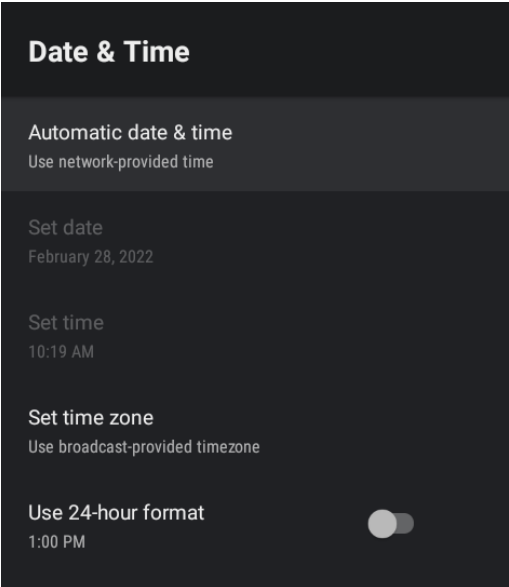

INPUT SETTINGS MENU

To access **INPUT SETTINGS** menu,

  
1. Select **SETTING icon (#5 on page 20)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“INPUTS”**.

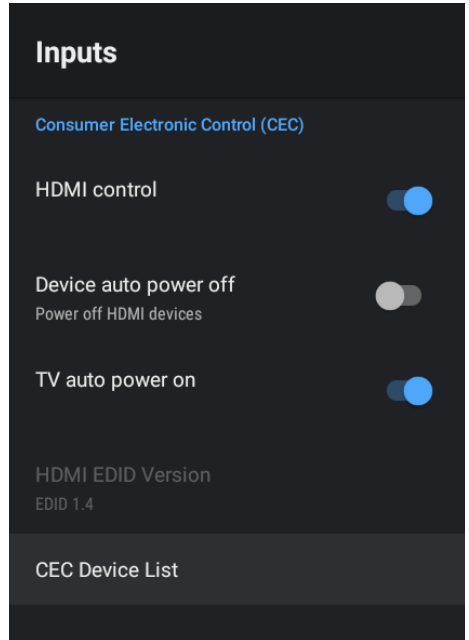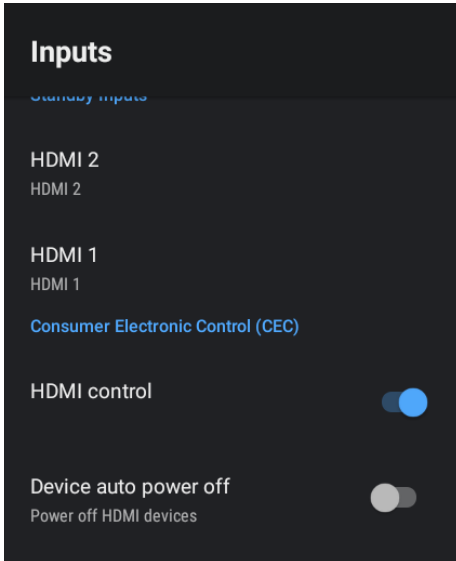

POWER SETTINGS MENU

To access **POWER SETTINGS** menu,

 1. Select **SETTING icon (5)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“POWER”**.


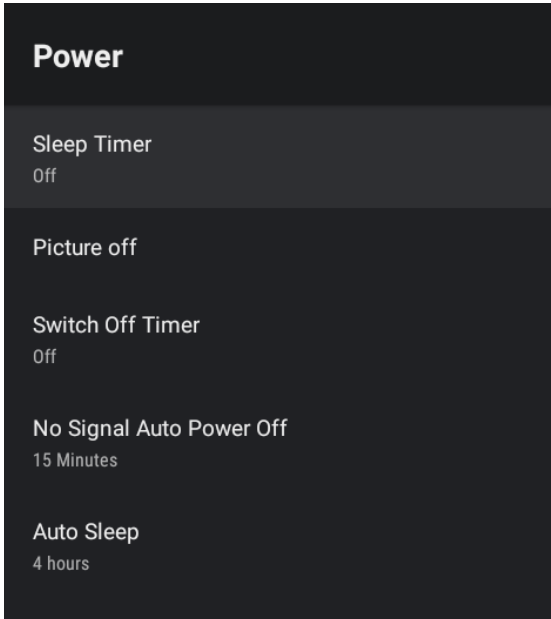


- Sleep Timer - Options of Off, 10 mins, 20 mins, 30 mins, 40 mins, 50 mins, 60 mins, 90 mins and 120 mins to auto turn off your Monitor.
- Picture Off - Turn off your display (recommended not to select this option).
- No Signal Auto Power Off - Turns your Monitor off if no signal is detected.

PICTURE SETTINGS MENU

To access **PICTURE SETTINGS** menu,

  1. Select **SETTING icon (5)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“PICTURE”**.

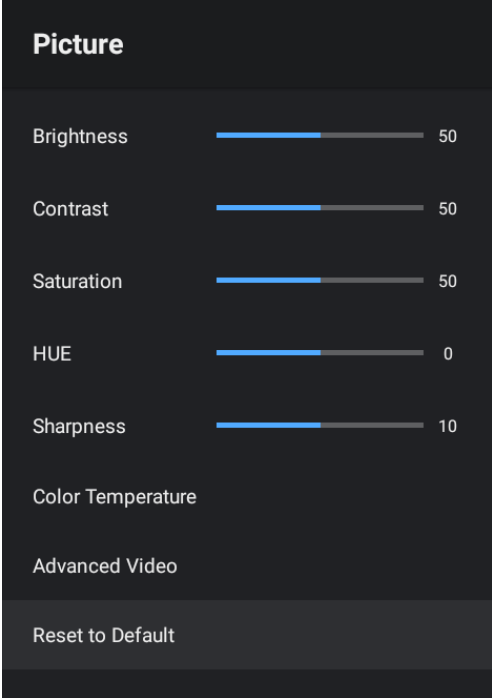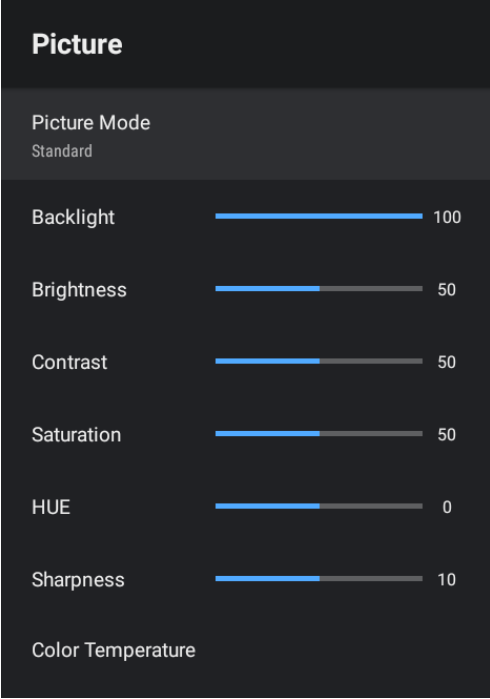


Picture Mode - Options to choose from - Standard, Vivid, Sport, Movie, Game, Energy Saving, User.

SOUND SETTINGS MENU

To access **SOUND SETTINGS** menu,

 1. Select **SETTING icon (5)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“SOUND”**.

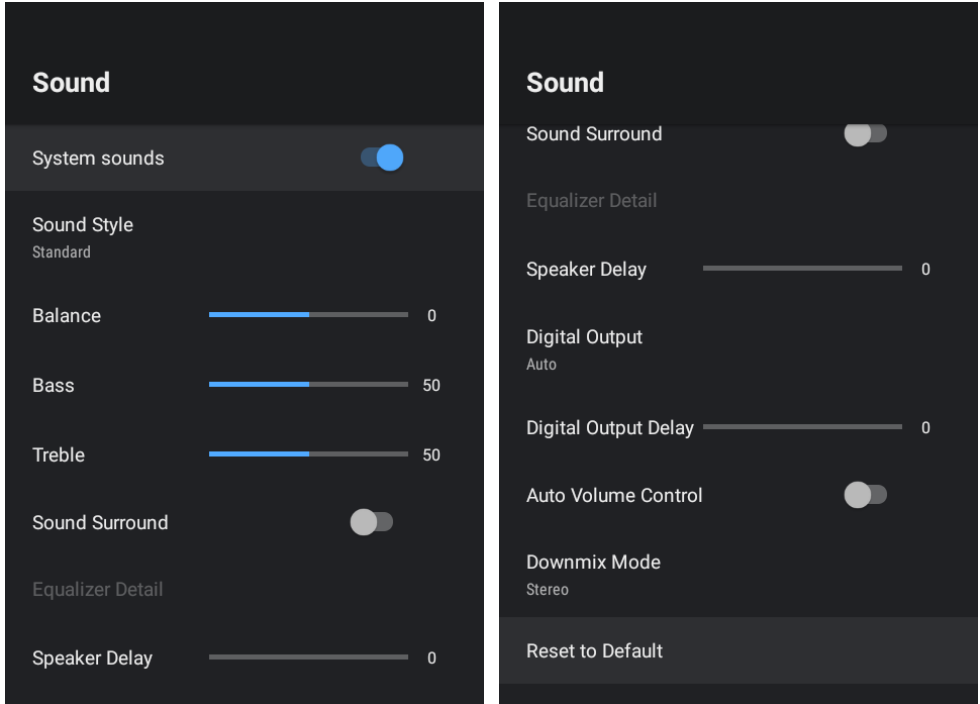


- Sound Style -** Options to choose from - Standard, Vivid, Sports, Movie, Music, News, User.
- Speakers -** Monitor Speakers or External Speaker
(This will force the Monitor to output sound through the chosen option).
- Digital Output -** Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital.
(It is recommended to select **AUTO**, as this will automatically detect quality of sound being procued by content).

HOME SCREEN

To access **HOME SCREEN** menu,

 
1. select **SETTING icon (#5 on page 19)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“HOME SCREEN”**.

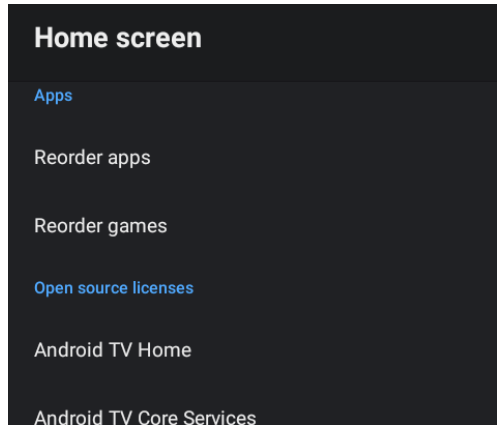

SCREEN SAVER

To access **SCREEN SAVER** menu,

 1. select **SETTING icon (#5 on page 19)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“SCREENSAVER”**.

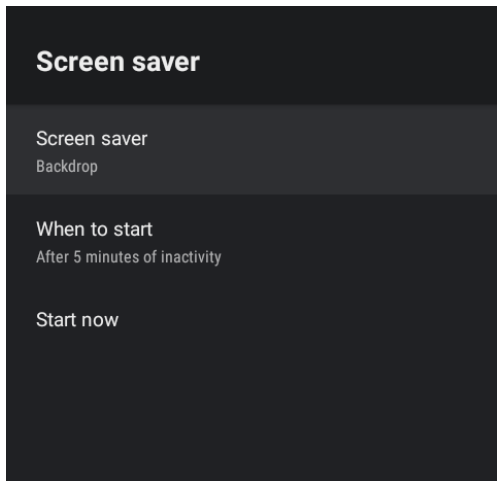


GOOGLE ASSISTANT

To access Google Assistant in the Settings menu

1. Select **SETTING icon (#5 on page 19)** via the HOME screen.
2. Select **“Device Preferences”**
3. Then go down and select **“Google Assistant”**.

 Accounts will only be accessible if you have connected a Gmail account on Google Play.
A Gmail account is needed in order to download and install applications on Google Play.

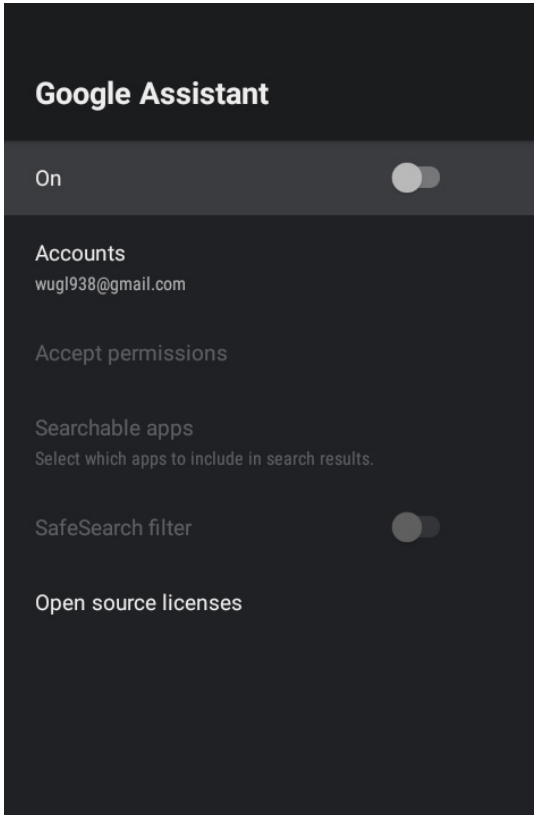

FAQS

 
MY REMOTE CONTROL ISN'T PAIRING WITH MY SMART MONITOR?

If your remote control is not pairing or becomes disconnected, please reconnect it and pair it again in the Settings menu:

1. Press **SETTINGS** Icon
2. Select "**REMOTES & ACCESSORIES**"
3. Select "**ADD ACCESSORY**"
4. Press **BACK & VOL-** buttons at the same time for 3 seconds.
Once you detect your Bluetooth Remote control, the remote will automatically start to pair.

If it doesn't connect, try the process again until it pairs, otherwise contact our call centre: info@ayonz.com


NOTE: NOTE: You can still use your remote control without pairing. However, Google Assistant will not be available until the remote control is paired.

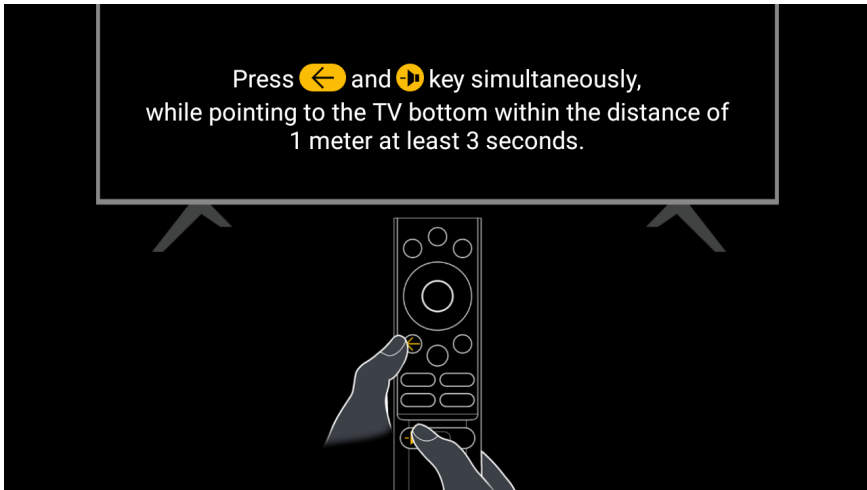

ANDROID MONITOR REMOTE CONTROL - APP

If you want to control your Monitor via your smart device. Search for: "Android Monitor remote control" app and download. Once following prompts to connect your smart device to your Android Monitor, you will then be able to control your Monitor from your smart phone.

SPECIFICATIONS

Operating System	Android™ 11 for Android Monitor™	
Resolution	1920 x 1080	
Display Colours	16.7 Million	
Contrast ratio:	4000 : 1	
Brightness	250 cd/m2	
Refresh Rate	60Hz	
ETHERNET / WiFi	Yes/ 802.11 b/g/n/a/ac	
Multimedia Playback Format under USB Mode	Movie: MPEG, TS, TRP, TP, MP4, MOV, 3GP, AVI, MKV, RM	
	Music: MPEG1, LPCM, DTS, DTS VORBIS, LPCM	
	Photo: JPEG, PNG, BMP, MPO	
Power Source	DC 12V 4A	
Power Consumption	48W	
USB	5V  max. 500mA	
Dimensions	With stand: 715 (w) × 198 (d) × 512.8 (h) mm	
	Without stand: 715 (w) × 38 (d) × 419.2 (h) mm	
Accessories	1 x Instruction Manual	2 x AAA Batteries
	1 x Remote Control	Monitor Stand with screws
	1 x Warranty Card	



CUSTOMER SUPPORT:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd