

CAR MULTIMEDIA

SAN MARCOS 370 - 9" & 10.1"



Enjoy it.

Operating instructions

NOTE: Please do not watch videos or use Apps while the vehicle is in motion. Doing so, is a safety violation. To watch videos or use Apps, please ensure that the vehicle is in parked mode with handbrake activated. Please check compatibility of the device with your mobile phone before purchase. New phone software versions in the future may or may not be compatible with the device. In-Warranty replacement will not be applicable for non compatibility of mobile phone with the device.



- 1 Microphone
- 2 Reset button
Restore to default factory settings of the device.
Caution: All personal settings will be lost
- 3 POWER button
Turn ON/OFF device (Press and hold for more than 2 seconds)
In operation: Mute audio source (Short press)
- 4 HOME button
Return to home page at any point
- 5 BACK button
- 6 Increase volume
- 7 Decrease volume
- 8 Touchscreen user interface

Safety Notes	4	Steering Wheel Control Programming	14
Road Safety	5	Adjust General Settings	15
Placing the device in operation	6	Adjust Time	15
Switching ON / OFF	6	Useful information	15
Volume	6	Connection diagram	16
Main menu (Home)	6	Troubleshooting	17
Setting the reception area	6	Appendix	18
Radio mode	6		
Start radio mode	6		
Select memory bank	6		
Tuning into a station	6		
Storing stations manually	7		
Storing stations automatically	7		
Scanning stations	7		
Adjusting the seek tuning sensitivity	7		
RDS options	7		
Switching the AF function on/ off	7		
Switching priority for TA on/off.	8		
Switching the CT function on/off	8		
Selecting Program Type & Start			
Seek Tuning	8		
USB media playback	8		
USB data carrier	9		
Audio playback from USB	9		
Video playback from USB	9		
Image playback from USB	10		
Bluetooth mode	11		
Starting Bluetooth mode	11		
Registering Bluetooth devices	11		
Telephone mode	11		
Alphabetic search	12		
Audio playback via Bluetooth streaming	12		
WebLink	12		
Connect with Android phone	12		
Connect with iPhone	12		
External audio source	13		
Rear camera input	13		
Sound settings	13		
Equalizer	13		
Volume distribution (fader/balance)	13		
Steering wheel control	14		
Basic settings	14		
System Language	14		
Adjust Radio Region	14		

Safety notes

This car audio system was manufactured according to recommended and established safety guidelines in a state of the art facility. Even so, dangers may occur if you do not observe the safety notes in the instruction manual.

These instructions are intended to familiarise you with important functions.

- For best results, please read the user manual carefully and completely before using the car audio system.
- Always keep the user manual accessible to all users.
- Always handover the car audio system to any 3rd party along with these instructions.
- In addition, observe the instructions of the devices used in combination with this car audio system.

Symbols used

Below are the symbols used in this user manual, please go through them carefully.



CAUTION:

Warns about possibilities of any injuries that might occur.



DANGER:

Warns about damages to the DVD/CD drive (No applicable to all Series 900 Model)



LOUD VOLUME:

Warns about high volume

- ✓ Identifies a sequencing step
- Identifies a listing

General Warning

To avoid any injury or damage to yourself, your car and others, please make sure to do as following. Observe the following note to protect yourself against injuries:

- **Do not modify or open the device.** Do not do any unauthorised modification to the

device. In case you need any assistance, please visit the nearest service centre. The device should be open by an authorised person only.

- **Use as Directed:** this car audio system is intended for installation and operation in a vehicle with 12V (negative ground) vehicle system voltage. Observe the output limits of the device. Only an authorised specialist should perform repairs and installation, if necessary.
- **Installation Instructions:** You may only install the car audio system yourself if you are experienced in installing car audios systems, and are very familiar with the electrical system of the vehicle. For this purpose, observe the connection diagram at the end of these instructions. For self-installation make sure you have the right tools with you.
- **Use your device in such a way that you can always safely control your vehicle.** In case of doubt, stop at a suitable location and operate your device while the vehicle is parked. As the driver, you must not use the applications that will distract you from traffic (depending on the scope of functions of the device, e.g. viewing videos, searching for a destination) (Navigation equipped radios and other downloaded application)
- **Follow driving recommendations during the route guidance only if you are not violating any traffic regulations:** Traffic signs and traffic regulations always have priority over driving recommendations.
- **Always listen** at moderate volume to protect your hearing and to be able to hear warning signals (e.g. police sirens and other external alerts while driving). During mute phases (e.g. when changing the audio source), changing the volume is not advisable. Do not increase the volume during this mute phase.

Road safety

Observe the following notes about road safety:

To avoid any injury or damage to yourself, your car and others, please make sure to do as following. Observe the following note to protect yourself against injuries:

- Before using this unit, please read all related instructions carefully.
- Any damage to this unit caused by improper operations will void the warranty.
- Please do not watch videos or use other Apps while the vehicle is in motion. Doing so, is a Safety violation. To watch videos or use Apps, please ensure that the vehicle is in parked mode with handbrake activated.
- The below-listed applications while driving the vehicle may divert your attention from the traffic situation and may lead to serious accidents:
 - Using the navigation feature like entering the destination address
 - Video playback or watching any kind of video
 - Usage of internet via the browser
 - Use of connected phone via WebLink
 - Use or Download of Google PlayStore / Google Maps / YouTube is not permitted in the automotive environment
- You are advised to refrain from any activity which could possibly divert your attention while driving. The best way to use these applications is when your vehicle is parked in a safe location.
- To avoid short circuit, please do not dispose the unit into the water and please do not place or leave any kind of metal object (such as a coin or metal tools) in the unit.
- Please operate the unit as per this Manual, it is not allowed to open the unit for maintenance; In case if maintenance is required, please seek professional help.
- After the car engine is off, please do not use the car audio for a long time, otherwise, the battery could be drained.

Instructions to read this User Manual

Illustrations are used in this manual to explain operations and precautions. The illustrations used in this manual are only for reference, please take the actual unit as standard.

Marks



Mark for important preventive measures; please read carefully to prevent any injury.



Mark for a special explanation, auxiliary interpretation, imitation and references.



Mark for additional information to operate this unit. Warm notes: When there is any difference between the Manual and the actual unit, please take the actual units as standard.

Cleaning notes

- Solvents, cleaning and scouring agents as well as dashboard spray and plastics care products may contain ingredients that will damage the surface & screen of the audio system.
- Use only a dry or slightly moistened cloth for cleaning the audio system.

Disposal notes

- Do not dispose of your old unit/batteries in the household trash.
- Use the return and collection systems available to dispose of the old device.

Scope of delivery

The scope of delivery includes:

- Car Audio System
- Wiring Harness
- External Microphone
- Installation Screws

Placing the device in operation

Switching ON/OFF

Switching on/off with the rotary / pushbutton

- For switch-on, hold the [⏻] button pressed for more than 2 seconds.
- For switch-off, hold the [⏻] button again.

Switching on/off via vehicle ignition

If the car audio system is connected with the vehicle ignition and it was switched off with the POWER button, it is switched on or off with the ignition.

Volume

Adjusting the volume You can adjust the volume in steps from 0 (off) to 40 (maximum).

- Press [⏮]/[⏭] to change the volume.

Main menu (Home)

In the main menu, you press the buttons on the touchscreen to call up the different sources and operating modes.

- In the current source, press the [🏠] button. The main menu is displayed.



[🏠] Enter standby mode

[⚙️] Enter settings menu

[🖼️] Change the wallpaper

Note:

- Some sources can't be selected if the external devices aren't ready.
- The figures used in these instructions are intended to facilitate the explanations and details may deviate from your device.

Setting the reception area

This car audio system is designed for operation in different regions with different frequency ranges and station technologies.

- In the main menu, press the [🏠] button. The Settings menu is displayed.
- Tap on the [📶] button to display the list of available reception areas. The current setting is highlighted.
- Select the desired reception area by clicking.
- Press the [🏠] button. The main menu is displayed again.

Radio mode

Start radio mode

In the main menu, press the [Radio] button. The radio playback menu is displayed.



Select memory bank

Different memory banks and wave bands are available. Up to 6 stations can be stored in each memory bank.

- Press the [📶] button repeatedly until the desired memory bank is displayed.
FM1 -> FM2 -> FM3 -> AM1 -> AM2 -> Fm1

Tuning into a station

Tuning into stations manually

- Briefly press the [⏮] or [⏭] button once or several times to change the frequency in increments.

Enter broadcast frequency directly

If the frequency of the desired stations is known, it can be entered directly via the touchscreen.

- ☞ Press the [] button.
A numeric keypad is displayed for the frequency input.
- ☞ Enter the frequency of the desired station with the numeric keypad.
- ☞ Press the [**OK**] button.
- ☞ The radio playback menu is displayed, the station of the frequency entered is played back. Starting station seek tuning
- ☞ Press the [] or [] button for approx. 2 seconds to start station seek tuning.
The radio tunes into the next receivable station.

Note:

For the reception area Europe: In the FM waveband, only traffic information stations are tuned into if the priority for traffic information is switched on.

Storing stations manually

- ☞ Select the desired memory bank with the [] button.
- ☞ Set the desired station. or Press one of the memory buttons [**P1**] - [**P6**] for approx. 2 seconds to store the current station at the button.
The station is stored.

Storing stations automatically.

You can automatically search for and store the strongest reception in the region in the current memory bank. Any previously stored stations in this memory bank are deleted in the process.

- ☞ Select a memory band.
- ☞ Press the [] button.
The tuner starts the automatic station seek tuning. After the storing is completed, the radio plays the station at memory location 1 of the previously selected memory band.

Note:

For European Reception Area: If traffic announcements feature is switched ON, only stations with TA enabled broadcasts are stored in the memory bank.

Scanning stations

You can use the scan function to play all the receivable stations of the current waveband for a few seconds.

- ☞ Press the [**PS**] button.
The seek tuning searches for stations in the current waveband. Each receivable station is played for a few seconds in the process.

Adjusting the seek tuning sensitivity

The seek tuning sensitivity decides whether the automatic station seek tuning finds only strong stations or also weaker stations that may be noisy.

- ☞ Press the [**LOC**] button to adjust the sensitivity of station seek tuning.
If **LOC** is on, only stations with a strong signal are found during seek tuning.
If **LOC** is off, stations with a strong and weak signal are found during seek tuning.

RDS options

Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the reception area Europe that allows additional functions, such as the display of the  tion name.

- ☞ Press the [] button to show RDS options.

Switching the AF (alternate frequency) function on/off

If the AF function is activated, the car audio system automatically tunes into the best receivable frequency for the station that is currently set.

- ☞ Press the button right to [**AF**] to switch the AF function on or off.
The **AF** button is illuminated if the AF

function is switched on.

Switching priority for traffic announcements on/off

In the reception region Europe, a FM station can identify traffic announcements via RDS signal. If priority for traffic reports is switched on, a traffic report is automatically switched through, even if the car audio system is currently not in radio mode.

☞ Press the button right to [**TA**] to switch the priority for traffic announcements on or off.

The **TA** button is illuminated if the priority for traffic announcements is switched on.

Switching the CT (Clock Time) function on/off

Some stations broadcast the time and date within the encoded radio data system signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

☞ Press the button right to [**CT**] to switch the clock time on or off.

NOTE:

Stations broadcasting close to time zones may not broadcast the correct time in your particular area. In this case, turn CT Off and manually set the time.

Selecting Program Type and Start Seek Tuning

You can select a programme type with the PTY function to purposefully search for stations, for example, that broadcast rock music or sport events. 

☞ Press the button [] on Radio menu to display the programme types.

Scroll up/down a program with the selected program type, it locks on to it and commences playback.

USB media playback

Basic information

The car audio system can be used to play MP3 or WMA files on USB data carriers.

In addition, you can view movies and images from USB data carriers on the display or a connected monitor.

For safety reasons, the playback of movies and images on the integrated monitor is allowed only while the vehicle is in parked mode and the handbrake is applied. The "BRAKE" cable must be connected with the hand brake connection of the vehicle (see Connection diagram at the end of these instructions). The movie playback on an external monitor is also possible while driving.

Notes:

☞ Blaupunkt cannot guarantee the flawless function of USB data carriers available on the market.

Note the following information when preparing an MP3/WMA data carrier:

- ☞ Naming of tracks and directories: Max. 32 characters without the file extension ".mp3" or ".wma" (the use of more characters reduces the number of tracks and folders that the car audio system can recognise)
- ☞ File system: FAT/FAT16/FAT32
- ☞ File extension of audio files:
 - .MP3 for MP3 files
 - .WMA for WMA files
- ☞ WMA files only without Digital Rights Management (DRM) and created with Windows Media® Player version 8 or later
- ☞ MP3 ID3 tags: Version 1 and 2
- ☞ Bit rate for creating audio files:
 - MP3: 32 to 320 kbps
 - WMA: 32 to 192 kbps
- ☞ Maximum number of files and directories:
 - USB medium: Up to 10,000 entries
- ☞ Supported audio format:
 - MP3/OGG/VVMA/FLAC/APE/WAV

- Supported video format:
MP4/MPEG/AVI/MKV

USB data carrier

This device features a USB port at the rear of the device.

Connecting a USB data carrier

- Insert the USB data carrier in the USB socket.

The device automatically switches to USB mode. The data is read and playback.

- Removing the USB data carrier

Turn off the car audio system.

Disconnect the USB data carrier.


Audio playback from USB

The principles of the audio playback (MP3/WMA) from data carriers are identical for all sources.

- Select the USB source via the main menu. The device changes to the USB source and the playback starts.

If the playback does not start with the audio playback,

- press the [≡] button to change to the folder/file list.
- Press the [🎵] button to display all the audio files of the data carrier.

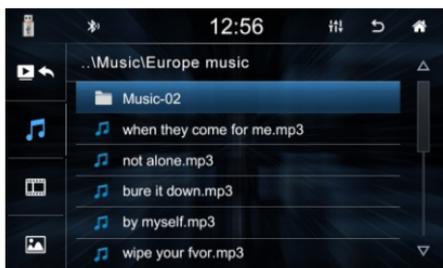

Briefly tap on the name of the folder/track. The folder is opened/the track is started.

After starting a title, the playback menu is displayed.



[↺ / ↻] Repeat/Random play

[⏮] Title selection

[⏸ / ▶] Interrupt playback & continue playback

[⏭] Title selection

[≡] Display the folder/file list.

Video playback from USB

- Select the USB source via the main menu.
- press the [≡] button to change to the folder/file list.
- Press the [🎬] button to display all the video files of the data carrier.



Note:

Folders and videos are selected and started as described under audio playback.

USB playback

If you selected a movie, the playback is started. During the movie playback, the playback menu is hidden.

- ☛ Briefly touch the touchscreen once to display the playback menu again. The playback menu is shown.



- [⏪] Select previous movie.
- [⏩] Interrupt playback & continue playback.
- [⏭] Select next movie.
- [↺ / ↻] Repeat/Random play.
- [🌙 / ☀] Select Day/Night mode.
- [📺] Select Normal/Full mode.
- [≡] Display the folder/file list.

Image playback from USB

- ☛ Select the USB source via the main menu.
- ☛ press the [≡] button to change to the folder/file list.
- ☛ Press the [🖼️] button to display all the images of the data carrier.



Note:

Folders and images are selected and start as described under audio playback.



- [⏪] Select previous image.
- [⏩] Interrupt playback & continue playback.
- [⏭] Select next image
- [🔄] Rotate the image
- [📺] Animation effects
- [📺] Select Normal/Full mode
- [≡] Display the folder/file list.

Bluetooth mode

The Bluetooth® function allows registering cell phones and media playback devices with the car audio system.

When you register a cell phone with the car audio system, you can make phone calls with the built-in hands-free function. You can access the lists of dialed numbers and the phone book of the registered cell phone.

If the connected Bluetooth® device supports the functions A2DP and AVRCP, you can play the music via the car audio system and control the playback. During a call, the music playback is interrupted and continued again after the call.

If a cell phone is registered via Bluetooth® and a call is received during the playback of another source, the source playback is interrupted and the call menu is displayed.

Starting Bluetooth mode

- In the main menu, press on [**Phone**]. The Bluetooth® menu is displayed. It contains the list of known Bluetooth® devices. Other audio sources are switched off.



Registering Bluetooth devices

If you want to register a device with the car audio system for the first time, proceed as follows:

- Ensure that Bluetooth® is activated at the car audio system and at your Bluetooth® device.
- Search for new devices/connections on your Bluetooth® device.

- The car audio system appears as "San Marcos 370" in the list of Bluetooth® devices.
- Establish the connection; you may have to enter the pairing code that was previously entered on the car audio system.

The connection is being established and the menu for the registered device is displayed.

Note:

If a telephone is connected with the car audio system, the Bluetooth® icon  is displayed at the top left of the display in all audio/video sources.

Once the phone is paired with the radio the below menu appears

Telephone mode

If you connected a phone with the car audio system via Bluetooth®, the following menu appears.



-  Display the dial keypad menu.
-  Call up records lists.
-  Call up the phone book.
-  Disconnect the device
-  Dial/Answer a call
-  End/Reject a call
-  Transfer the call to the phone


- Enter a phone number with the keypad and press the [] button.
Or
- Select a contact/number via the caller lists or phone book.
A call will be initiated.

If a call is coming in, the "Call in" number is displayed.

- [] Reject a call
- [] Answer a call

Alphabetic search

Press [] on the left bottom of the screen to access Phonebook. If you want to search a contact, press [] and enter the characters via the keypad.

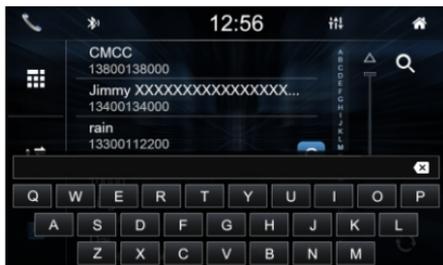

Once the phone is paired the screen on the device displays the numeric keypad and is ready to initiate a call.

Audio playback via Bluetooth streaming

If an audio streaming device is connected with the car audio system via Bluetooth®, you can play back the music via the car audio system and control the playback.

- Press the [Bluetooth Audio] button to change to the audio playback.



- [] Short press: Title selection.
- [] Interrupt playback & continue playback.
- [] Short press: Title selection.

WebLink

WebLink function allows this audio system to connect with a smartphone & display phone screen on the main screen of the radio.

By WebLink, you can synchronize the screen from your smart phone to the car multi-media player.

And you can also control your phone by the screen on the car multi-media player, such as receiving calls, dialing calls, listening to the music and watching movies or pictures from your phone, as well using navigation from the smart phone to the screen of the car multi-media player.

The function of the WebLink depends on the configuration of your smart phone.

Open the Main Menu and then touch [WebLink] to enter WebLink menu.

Connect with Android phone

- Correctly connect your phone to the unit by USB wire. (Original Data USB Cable Recommended)
- Make sure that the WebLink App is installed on your phone.
- After connection, operate according to the screen software.

Connect with iPhone

- Scan for Bluetooth devices and select this system for connection. (Refer to the chapter Bluetooth Mode)
- Connect your iPhone with the unit by USB Wire. (Original Data USB Cable Recommended)
- After connecting successfully, the screen of your iPhone will synchronize to the unit's display.

Tips:

- For your driving safety, please do not use the function during driving.
- Since the mobile phone data cable differs by brand, it is strongly recommended using the original USB data line to connect so as to guarantee the connection stability.
- Due to variations in the performance and standard features of mobile phones, the performance of WebLink may vary with

each individual brand of mobile phone.

- BPIN can not guarantee the compatibility of all phones with this device.

External audio source

Audio Input - Aux-in

This device features AUX input for audio playback.

- Start the Aux-in mode with the button [AUX]. The display shows the audio or video playback of the selected AUX source.

Rear camera input

This device features a video input at the rear of the device for connecting a camera that is available as an option.

If a rear camera is connected, the image is displayed on the screen, when the reverse gear is engaged.

You can also visit the camera view by selecting [Camera view] on the main menu. In this view, Brightness/Contrast/Colour can be adjusted. By selecting "Camera View" on the main menu the rear camera view, if connected, is displayed on the screen. On this page, Brightness/Contrast and Color can be adjusted.

Sound settings

Equalizer

You can adjust the equalizer for all sources.

- Press [EQ] on the menu of the current audio source.

The equalizer menu is displayed.



- Select a preset equalizer via preset buttons - Flat/POP/Classical/Rock/Jazz/User.

-Or-

- Press the [User] button to adjust the level of the available frequency bands according to your preferences.

Note:

With the [EQ] button, you can reset the customised setting again.

-Or-

- Press the [Flat] button for a linear sound playback.
- Press the [Loud] button to increase bass and treble at low volume.

Volume distribution (fader/balance)

You can adjust the volume distribution in the vehicle for all sources.

- Press the [EQ] button in EQ menu. The menu for fader & balance is displayed.



- Hold and drag the cursor to adjust fader and balance.

Steering wheel control

Select [] in the Settings menu to enter SWC setting

- Touch number button to select a SWC button.
- Select a function icon on the screen.
- Long press a steering wheel button.
- Repeat step 2 and 3 until all the settings are done.
- To reset the programming, touch [].




Basic settings

In the settings menu, you can adjust the basic settings for the different functions of the device to your requirements.

- In the main menu, press the [] button. The settings menu is displayed.
- Call up the submenus with the buttons in the lower area of the settings menu.


System Language

- Touch [], if necessary.

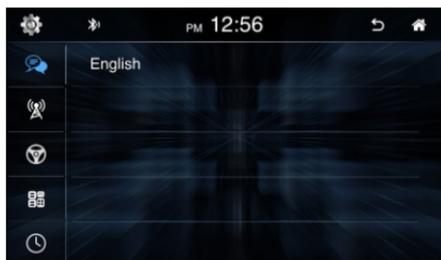

Adjust Radio Region

- Touch [(X)].
- Select a radio region that matches your location.

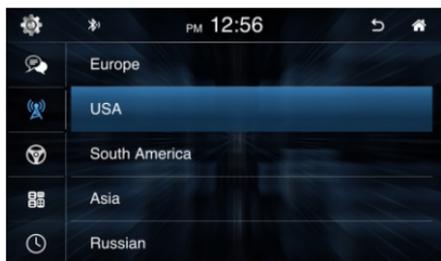


Steering Wheel Control Programming

Refer to previous page.

Adjust General Settings

Touch [].

The following settings are possible:

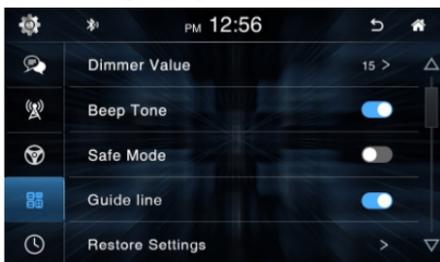

Dimmer Value: Adjust the display brightness

Beep Tone: Switch confirmation beep on/off

Safe Mode: When in Safe "On" mode, the screen will display WARNING information if you play a video. The warning screen will prevent the driver from watching videos for safety.

Guide line: Enable/Disable Guide line at reverse mode.


Restore settings: Resets all personalised settings.

Back camera Input: Enable/Disable Back camera Input.

System information: Display the information of software version.

Adjust Time

Touch [].

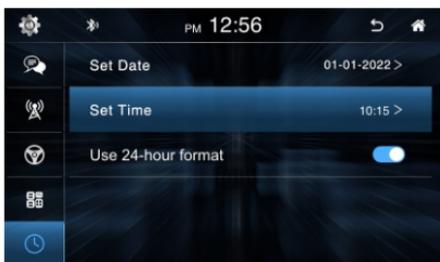

Set Date - Set the date

Set Time - Set the time

Use 24-hour format - Select between 12 & 24-hour mode

Useful information

Warranty

We provide a 1 year manufacturer's warranty for products bought within the India. For devices purchased outside the India, the warranty terms issued by our respective responsible domestic agency is valid.

Register **ONLINE** within **15 days** of **PURCHASE** to activate **WARRANTY**.

The procedure to activate the warranty is given below;



INSTRUCTION CARD
for Warranty Registration.

Please activate your **1 Year** warranty within
15 days of purchase.

To activate your e-warranty, please follow the below steps:

Step 1. Please SMS
<serial number> to **07760962759**

Step 2. In response to the sent SMS, you should receive back a link via SMS, please **Click** on it

Step 3. Complete a simple form to register your product & activate e-warranty.

E-user manual is available at www.blaupunktcar.in and upon completion of registration.

Should you require further assistance, please call: Customer Support 1800 209 6820 OR Email us: info@blaupunktcar.in

Note: WARRANTY not applicable if bought from third party online portals.

Service


If your device should need service or to get more information about our local authorised service center, you can email us at

Email: Support@blaupunktcar.in

OR

Call **1800 209 6820**

Connection diagram

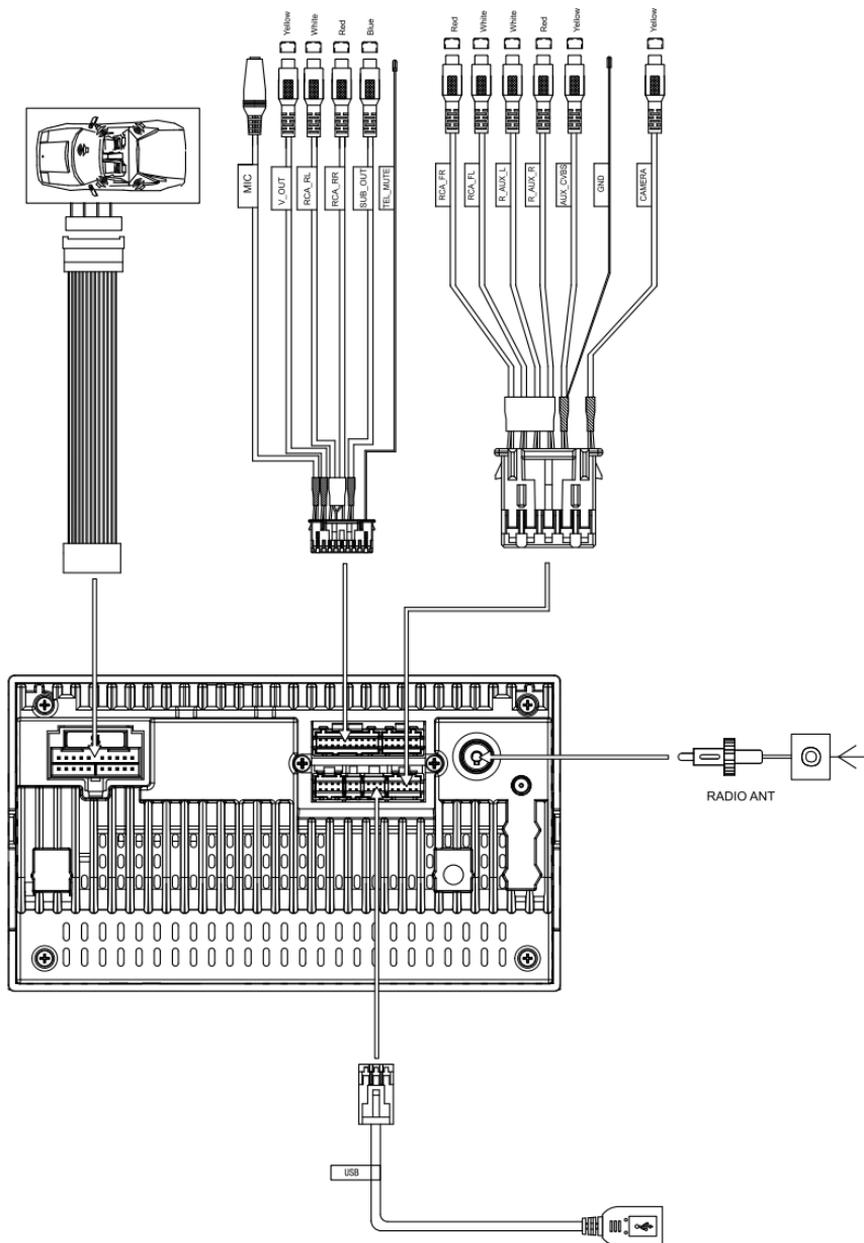

Troubleshooting

What appears to be trouble is not always serious. Please check the following points before calling a service center.

Problem	Cause	Corrective action
General		
Unit does not Power ON	Unit fuse blown.	Install new fuse with correct rating.
	Car battery fuse blown.	Install new fuse with correct rating.
	Illegal operation	Reset the unit.
Remote control does not work	Battery depleted.	Change the battery.
	Battery installed incorrectly.	Install the battery correctly.
No/low audio output	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off	Incorrect connection between ACC and BATT.	Check wiring and correct.
TFT monitor		
Warning information is shown at all times	Parking break wiring is not correct.	Check wiring and correct.
Flashing image or interference appears on screen	Video cable damaged.	Replace cables.
	Improper video signal connections.	Check wiring and correct.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Windows® and Windows Media® are registered trademarks of the Microsoft Corporation in the U.S.A. and/or other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Supported audio format: MP3/OGG/WMA/FLAC/APE/WAV

Supported video format: MP4/MPEG/AVI/MKV

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.



iPhone model names

- iPhone 12 Pro Max
- iPhone 12 Pro
- iPhone 12
- iPhone 12 mini
- iPhone SE (2nd generation)
- iPhone 11 Pro Max
- iPhone 11 Pro
- iPhone 11
- iPhone XS Max
- iPhone XS
- iPhone XR
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s

