

**BLAUPUNKT**

DIGITAL VIDEO RECORDER  
**BP 2.2 FHD**



**DE** Bedienungs- und Montageanleitung

**EN** Operating and installation instructions

**PL** Instrukcja obsługi i montażu

**ES** Manual de uso e instalación

**FR** Notice d'emploi et d'installation

**HU** Használati és beszerelési útmutató

**IT** Manuale di installazione e d'uso

**NL** Bedienings- en installatiehandleiding

**PT** Instruções de utilização e montagem

**SV** SE Bruks- och monteringsanvisning

**Enjoy it.**



## CAUTIONS

- Set correct time in System Menu before first use.
- Please insert a micro SD card in the right direction to avoid damage to the card slot in the DVR. If DVR shows error message, please format the micro SD card from DVR menu. Please reset DVR or change micro SD card if similar error occurs.

 
**NOTE:** All files will be deleted when formatting micro SD card, please backup important files before formatting the micro SD card. When reset function is selected, the settings will return to default setting.

- **It is recommended to use micro SD card CLASS 10 or above. Not all micro SD cards behave the same as their specifications may vary. Please test micro SD card compatibility before purchasing micro SD card.**
- Micro SD card should be formatted with DVR before first use. Backup important recording files once a week to avoid files from being overwritten. Please format micro SD card once every month for recording stability.
- The last file will be lost if micro SD card is removed from DVR while in ON condition or if the power to the DVR is interrupted.
- Please ensure the provided holder (mounting bracket) is installed correctly and firmly on windscreen to avoid damage to DVR and for better recording angle.
- Battery life-span will continuously decrease with usage. Please charge battery once every month to preserve battery in the event the device is not used for long period.
- Please do not use DVR in wet or damp environment as this DVR is not waterproof/water resistant.
- Please do not record or take picture directly facing sunlight.
- To obtain clear image, please clean windscreen and DVR lens regularly. Avoid using DVR in a dusty environment.
- Please handle DVR with care and avoid direct impact on DVR. Also, this DVR may malfunction when used in a high electromagnetic environment.
- Operating temperature of DVR is -10°C to 60°C, storage temperature is -20°C to 70°C. Continuous exposure to sunlight, especially when locked in cabin temperature can exceed 70°C. This may cause the DVR to malfunction, change color, case housing & image distortion.

## **DISCLAIMER**

---

- In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of our products.
- This device is NOT intended to be used for illegal purpose, surveillance and shall not be used in any form as evidence for claim purpose.
- Some countries prohibit drivers from mounting anything on the windshield, or restrict mounting to specific areas of the windshield. It is the owner's responsibility to mount the DVR in compliance with local laws.
- Error messages may appear depending on the environment it is used in and in when there's low battery voltage in the vehicle.
- Blaupunkt is not liable/responsible for non-recording of events, missing files, ect.

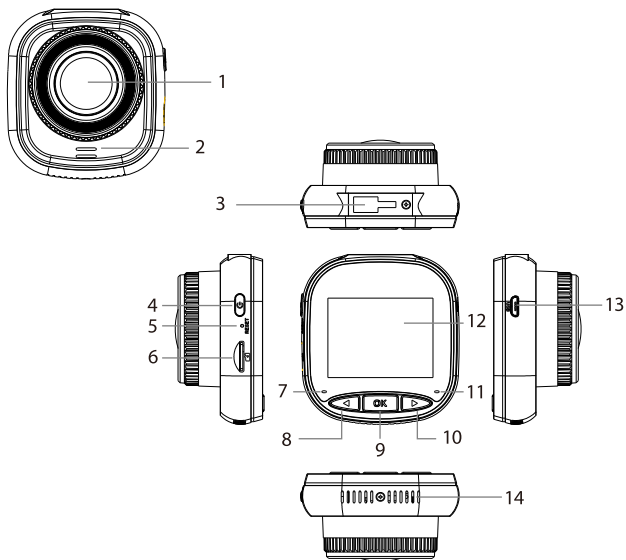









- 01. Lens
- 02. Speaker
- 03. Holder Socket
- 04. Power Key
- 05. Reset
- 06. Micro SD Card Slot
- 07. Charging Indicator Light









- 08. UP/MENU Key
- 09. OK Key
- 10. DOWN/MODE Key
- 11. Recording Indicator Light
- 12. IPS Screen
- 13. USB Power Port
- 14. Internal Heat Dissipation Provision

## OPERATION

---

MODE	NUMBER	ICON	KEY	ACTION
VIDEO MODE	4		Power Key	Long press to power ON/OFF; Short press to make screen ON/OFF
	8		UP / MENU Key	Long press to enter /exist video menu settings; Short press to turn ON/OFF audio recording
	9		OK Key	Shot press to start/pause recording
	10		DOWN / MODE Key	Long press to switch among Video Mode/Photo Mode /Playback Mode
PHOTO MODE	4		Power Key	Long press to power ON/OFF; Short press to make screen ON/OFF
	8		UP / MENU Key	Long press to enter /exist photo menu settings
	9		OK Key	Short press to take a photo
	10		DOWN / MODE Key	Long press to switch among Video Mode/Photo Mode /Playback Mode

## OPERATION

MODE	NUMBER	ICON	KEY	ACTION
PLAY- BACK MODE	4		Power Key	Long press to power ON/OFF; Short press to make screen ON/OFF
	8		UP / MENU Key	Long press to enter /exit playback menu settings; Short press to go to the previous file
	9		OK Key	Short press to start/pause to play; Long press to switch from <b>between</b> DCIM file and LOCKED file
	10		DOWN / MODE Key	Long press to switch among Video Mode/Photo Mode /Playback Mode; Short press to go to the next file
MENU SETTINGS	4		Power Key	Long press to power ON/OFF; Short press to make screen ON/OFF
	8		UP / MENU Key	Long press twice to enter menu settings; Short press to go to the previous item
	9		OK Key	Short press to select/confirm
	10		DOWN / MODE Key	Long press to exit menu settings; Short press to go to the next item

# FUNCTION



---

## Key Features

01. 2.0" IPS screen with better display quality
02. Voice/Mute shortcut key
03. Screen ON/OFF shortcut key
04. Lock/unlock file manually shortcut key
05. Built-in microphone&speaker
06. Car number display in the video
07. Support parking monitoring
08. Support G-sensor, motion detection, loop recording
09. Support Photo taking, Playback, Automatic Recording upon ignition
10. CE & ROHS certificated

## A. On/Off

### Power On

Long press  Power key to switch ON DVR and enter video mode. Short press  OK key to start recording. When the DVR is connected to the 12V charger in the vehicle, it will AUTO commence recording when the ignition is turned ON. Once the ignition is turned OFF, the DVR will automatically save the last file and shut down after 10 seconds.

**Note:** Upon turn ON, the display screen will show 'PLEASE INSERT SD CARD' in case a Micro SD card is not inserted. Please insert Micro SD card ONLY after the DVR is in OFF condition.

### Power Off

Long press  Power key to switch OFF DVR while it is in either STANDBY or ON mode.

 
**Note:** When the built-in battery is closed to being drained out, the DVR display will show a 'Low Battery' warning and switch OFF. It automatically saves the last file before it shuts down.



## B. Battery Charging

With 12V car charger (provided)


**Note:** While the DVR is plugged in to the 12V charger, the charging indicator will be steady RED. Once it is fully charged, the charging indicator will switch OFF.

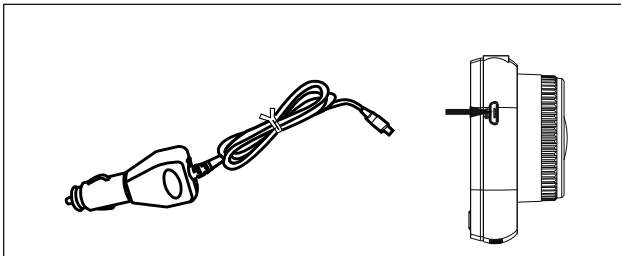

## C. Inserting Micro SD Card

It is recommended that while inserting the micro SD card into the provided slot, no force is to be applied. Once it is determined that the micro SD card has been inserted the correct side, we suggest that the card be pushed down till it locks into position in the slot.

 Removing micro SD card: Briefly push down on the top of the micro SD card until it is released from its locked position and then pull it out (It is suggested to remove the micro SD card when the DVR is in OFF mode).

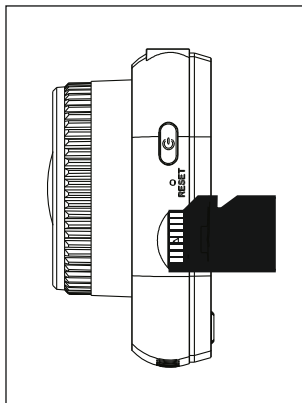

## FUNCTION

---

### D. Holder Push in and Take out


Please push the holder into holder socket of DVR in the direction of the arrow. When taking out the holder, please take it from the windshield first and then take out from the DVR in the opposite direction of the arrow.




 


### E. Video

Power on DVR to enter into video mode and it starts to record automatically. The blue indicator blinks when connected to the 12V car charger. Press OK key to stop recording and save the last file. The DVR goes into standby mode with the recording indicator light glowing a steady blue.

In standby mode, short press  OK key to restart recording.

When recording, long press  DOWN/MODE key to lock or unlock the videos manually. The locked video will not be overwritten while the DVR is in loop recording.



 




In video mode, short press  UP/MENU key to turn ON/OFF sound recording. Check icons  and  displayed on the screen. Long press  UP/MENU key to go to video settings.

### F. Photo

In video Standby mode, long press DOWN/MODE key to enter into photo mode. Short press OK key to take photos with shutter sound.



In photo mode, long press UP/MENU key to go to photo settings.

## G. Playback and Delete


In video Standby mode, long press  DOWN/MODE key twice to enter into playback mode. Short press  UP/MENU key and  DOWN/MODE key to select the file and then press  OK key to start or pause. Long press  OK key to switch between DCIM and LOCKED folders to view videos and photos. If you want to delete the file, long press  UP/MENU key to enter into the menu. Select from File delete and Protection options. Long press  UP/MENU key to go back to previous menu.

**Note:** Protection will lock/unlock a file manually. Once the file is locked, it won't be overwritten while the DVR is in loop recording and can only be deleted manually.

## H. G-Sensor

In case of emergency braking or a collision, the G-sensor will be activated to save and protect the current video clip from being overwritten automatically and will be shown with a  key and  G-sensor icon that appears at the top middle of the screen. Three setting options are available (High, Medium & Low). Medium is most recommended.

## I. Motion Detection

In video standby mode, long press  UP/MENU key to go to the video menu and turn on motion detection. When DVR detects a moving object, it starts to record automatically. If there is no movement in front of the lens for 20 seconds, DVR will stop recording automatically and go into Standby mode until movement is detected.

When motion detection ON, the icon  is displayed on the screen. Short press  OK key while in recording mode to turn OFF motion detection.



**Note:** Once motion detection is turned ON, it will take around 20 seconds to be activated to work.

## FUNCTION

---

### J. Parking Monitoring





Parking monitoring is for security monitoring while the vehicle is parked.

Once Parking Monitoring ON is selected in the video menu, the screen will display the  icon. Once the vehicle ignition is turned OFF, the DVR will power OFF. In case the DVR detects any vibration, it will power ON to record for 20 seconds automatically with a  key icon displayed at the top middle of the screen and then power OFF. If there is continuous vibration, DVR will turn ON again to record for 20 seconds until the built-in battery is drained completely. All videos created in Parking Monitoring mode without external power supply will be available in the LOCKED folder in the Micro SD card and not overwritten while the DVR is in loop recording.

If Parking Monitoring option is kept ON while the vehicle ignition is ON and the car charger provides power, only the first video will be locked.

Three setting options are available (High, Medium & Low). Medium is most recommended.

### K. Car Number Display

Long press  UP/MENU key to set Car Number Display ON in the video menu. There are total of 10 digits that can be entered. Select  DOWN/MODE key to enter numeric information '0~9' and 'A~Z' for every digit. Once the correct information is entered, press  OK key to go to next digit and long press  UP/MENU key to exist settings.

**Note:** If Date Stamp is set to OFF, car number will not display on the screen and video even if Car Number is set to ON.

## SYSTEM MENU

In video Standby mode, long press ◀ UP/MENU key twice to enter into system menu. Press ◀ UP/MENU key and DOWN/MODE key to select the item and press OK OK key to confirm. Long press ◀ UP/MENU key again to exit.

EN

	MODE	CATEGORY	SUB-CATEGORY	DEFAULT
MENU	VIDEO MODE	Video Resolution	1080FHD 1920×1080, 720P 1280 × 720, WVGA 864 × 480, VGA 640 × 480	720P 1280×720
		Loop Recording	Off / 30 seconds / 1 minute / 2 minutes	1 minute
		Exposure	+3 – -3	0
		Audio Record	Off / On	On
		Motion Detection	Off / On	Off
		Date Stamp	Off / On	On
		G-sensor	Off / Low / Medium / High	Medium
		Parking Monitoring	Off / Low / Medium / High	Off
		Car Number	A – Z, 0 – 9	
		Car Number Display	Off / On	Off

# SYSTEM MENU

---

	MODE	CATEGORY	SUB-CATEGORY	DEFAULT
MENU	PHOTO MODE	Capture Mode	Single Shot / 2s timer / 5s timer / 10s timer	Single Shot
		Photo Resolution	10M / 8M / 5M / 3M / 2M / 1M / VGA	8M
		Burst	Off / On	Off
		Quality	Fine / Normal / Economy	Fine
		Sharpness	Strong / Normal / Soft	Normal
		White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent	Auto
		Color	Color / Black & White / Sepia	Color
		ISO	Auto / 100 / 200 / 400	Auto
		Exposure	+3 - -3	0
		Steady Shot	Off / On	Off
		Quick Preview	Off / 2sec / 5sec	Off
		Date Stamp	Off / On	On

# SYSTEM MENU

	MODE	CATEGORY	SUB-CATEGORY	DEFAULT
MENU	PLAY-BACK	Delete	Delete Current? / Delete All?	
		Protection	Lock Current / Unlock Current / Lock All / Unlock All	
	SYSTEM MENU	LCD OFF	Off / 30sec / 1min / 2mins	Off
		Auto Power Off	Off / 3mins / 5mins / 10mins	Off
		Beep Sound	Off / On	On
		Language	English / Francais / Deutsch / Italiano / Espanol / Polski	English
		Frequency	50HZ / 60HZ	50HZ
		Date / Time	DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD	DD/MM/YYYY
		Format	cancel / ok	
		Default Setting	cancel / ok	
		Version	Current Software Version	

# MASS STORAGE

---

## Video & Photo Download

The Red power indicator and Blue recording indicator will light up when the device is connected to the computer via USB cable. Once the device is connected to the computer, device's screen will prompt three options for usage selection, **Mass Storage**, **PC Camera** and **REC Mode**.

### Mass Storage

- The screen will turn black with U DISK icon when Mass Storage is selected. Device will allow computer to access files in micro SD storage.
- There are two folders in the micro SD card-DCIM and LOCKED
- DCIM is the file folder for normal videos and pictures from the device
- LOCKED is the file folder for locked videos created by G-sensor and Parking Monitoring. All file names in this fold start with 'LOCK'.

### PC Camera

 
- Device will turn to black screen with CAMERA icon when PC Camera is selected. Device is now connected as an external PC camera.
- Please ensure the computer is installed with PC camera software before use.

### REC Mode

- Device will work normally when REC Mode is selected. Video recording and photo capture are available in this mode.



## CABLING DIAGRAM

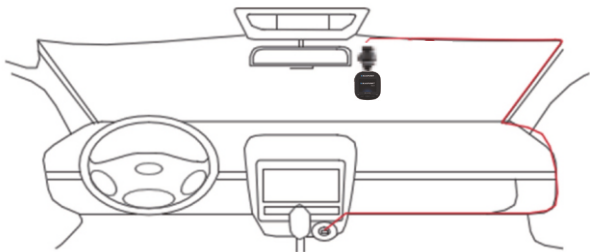

EN

## PRODUCT SPECIFICATION

Specification are subject to change due to continuous improvement without prior notice will be given.

CATAGORY	DEFAULT
Screen Size	2.0" HD IPS screen
Viewing Angle	120° diagonal wide viewing angle
Video Resolution	1080FHD 1920X1080 / 720P 1280x720 / WVGA 864X480 / VGA 640x480
Photo Resolution	10M/8M/5M/3M/2M/1M/VGA
Video Format	AVI
Image Format	JPG
Memory Card	Max. 32GB Micro SD Card (Class 10 or above)

## PRODUCT SPECIFICATION

---

CATAGORY	DEFAULT
Frequency	50HZ/60HZ
Power Port	USB 5V / 1A
Battery Capacity	300 mAH
Microphone/Speaker	Built-in
Loop Recording	Off / 30 seconds / 1 minute / 2 minutes
LCD Off	Support
Audio Record	Support
Date Stamp	Support
G-Sensor	Support
Motion Detection	Support
Parking Monitoring	Support
Car Number Display	Support
Language	English / Francais / Deutsch / Italiano / Espanol / Polski
DVR N.W.	52g
DVR Dimension	61.5(W) × 66(H) × 33(D)mm

## PACKAGE CONTENT

- 1 × DVR
- 1 × holder
- 1 × user manual
- 1 × car charger

### 01. DVR can't power on

- a. Please make sure if DVR is properly connected to the car charger. Since the built-in battery is only to save the last file in case of emergency, powering ON with the 12V car charger is suggested. It is recommended to ONLY use the 12V car charger that comes with the device, do NOT use a standard vehicle USB port.
- b. Reset DVR to default settings.

### 02. Stop recording or „Card Full“ Error Message

- a. CLASS 10 or above micro SD card is recommended. Micro SD card specification varies from one brand to another, which may not function as expected when using with this DVR. Please test for micro SD compatibility before purchasing.
- b. Usually caused by too many „locked“ files
- c. Go to settings, select Format, delete all data. If road conditions are too bumpy, this may also cause too many locked files on the micro SD card, in this case lower the G-Sensor sensitivity to Low.
- d. Rest the device by sticking in a sharp object(paper clip) into the reset hole.

### 03. „No Card“Error Message

- a. Please confirm that the micro SD Card is inserted correctly and „clicks“to lock. If not, the SD Card is most likely inserted wrong.
- b. Format SD card using the device(located in settings).

### 04. Date&Time are incorrect

- a. Reset the date and time in the System Menu. If the internal battery runs completely flat, then the device needs to be fully charged and the date/time will need to be re entered.

## **TROUBLE SHOOTING**

---

### **05. Blurry video or picture or horizontal stripe interference on image**

- Make sure all protective adhesive is off the lens and screen.
- Please clean the lens with soft cotton cloth and don't touch the lens. No dirt and fingerprints on the lens.
- Set the correct Frequency in System Menu.
- The quality of video and pictures will be affected in case front lighting and/or back lighting environment.

### **06. Battery only last 10 minutes or less**

- This is normal, the built-in battery is designed to save footage when the unit loses power.

### **07. The LCD shuts off when I'm driving**

- This is normal and please go to System Menu to check if LCD OFF set On. If yes, please set it OFF.

### **08. The device has frozen after quick-operating press**

- Please reset device
- To avoid the same issue, please wait at least 1 or 2 seconds to finish your last press before you start the next one, do NOT press buttons thick and fast.

### **09. The device has frozen/stopped working after recording for a while**

- Check if the micro SD card was formatted using the device (located in settings) before first use.
- Rest the device by sticking in a sharp object (paper clip) into the reset hole.
- Check the speed of the micro SD card. Class 10 or higher is recommended for the highest data transfer, especially if the file sizes are large.
- We always recommend that you make your purchase from a reputable vendor and steer from generic brands.

### 10. I get an error message „Picture error“ while attempting to play back a file

- a. There may be some corrupt data sectors on the micro SD card, please format the SD card using the Format option in System Menu.

### 11. Q11. Can't play back files (.mov and .jpg)

- a. The computer does not have the proper codec to play this file. Upgrade your Windows Media Player, QuickTime Player, etc.

### 12. My video/pictures of an incident are NOT there

- a. Check if the capacity of micro SD card is filled with many „locked“ files and hence there is not enough memory to record. Go to settings, Format, delete all data.
- b. The files may have been overwritten in a record cycle (loop recording).

### 13. The device is not turning ON

- a. Let the device remain plugged in to the 12V charging connector for about 10 minutes, sometimes due to storage and delivery, the battery may be completely drained, this is normal.

### 14. No voice in the video, no keypad tone, no G-Sensor, and no date & time

- a. There may be abnormal use to cause loss of function and please set “Factory Default” in the System Menu.

## **TROUBLE SHOOTING**

---

### **15. The DVR keeps auto ON & OFF continuously**

- a. Please turn OFF Parking Monitoring in MENU settings and then try again.
- b. Normally if Parking Monitor is ON, DVR will go to Parking Monitoring mode and automatically power ON for 20 seconds' recording once detecting vibration or shake. If there is no vibration any more, it will power OFF automatically too.

### **16. The DVR keeps auto start and stop recording continuously**

- a. Please turn OFF Motion Detection in MENU settings and then try again.
- b. If it is ON, it will auto go to record for 20 seconds once detecting movement in front of the lens. If there is no movement any more, it will automatically stop recording.





**BPIN Private Limited**

47, Atlanta Society, Nariman Point, Mumbai- 400 021. Maharashtra. India.  
info@blaupunktcar.in | www.blaupunktcar.in