



SMART MULTIMEDIA

MICHIGAN CITY 800 W



Enjoy it.

CAUTIONS

Safety Notes

This car radio has been manufactured according to established safety guidelines. However, dangers may still occur if the safety notes in this manual is not observed. This manual is intended to familiarize the user with the car radio's important functions. Read this carefully, prior to using the car radio. Keep this manual in an easily accessible location. In addition, do observe the instructions of the devices used in conjunction with this car radio.

Road Safety

Always observe the following notes for road safety:

- Car radio must be used in a way that compliments safety of the user when driving the vehicle. It is recommended for the user to park at an appropriate location when operating the car radio. While driving, user is not recommended to use applications that can be prone to distraction e.g. streaming to medias etc.
- User is advised to keep the volume of the car radio to a moderate level for the protection of the ears and to increase the ability to hear any emergency warning signals (e.g. police and ambulance sirens). Do not increase the car radio volume while the car radio is muted as it is not audible. The car radio volume can be too loud when the car radio is unmuted.

General Safety Notes:

Observe the following for protection against injuries:

 This car radio is intended for installation and operation in a vehicle with 12V vehicle system outage, hence the radio unit must be installed in a DIN slot. Observe the output limits of the car radio. Do not dismantle or modify the car radio. Installation and repairs, if necessary, should be performed by a specialist. We are not liable for any loss or damage caused or resulting from unauthorized disassembly or modification to the product.

- This car radio's core components may result to damage when the car is driven on bumpy roads for a prolonged period of time or if it is used to play non-standard or severely damaged discs.
- Please do not operate the car radio under extreme temperature conditions (extremely high temperature or extremely low temperature); make sure that temperature within the car ranges from -20°C to 70°C before you connect the car radio to the power supply.
- For abnormalities, please refer to the "Troubleshooting" section. If the problem cannot be resolved, please press the Reset button to recover its factory settings. Otherwise, please contact respective installer/seller directly for help.
- As SD/USB file formats, codecs, bitrate, resolution and other parameters available in the market are not all the same, there is no guarantee that this car radio can play all media file formats. Different cars may have different configurations. It is normal that some CAN-Bus functions cannot be enabled because it is not supported by the user's car or this car radio.
- Solvents, cleaning and scouring agents as well as dashboard spray and plastics care products may contain materials which can damage the surface and screen of the car radio. Use only dry or slightly moistened cloth to clean the car radio surface and screen.

This manual may be updated from time to time without any notice. Visit www.blaupunkt.com for more info.

1

CAUTIONS

Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products. Blaupunkt is not affiliated with Apple, Google or other Android smartphone devices.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

Disposal Notes



Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device.

Scope of Delivery

- User Manual
- Trim Ring
- GPS Antenna
- · External Microphone
- · Connecting Cables



Functions

1. Power Button

- · Press to turn on or press and hold to turn off
- · Press to mute or unmute

2. Increase Volume

3. Decrease Volume

4. Home Button

5. Voice Command Button (Siri/ Google Voice)

6. Seek Up Button

- · Press to turn to next song
- · Press and hold to fast forward

7. Seek Down Button

- · Press to turn to previous song
- · Press and hold to fast rewind

8. Radio/Band Button

Home Page





Radio

To enter Radio Mode, touch "Radio" icon on the Main Menu.



The detailed functions are described as follows:

- 1. Seek down
- 2. Preset Station List
- 3. Radio frequency
- 4. Seek up
- 5. FM/AM Band Switch button
- 6. EO Mode button
- 7. Keypad button
- 8. Auto Store button
- 9. Setup button

Auto Tuning

- Press the seek icon (I◀ or ➤) on the TFT Monitor screen to increase / decrease the
- tuning frequency one step at 0.1MHz increment.
- Press and hold the seek icon (◄ or ►)) on the TFT Monitor screen to seek the available channel by increasing or decreasing the tuning frequency.

FM and AM

 Touch the "BAND" on the screen to change among the following bands: FM-1, FM-2, FM-3 or AM-1 and AM-2.

Preset Stations

 Six(6) stored stations for the current band appear on the screen, touch the preset directly for use or press the number buttons located on the head unit.

Storing a Station

- 1. Select a station. (Example: FM1 103.6MHz)
- 2. Touch and Hold the desired preset number for 3 seconds to store Radio station

Recalling a Stored Station

- 1. Select a Band (If needed)
- Touch the preset button on which the corresponding radio station is stored or press the number button on the Radio panel.

USB Media

This operation supports below formats: Audio: MP3, CDA

Audio: NP3, CDA



- Adjust desired track time by dragging the small button on the progress bar line to left or right.
- 2. Track info.
- EQ : Select to adjust Equalizer setting.
- 4. List: Show the track list.
- 5. I : Return to previous track or press & hold to rewind
- 6. ▶ / **| |** : Play or pause the track.
- 7. ▶ Go to next track or press & hold to fast forward
- 8. 🗘 : Repeat a folder or track.
- ⊃¢: Active/deactivate the track in random mode.
- 10. Music/Video List.
- 11. ☐: Go back to previous folder.
- 12. Player: Touch to play track list.
- 13. Folder.

Settings

Setup operation allows you to change setting, such as setting the clock, turning On the Bluetooth function, adjusting the screen brightness, setting the audio, screen calibration, etc.

Settings





Setting	Options	Functions
Date & Time	-	To adjust calendar date
		& time.
Time Format	12Hr/ 24Hr	Choose clock 12H/24H
		format.
Beep	On/ Off	Activation/Deactivation
		of beep sound when
		touch.
Time Zone	-	Select time zone.
Parking Brake	On/ Off	Bypass parking brake
Bypass		function.
Language	English/	Two language options.
	Traditional	
	Chinese	
Radio Area	Europe/	Choose Radio Area
	Asia	
Right Hand	On/ Off	-
Drive		
Microphone	Internal/	-
	External	

Audio Settings



Setting	Options	Functions
Equalizer	-	Balance and EQ setting.
Subwoofer	On/ Off	To activate/deactivate
		subwoofer.
Subwoofer	-7 to +7	Increase/decrease
Gain		subwoofer gain.
Loudness	On/ Off	Activate/deactivate the
		loudness.
Reversing	Half/ Full/	Decrease music volume
Volume	Mute	when reversing.
Volume	-	To adjust each music
Controller		mode volume.

Display Settings



Setting	Options	Functions
Brightness	0 to 20	Select the desired screen
		brightness.
Dimmer	Auto/ Day/	Lower down the screen
Mode	Night	brightness at dark
		condition.
Mirror Image	On/ Off	Mirroring camera input
		signal.
Reverse Assist	On/ Off	Activate reversing line
Line		when reversing.

Other Settings



of the
ctory
wheel

BT

Pre-pair BT

 Ensure mobile phone supports Bluetooth function before pairing. Different mobile phone will have different emissive power. To get the best connection, the recommended distance range is 3m without any object obstruction.

Pairing

- Turn on mobile phone's Bluetooth to set up. (Please refer to the instruction manual of the mobile phone on how to operate Bluetooth) "MICHIGAN CITY 800 W" should appear on your available Bluetooth scanning list.
- Select "MICHIGAN CITY 800 W" then insert password "0000", if password is required. Select confirm buttons when pairing prompt message appear. It will appear in white colour in the Home Page when pairing successful.

Apple CarPlay



- 1. Return to Main Menu
- 2. Page Indicator
- 3. Recently Used App
- 4. Home Button/Active Siri

Wired Connection

- 1. Connect an Apple CarPlay™ compatible device to this product via USB data cable.
- 2. Press the CarPlay™ icon (on Home Page) to connect

Wireless Connection

Before using Apple CarPlay™ wirelessly, turn on the Bluetooth/Wifi function on the Phone.

- 1. Press CarPlay icon on the main menu:
- 2. Press " " to confirm to use wireless CarPlay;
- 3. Press " Q " icon to search phone device. The available devices appear on the list:
- 4. Find the desired device on the screen and press "Pair";
- 5. A pass key will be displayed on the screen;
- 6. The same key appears on the iPhone, press "Pair" and then press "Allow" for the popups; 7. Press " \(\sigma\) " on the screen to confirm to
- connect: 8. Press "Use CarPlay" on the iPhone. The unit
- configures the connection then starts the application.
- 9. Tip: Press " " icon. Displays CarPlay device list. This icon appears Only When CarPlay is connected and two or more devices can be used as CarPlay Source.

How to use Apple CarPlay Requirement

- Lightning Data Cable
- iPhone 5s or later
- iPhone with iOS 7.1 or later
- Data Plan
- · May need to set the permissions for the carplay app on your phone, open Screen Time-->Contents -->Allowed app.

Phone Setup (Before you begin):

- 1. Apple CarPlay™ features may operate differently than on your Apple iPhone.
- 2. Message and data charges may apply when using Apple CarPlay™. Please check with your carrier.
- 3. Apple CarPlay™ relies on the performance of your phone. If you experience performance
- 4. Close all apps and then restart them again.
- 5. Disconnect and then reconnect your phone using the Apple Lightning cable that was provided with your phone is recommended.
- 6. When Apple CarPlay™ is active, your voice recognition system is disabled and you will be using Siri to make your requests.
- On your phone, go to Settings > General > Restrictions > CarPlay to allow CarPlay access.
- On your phone, go to Settings > General > Siri and ensure Siri is turned ON.
- On your phone, go to Settings > General > Carplay can adjust the position of the icon displayed on the car, with or without. The option with "x" can be deleted, and the search can be done by clicking the "+" sign below.

NOTE:

 For details about Apple CarPlav™, refer to the manual supplied with your iPhone, or visit the website of Apple CarPlay.

Siri



Apple CarPlay™ uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

- Touching and holding the Home icon on the CarPlay screen or
- Pressing the Voice Command Button on panel or Sterying Wheel, then say any of the following commands:
 - "Text <Name> 'Call you later'" to send a text message.
 - "Read text messages" to read available text message.
 - "Call <Name>" to make a phone call.
 - "Find <POI/Destination>" to locate a POI/Destination.



NOTE:

Ensure Siri feature is set to ON in your phone (**Go to Settings > General > Siri**).



Apple Maps

- Navigate your way by using Apple Maps or any other third party navigation app (e.g., Waze).
- Navigation app will display your destination and route options.

Apple Music



Android Auto



- 1. Activate Google Assistant™
- 2. Notification Button
- 3. Recently Used App
- 4. Android Auto Home Button

Wired Connection

- Connect an Android Auto[™] compatible device to this product via USB data cable.
- 2. Press the Android Auto™ icon (on Home Page) to connect.

Wireless Connection

Before using Android Auto™ wirelessly, turn on the Bluetooth/Wifi function on the Phone.

- 1. Press Android Auto icon on the main menu;
- 2. Press " " to confirm to use wireless Android Auto:
- Press " Q " icon to search phone device. The available devices appear on the list;
- 4. Find the desired device on the screen and press "Pair";
- 5. A pass key will be displayed on the screen;
- 6. The same key appears on the Android device, press "Pair" and then press "Allow" for the popups:
- 7. Press "✓" on the screen to confirm to connect:
- 8. The unit configures the connection then starts the application.
- 9. Tip: Press " " icon. Displays Android Auto device list. This icon appears Only When Android Auto is connected and two or more devices can be used as Android Auto Source

How to use Android Auto Requirement

- USB Data Cable
- Compatible Android[™] phone with OS Android 5.0 or higher
- Data Plan
- Android Auto App download from Google Play store
- Android Auto must be available in your country or region.

Phone Setup (Before you begin):

- 1. Android Auto™ features may operate differently than on your Android phone.
- Message and data charges may apply when using Android Auto™. Please check with your carrier.
- 3. Android Auto relies on the performance of your phone. If you experience performance issues:
- Close all apps and then restart them again or disconnect and then reconnect your phone
- 5. Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using Google voice actions to make your requests.

Google Assistant



Android Auto uses Google voice actions for many functions. A Google voice action session can be initiated on any screen by:

- Touching the Microphone icon on any screen.
- Pressing the Voice Command Button on panel or Sterying Wheel.

Such as making a Call:

Touch the Phone icon to access recent call list. Or you can initiate a voice action and then say "Call <Name>" or "Dial <number>" to make phone calls from any screen.

Navigation




Getting Directions

Press the Voice Command button then state your destination (e.g., Ok Google, navigate home.) or POI to activate a Google Search.

General

$\begin{array}{llllllllllllllllllllllllllllllllllll$
FM Stereo Radio
Frequency range87.5 - 108MHz
Preset memory stations18
AM/MW Radio Frequency range 531 - 1629kHz
Preset memory stations 12
Audio Specification
Frequency response50Hz-15kHz Parametric Equalizer8-Band
Frequency response50Hz-15kHz Parametric Equalizer8-Band
Frequency response50Hz-15kHz Parametric Equalizer8-Band
Frequency response50Hz-15kHz Parametric Equalizer8-Band Input USBAudio : MP3, CDA
Frequency response
Frequency response 50Hz-15kHz Parametric Equalizer 8-Band Input USB Audio: MP3, CDA Video: AVI, MP4 Aux-in RCA BT Hands-Free Calling: Accept/ Hang Up/
Frequency response 50Hz-15kHz Parametric Equalizer 8-Band Input USB USB Audio: MP3, CDA Video: AVI, MP4 Aux-in RCA BT Hands-Free Calling: Accept/ Hang Up/ Reject Call HFP
Frequency response 50Hz-15kHz Parametric Equalizer 8-Band Input USB Audio: MP3, CDA Video: AVI, MP4 NP4 Aux-in RCA BT Hands-Free Calling: Accept/ Hang Up/ Reject Call HFP Phone Book Access PBAP
Frequency response
Frequency response 50Hz-15kHz Parametric Equalizer 8-Band Input USB Audio: MP3, CDA Video: AVI, MP4 NP4 Aux-in RCA BT Hands-Free Calling: Accept/ Hang Up/ Reject Call HFP Phone Book Access PBAP Audio Streaming A2DP Streaming Audio Control AVRCP
Frequency response
Frequency response 50Hz-15kHz Parametric Equalizer 8-Band Input USB Audio: MP3, CDA Video: AVI, MP4 NP4 Aux-in RCA BT Hands-Free Calling: Accept/ Hang Up/ Reject Call HFP Phone Book Access PBAP Audio Streaming A2DP Streaming Audio Control AVRCP

WIRING DIAGRAM

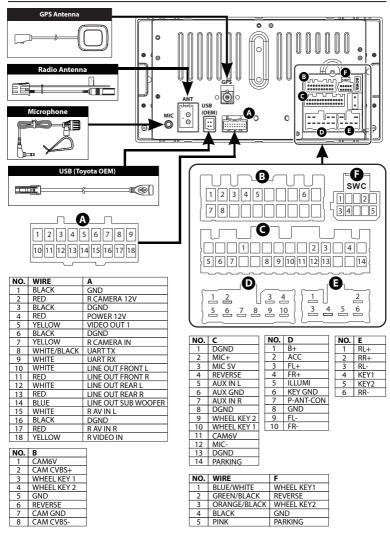

TROUBLESHOOTING

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
Unable to start	The car key is not inserted into the	Insert the car key and turn on the ignition.
up	ignition; ignition is off.	
	Power Cable is not inserted into the	Insert the power cable.
	main body.	
	Burnt power fuse .	Replace it with a new fuse.
	Drained car battery.	Charge or replace the car battery.
No sound	Audio cables are not properly	Ensure proper connection of the audio
	connected to the unit.	cables.
	Mute setting is on.	Unmute the volume.
	Low volume.	Adjust the volume.
	No sound from front, rear, left &	Select Equalizer from Home Page to adjust
	right speakers due to Fade-Balance	setting.
	settings.	
No rear-view	The rear camera is not appropriately	Examine the camera's power supply
reverse	connected with power supply.	connectivity.
image	Camera's signal line not plugged in.	Insert the camera's signal line into the
		interface port of this unit.
Unable to	Radio's antenna is not well inserted.	Ensure radio antenna is properly installed.
search		
Unable	Bluetooth is not turned on.	Ensure Bluetooth is turned on, then press
connect to		on AA/ CP icon to connect.
wireless AA/CP		
Unable	When connected wireless AA/CP	When connected wireless AA/CP
connect to	turn to wired AA/CP, mobile phone's	
wired AA/CP	WiFi is enable, your paired device is	phone's WiFi is turned off & remove the
	in the wireless device list (Michigan	paired wireless device from the wireless
	City 800 W).	device list (Michigan City 800 W), then
		connect the USB data cable.

