# 尺寸:105x145(mm), 材质:120g双胶纸, 要求: 双面彩印, 风琴折

# BLAUPUNKT **User Manual** Please refer to the goods in the package.

# Warning

·Do not immerse the hair dryer in water.

·Do not use the hair dryer in a humid environment. ·Please keep the hair dryer dry, otherwise, it may cause electric shock. ·Do not use LPG or other flammable products (such as volatile paint thinner, aerosols, etc.), it may lead to an explosion or fire due to a short

·Do not wrap the power cord around the main body of the product

when storing, it may result in electric shock or fire due to a short circuit. ·Do not store in highly humid places, it may cause electric shock or fire due to short circuits. ·Do not store within the reach of children and infants, it may result in electric shock and injury.

·Do not repair, disassemble, or modify the product by yourself, as this may result in injury due to fire or abnormal movement. ·For additional protection, a residual current device (RCD) with a rated residual operating current of no more than 30mA should be installed in the bathroom power supply's electrical circuit. ·Do not use the product if the power cord or plug is damaged or hot, otherwise, it may cause burns, electric shock, or human disaster due to

# Attention

Do not use this product near a bathtub, shower, sink, or other utensils that hold water.

·During use, the air outlet and air nozzle may become hot. Do not touch your hands when using the product, it may cause burns. •Do not use it on infants and children, otherwise, it may cause burns. ·When using the hair dryer in the bathroom, please unplug it after use. ·Please do not pull the power cord, otherwise, it may lead to power cord disconnection, resulting in electric shock or short circuit and fire. ·This product is only used to blow dry hair and hair, please do not use it to blow dry shoes and clothing, otherwise, it may cause a fire due to

·Please do not wrap the power cord around the device.

# **Care and Maintenance**

as this may cause malfunction, breakage, or fading.

X When cleaning, please make sure the power switch is off and

X Please use a cotton swab or toothbrush to remove the attachment of the air inlet and air outlet regularly. X Please do not press or rub the air inlet and outlet with nails or sharp X Do not use alcohol, nail shampoo, or detergent to clean the product

# **Product Features**

·High-speed brushless motor Self-developed 110,000 rpm high-speed brushless motor can instantly generate strong airflow to quickly dry hair.

## ·Smart Thermo-control System The smart thermo-control system measures airflow temperature over 100 times per second to protect your hair from extreme heat damage.

·Hot-Cold Air Circulation Mode Presse the temperature control button for 1 second to start the hotcold air circulation mode. Hot air and cold air alternate every 2 seconds.

## ·Hair-caring Ionic Technology The ionic generator produces ionic to neutralize static electricity and make hair smoother and glossier.

# ·Noise-reducing Technology

Modulate the frequency of motor noise to a range that human ears cannot perceive, all you can hear is the sound of wind.

# **Function Instruction**

Power/Speed control -

Temperature control

Air inlet/Removable

filter cage

Airflow outlet -Push up and down to quickly switch between two speeds. Please make sure the on/off button is in the off position before connecting the temperature indicator RED Hot Yellow Warm Blue Cold

# Power off (o) Low Speed(-) High Speed(=)

# **Parameters**


**Speed Settings** 

Product Name: Hair Dryer Model:BP-D2 Rated Voltage:220V~ Rated Frequency:50Hz Rated Power:1600W

Product size:257×72×96 (mm)

# Maintenance

Ensure to turn off the hair dryer and unplug it before cleaning the filter

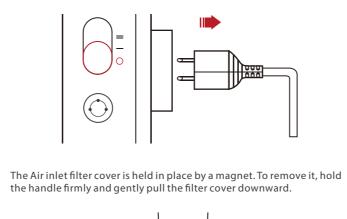

Never wash the filter with water or any other liquid.

# Clean the outer filter cage and inner filter with a dry cloth or soft brush.

			Solution		
			Blue light ring flicker warning	inner components overheat	Turn it off and return it after 1 min, if it doe not work, Send it back for repa
			Yellow light ring flicker warning	inner components damaged	Send back for repair
		Does not function when turn on		Air inlet or outlet blocked	Clean air inlet and outlet
	After cleaning, mount the filter cage back to the filter, until a soft click noise is heard.		Red light ring flicker warning	Protection programmer is started	Do not turn it on and off continuously or repeatedly
noise is neard.	noise is neard.			Input Voltage Error	Check the electricity supply voltage
	₩₩₩   click		No light	Power not connected	Check the wire and plug
			indication	Light ring PCB damaged	Send back for repair
		Function when	Novostion		

	Blue light ring flicker warning	inner components overheat	Turn it off and return it after 1 min, if it does not work, Send it back for repair		S
	Yellow light ring flicker warning	inner components damaged	Send back for repair	Hazardo	JI
oes not function when turn on	Red light ring flicker warning	Air inlet or outlet blocked	Clean air inlet and outlet	Component	
mentumon		Protection programmer is started	Do not turn it on and off continuously or repeatedly	Plastic parts Heater Materi	а
		Input Voltage Error	Check the electricity supply voltage	Motor Asseml Circuit contro	_
	No light	Power not connected	Check the wire and plug	Wire Cable	
	indication	Light ring PCB damaged	Send back for repair	Accessories	_
Function when turn on	No reaction when pressing hot wind butter	Hot air button damaged		10)	/1e

# Troubleshooting

d	turn on	overheat		or	plugl	oose		c p
er bes nd		Smelled k			ner coi image	mponen d	t	
pair	Hazardo	us Ma	ate	ria	ls			
		Haı	mful	subst	ances			
et	Component		(Cd)	(Pb)	(Hg)	(Cr6+)	(PBB)	(P
t	Plastic parts		0	0	0	0	0	
y or	Heater Mate	rial	0	0	0	0	$\circ$	
	Motor Assen	nbly	×	0	0	0	0	
ge	Circuit contr component	oller	×	0	0	0	0	
ire	Wire Cable		×	0	0	0	0	

Heater gets red | Control PCB



aning within 10 years of use, this product could



◎ 在工作状态中请勿将吹风机入风口堵住否则可能导致发热丝发红,引

- ◎请勿将吹风机浸泡在水中。
- ◎请勿在潮湿环境中使用吹风机。
- ◎ 请保持吹风机干燥,否则可能导致触电。
- ◎ 请勿在手湿的情况下使用,否则可能发生触电或因短路而引发火灾。
- 用,否则可能导致爆炸或因短路而引发火灾。
- 〕请勿在存放时将电源线缠绕在产品主体上,否则可能导致电源线断线, 发生触电或因短路而引发发火灾。
- ◎ 请勿存放在高度潮湿的地方,否则可能导致触电或因短路而引发火灾。
- ◎ 请勿存放在儿童和婴幼儿的接触范围之内,否则可能导致触电和受伤。 ◎请勿自行修理、拆卸或改装本产品,否则可能达为起火或动作异常而导
- 为了增加保护,建议在浴室供电电气回路中安装一个额定剩余工作电
- 流不超过30mA的剩余电流装置(RCD)。 ◎ 电源线或插头损坏、发热时,请勿使用否则可能导致烫伤、触电或因短

HIGH SPEED HAIR DRYER

请勿在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本产品。 ◎ 使用过程中,出风口和风嘴可能会变热使用时,请勿用手触摸否则可能

◎ 请勿对婴幼儿使用,否则可能造成烫伤。

◎ 吹风机在浴室使用时,使用后请拔下插头。

◎ 本产品仅用吹干头发和整发,请勿用来吹干鞋子和衣物,否则可能因短

发生触电或因短路而引发火灾。

◎ 清洁时,请确保电源开关关闭并拔下电插头。

◎ 请定期用毛巾、棉签或牙刷清除入风口和出风口的附着物。

◎ 请勿用指甲或尖锐物体等按压或摩擦入风口和出风口,避免损坏产品。

◎ 请勿在存放时将电源线缠绕在产品主体上,否则可能导致电源线断线,

◎ 请勿使用酒精、洗甲水或洗涤剂等清洁本产品,否则可能会导致故障、

# 产品特点

• 高速无刷电机 自主研发11万转高速无刷电机可以瞬间产生强劲气流迅速吹干头发

• 智能温控系统

本吹风机内置智能温控系统,可以精准地控制气流温度,防止过热伤发。

冷风、热风2秒自动循环,预防热量集中一边干发一边定型功能进入:开 机运行在任何温度档位下长按温度档位键1秒即可进入对应风速档位的 功能退出: a.短按温度档位键1次,即可退出;

b.关机即退出。

• 负离子护发技术 内置负离子发生器可以产生负离子,中和头发中的正电荷,减少静电积 聚,避免头发毛躁。


通过优化电机,将尖锐的高频噪音调制到人耳无法感知的频率并通过电 机动平衡,处理增加消音棉等方式进一步降低噪音,从而达到更优异的

# 功能说明



# 档位功能

上下推动, 快速切换两档风速, 连接电源插头前, 请先确保开关键处于

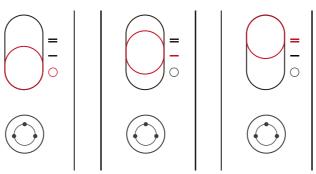


低速风挡(二) 高速风挡(=)

高速电吹风 产品型号 BP-D2 额定电压 220V~ 50Hz 1600W 执行标准:GB17625.1-2012, GB4343.1-20108, GB4706.1-2005, GB4706.15-2008

# 过滤网需要定期清洁维护,避免杂物堵塞,以确保进风通畅。

清洁与维护

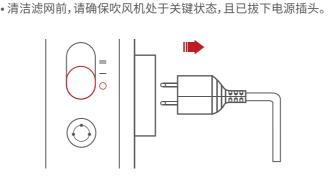



• 进风过滤网采用磁吸方式固定,握紧手柄直接向下拨动进风过 滤网,使其从手柄上卸下。




# 请勿用水清洗不锈钢滤网,否则可能会导致故障。
 
## • 用干燥无绒布, 软毛刷, 牙刷等工具清除进风过滤网和不锈钢网 表面的附着物。



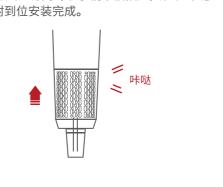

•清理完毕后,将进风过滤网对准手柄卡槽插入,听到"咔哒"一 声,说明磁铁吸附到位安装完成。

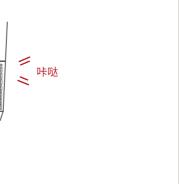

# 产品中有害物质的名称及含量

 
# 塑胶件 | 〇 | 〇 | 〇 | 〇 | 〇 电机组件 | 🗙 | 🔘 | 🔘 | 🔘 | 🔘

 电源线
 〇
 〇
 〇
 〇

附件

# 本表格根据SJ/T11364的规定编制。

- ○:表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572规定的限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材料中的含量超 出GB/T26572规定的限量要求。



本标识内数字表示产品在正常使用状态下的环保 使用年限为10年。

# 常见故障及排除

	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	741 7 3 13 5 13 7 1	
	蓝色灯环闪烁报 警	内部元器件过温	间隔1分钟后再 启动或返厂维修
п	黄色灯环闪烁报 警	内部元器件损坏	返厂维修
开 机 不		进气口或出气口 堵塞	清洁进气口和出 气口
生作	红色灯环闪烁报 警	启动保护程序动 作	请勿反复且快速 反复开关
117		输入电压异常	检查电网电压
	无效灯指示	未接通电源	检查电源线插头 是否松动
	70XX/118/1/	灯环路板损坏	
开机	按压热风键无反 应	按键板损坏	
机可正	发热丝发红	控制板损坏	返厂维修

电源线或插头过 电源线损坏或插 |

| 正常使用中出现 | 内部元器件损坏 |

常见故障 故障可能原因 故障排除

Address: 2-4, rue du Chateau d'Eau -L-3364 Designed in Germany