



BP Americas Corp.
9590 NW 40 St. Road Doral FL33178
www.blaupunkt.com

©2023 BLAUPUNKT. All Rights Reserved. MirrorLink® and the MirrorLink Logo are certification marks of the Car Connectivity Consortium LLC. SD™ and related marks and logos are trademarks of SD-3C LLC. ©2012 Google Inc. All rights reserved. Android, is a trademark of Google Inc. Apple® is a registered trademark of Apple Inc. in the United States and other countries. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. SD Card not included. 1 year warranty from date of purchase, 90 days only on labor.

⚠ WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov



BEVERLY HILLS 150

IN-CAR MULTI-MEDIA PLAYER WITH BLUETOOTH&RADIO RECEIVER



Enjoy it.

IMPORTANT NOTICE& PRECAUTIONS

Thank you for using our company multimedia player . To operate the unit correctly , please read the operation manual carefully before using . Keep this operation manual for further reference.

 
The unit is designed only for DC 12V negative ground operation system. Make sure your vehicle is connected to DC 12V negative ground electrical system. Be sure to connect the speaker(-)leads to the speaker(-) terminal. Never connect the left and right channel speaker wires together or to the vehicle body.

The normal temperature for operation is between -20 and +60 degree Celsius. Do not work in extreme high or low temperature and block vents radiator panels of the unit ,blocking them will cause heat to build up inside the unit and may cause damage or fire .

This unit can play the following discs(12 cm)and media files: DVD/MP3/WMA/CDR/RW/JPEG

INSTALLATION

Accessories included in the package for installation

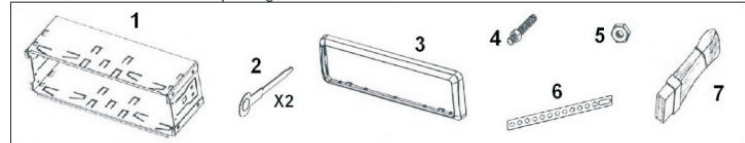

Mounting Method A

 
Put the mounting sleeve (1) into the dashboard.



Band the tabs of the mounting sleeve (1) outward into the dashboard for a secure mounting.




If necessary, use the strap (6) to secure the back of the unit in place. The strap (6) can be bent by hand to the desired angle.

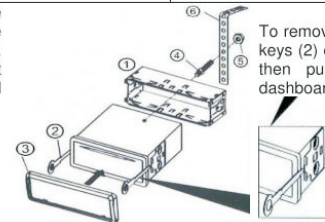

To remove the unit, insert the release keys (2) on both sides of the unit and then pull the unit out from the dashboard.

Mounting Method B

 
This mounting method is used for most Japanese cars. The actual mounting method should depend on the type of cars and the supplied parts.

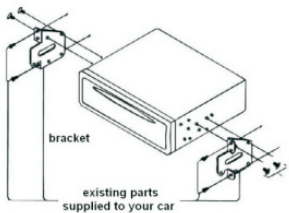

Note:

- Store small articles in places not accessible to children
- Install only with the supplied screws
- Installation varies on type of cars and supplied parts. You should have the unit installed by qualified technician

 DIAGRAMA DE CONEXION

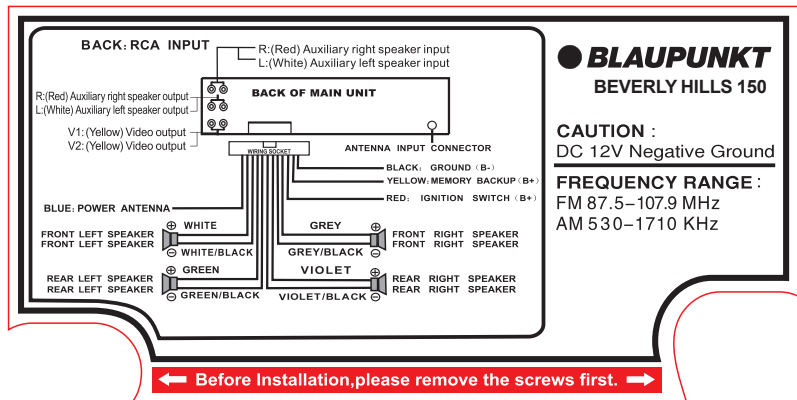

SIMPLE TROUBLE SHOOTING

PROBLEMS, CAUSES & SOLUTIONS
<p>No power</p> <ul style="list-style-type: none"> - Check and make sure the connecting wires are connected correctly - Check whether the fuse is blown. Replace with the proper value fuse if necessary.
<p>No sound</p> <ul style="list-style-type: none"> - Check and make sure the speaker wires are connected correctly.
<p>No picture</p> <ul style="list-style-type: none"> - Check whether the video wire is connected to the video device.
<p>Unit hang-up</p> <ul style="list-style-type: none"> - Press the RESET button to reset the unit to its default stage.
<p>No function when pressing the buttons</p> <ul style="list-style-type: none"> - Press the RESET button to reset the unit to its default stage.
<p>Poor effect or unable to receive radio</p> <ul style="list-style-type: none"> - Check whether the radio antenna is inserted or properly connected. - Antenna may not be the proper length. Make sure the antenna is fully extended. - Antenna may be poorly grounded. Check and make sure the antenna is properly grounded.
<p>Stereo cannot be received under radio mode</p> <ul style="list-style-type: none"> - Tune the radio frequency accurately. - The broadcasting signal is too weak, set the mode to MONO.
<p>Disc inserted but cannot play</p> <ul style="list-style-type: none"> - Check whether the disc inserted upside down. - Check whether the disc is dirty or badly cracked. - Lens is dirty. Clean lens by using the lens clean disc.
<p>Abnormal moving, skipping or sound during playback</p> <ul style="list-style-type: none"> - The disc is dirty or damaged. Wipe the disc with a dry soft cloth or replace a new disc.
<p>Remote handset does not work</p> <ul style="list-style-type: none"> - Replace new battery of the remote handset. - Point the remote handset directly at the remote sensor of the main unit. - Clean the surface of the remote sensor.
<p>Bluetooth not operated</p> <ul style="list-style-type: none"> - check the devices are linked up correctly.

Note

After the above efforts, if the unit still cannot be worked normally, consult your service dealer. Never attempt to disassemble the unit by yourself. No service part inside the unit.

SPECIFICATION

GENERAL

Power Requirement:	DC 12 Volts, negative ground
Load Impedance:	4 Ohms
Maximum Power Output:	30 watts x 4 (RMS)
Tone Control – Bass (at 100 Hz)	+/- 8 dB
Treble (at 10 KHz)	+/- 8 dB

FM RADIO SECTION

Frequency Range	
-FM :	87.5-107.9 MHZ
-AM :	530-1710 KHz
Storage Number:	
-FM:	18 Radio Stations
-AM:	12 Radio Stations
Search Method:	Manual / Auto

DISC SECTION

Disc Play:	DVD / VCD / MP3 / CD
Mounting Angle:	+/- 30 degree

VIDEO & TV SECTION

Video System:	NTSC
Video Output Level:	1.0Vp-p 75 Ohms
Horizontal Resolution:	500
TV System	NTSC / PAL / SECAM

BLUETOOTH SECTION

Communication type:	V4.0
Maximum Distance:	5 meters


AUDIO SECTION


Maximum Output Level:	2 Vrms (+/-3 dB)
Frequency Response:	20 Hz to 20 KHz
Signal to Noise Ratio:	85 dB
Channel Separation:	80 dB


Note: Specification and design; functions and features; unit illumination; colour and display segment are subject to change without prior notice. Photos and drawings on gift box or operation manual might be varied from the exact unit. Depends on the input devices, operation might be varied from the operation manual described.


MAIN UNIT OPERATION


DISC SLOT Insert or remove disc from this disc slot

 **Disc Input Mode** Press to eject disc from the disc slot

 When the unit is turn off, press to turn on the unit.
When the unit is turn on, press & hold shortly to turn off the unit.

 **Bluetooth Mode** (when a mobile phone connected Press to hang up or refuse an incoming call.
SRC when the unit is turned on, press repeatedly to select desired mode for operation.

BND or BAND  **Radio Mode** Press repeatedly to select the desired radio band for broadcasting
Bluetooth Mode (when a mobile phone connected) When an incoming call received, press to pick up the call. Press to dial out after input a phone number. Press to redial the last call.

 **Radio Mode- Auto Seek**
Press to start automatic seeking frequency upward or downward to the next strong station received for broadcasting.

Radio Mode- Manual Tune

Press hold shortly to activate manual tuning mode. At this mode, press repeatedly to tune the radio frequency upward or downward.

Disc /USB/SD / Inout Mode -Select Tracks

Press repeatedly to shift track upward or downward for playback.

Disc / USB/SD /In out Mode -Track Fast Forward / Fast Rewind.

Each time press & hold shortly to activate various fast forward/rewind speeds for playback.

Bluetooth Music Playback Mode -Select Tracks

Press repeatedly to shift track upward or downward for playback.



Radio Mode -Auto Memory Store

Press hold shortly to start searching and storing the strongest signal stations into the PRESET MEMORY STATION NO 1-6. After one cycle searched, the unit starts scanning all the preset stations and stops few seconds for broadcasting.

Radio Mode- Auto Scan

Press to start scanning all the preset stations on selected radio band and stop few seconds for broadcasting. Press again to stop this mode.

Disc/USB /SD Input Mode

Press repeatedly to activate different searching modes that may include track, file & directory search. Under this mode, rotate & press FUNCTIONNTROL to select and enter track for playback
(Note: Depended on the input device and media recorded, not all searching modes are available)

INT: At music playback mode under disc/USB/ SD card input, press to start intro playback of the input device. Press again to resume to normal playback mode.

RPT : USB / SD card playback mode, press to select various repeat playback modes of the device.

RDM: USB/SD card playback mode, press to start random playback of the device Press again resume to normal playback mode.



USB/ SD card mode & Bluetooth music playback mode, press to start, pause or resume playback.

PRESET MEMORY STATION NO 1-6

At radio mode, press any one of the preset number to select a station that and been stored in the memory for broadcasting. Press and hold shortly of any one of the preset number can store the current broadcasting station in the memory.

MIC

For voice reception under Bluetooth operation.

AUX

Insert an external device to this jack in order to have output of the external device through the unit.

IR

Remote control sensor for signal reception from remote handset.



Insert micro SD card to this port for digital files playback.

USB

Insert USB device to this slot for digital files playback. Important: The USB port is Intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cord is not recommended.



Press to detach the front panel from the main unit

PAUSE/PLAY/KEY NUMBER 1

USB/SD Mode

Press the pause/Play button to pause, play, or resume audio playback.

Turning the volume knob will also resume playback.

In Radio Mode:

Press to select the preset stations assigned to key number 1.

BROWSE/KEY NUMBER 2

USB/SD Mode

Press the browserbutton to play 10 seconds clip of each song.

Radio Mode

Press to select the preset station assigned to the key number 2.

REPEAT/KEY NUMBER 3

USB/SD Mode:

Press the repeat button to repeat a single song. Press repeatedly to toggle through repeat options

RANDOM PLAY/KEY NUMBER 4

USB/SD Mode:

Press the random play button to shuffle through tracks

In Radio Mode:

Press to select the preset station assigned to Key Number 4.

APPLICATION TO CONTROL THE UNIT VIA BLUETOOTH OF MOBILE PHONE

User can download the following application to the mobile phone in order to have control of the main unit by the mobile phone via Bluetooth. Take your phone and follow the steps:

~ for Android device, search "ewaylink" from Play Store and after searched, download & install: for IOS device, search "ewaylink" from App Store and after searched, download & install:



 
~ After installation, open "EwayLink" application:



~ The following menu appeared in the mobile phone and you can start control the car unit with this menu (Bluetooth must be connected):



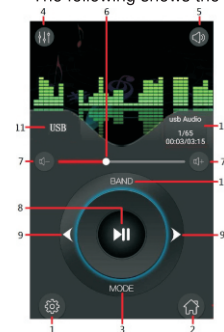

~ The following shows the control option:



1. Shift to setting menu for Bluetooth set up. (Note: it is a must to select and connect to the car unit in order to have control)
2. Exit the application.
3. Selection of operation mode.
4. Shift to set for the output level on bass / treble / balance / fader.
5. Turn on/off of sound mute control.
6. Slide to set for sound output level.
7. Set for sound output level.
8. Playback & pause control.
9. Shift track/channel up/down for playback/broadcasting.
10. Radio band selection.
11. This shows the operating mode.
12. This shows the playback/broadcasting details.

Remarks: The operation under this application is limited to some modes & controls only.

22. MENU / PBC **DISC Mode**
Press & hold shortly to display on screen the menu of the entire disc & resume playback after a while.
VCD Mode
Press & hold shortly to turn on or off of PBC playback. At PBC on mode, press & hold shortly will start the sequence playback at the beginning.
23. SETUP
During unit operation, press & hold shortly to activate setup menu on screen for various system setup. Press & hold shortly again to return to previous operation mode.
24.  **BT Mode**
Press to pick up an incoming call; dial out after input a phone number; redial last dial out number.
 / PHONE Press to shift conversation between main unit and mobile phone.

Remarks: Depends on the input devices & playback media files, operation may be varied or not available for operation.

BLUETOOTH PRING

1. Enable Bluetooth on your device
2. Scan for available devices.
3. Select "BEVERLY HILLS 150" or a similar name, when it appearsn your device.
4. Enter the code when prompted: 0000.

Disconnection with Mobile Phone

To disconnect the Bluetooth connection with the mobile phone, press &hold shortly "▲ or EJ" on the main unit, " BT OFF" will appear shortly on LCD display of the main unit when the linked-up disconnected.

D-/KEY NUMBER 5

USB/SD Mode Press the D-button to display the previous folder (if available)

In Radio Mode

Press to select the preset station assigned to Key Number 5

D+/KEY NUMBER 6

USB/SD Mode Press the D+button to display the previous folder (if available)

In Radio Mode:

 
Press to select the preset station assigned to Key Number 5.

MODE:

Press the MODE button to cycle between RADIO/USB/SD/AUX/BT modIn Bluetooth(BT) mode, The MODE Key is used to end a cal.

Note: Depends on different type of discs and media files that recorded, not all operations as described in the above operation manual can be functioned.

REMOTE HANDSET - GENERAL OPERATION

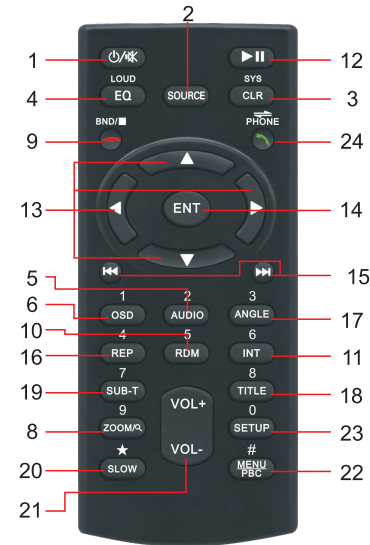

BATTERY REPLACEMENT







Refer to the back of remote handset for details on how to replace the batteries.




NOTES

Attention should be drawn to the environmental aspects of battery disposal.

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

NO.	SYMBOL	OPERATION & CONTROL MODES
1.		When the unit is turn off, press to turn on the unit. When the unit is turn on, press & hold shortly to turn off the unit.
2.	 SOURCE	During unit operation, press to turn on or off of sound mute control. Press repeatedly to select the desired mode for operation.
3.	SYS / CLR	At BT mode, press to erase the digit input by error.
4.	EQ LOUD	Press repeatedly to select the desired preset equalization mode. Press & hold shortly to turn on or off of loudness control.
5.	AUDIO	At video and music playback mode, each time press & hold shortly to select different audio output channels. (Note: Available on input device or media files recorded with different output channels and this selection is not available under BT mode)
6.	OSD	At media playback mode, press to display the contents of the playback details on screen. (Note: Not available at music playback mode)
7.	1 – 6	<u>Radio Mode</u> Press any one of the number key 1-6 to select a station that had been stored in the preset memory number key 1-6 for broadcasting. Press & hold shortly the number key 1-6 to store the current broadcasting frequency or station into the respective preset memory key number 1-6.
	0 – 9	<u>Disc / USB / SD Input Mode</u> Press directly to input the number of track for playback.
8.	ZOOM	<u>BT Mode</u> Press directly to input the phone number for dial out. <u>Disc / USB / SD Input Mode</u> At video & photo playback, each time press & hold shortly to select various zoom in and zoom out of screen for viewing.
		<u>Radio Mode</u> Press to start scanning all the preset stations on memory and stop for a few seconds for broadcasting. Press & hold shortly to start searching the frequency and storing the strongest signal stations into the preset memory stations (total 20 preset stations on each radio band). After storing the stations, the unit starts scanning all the preset stations on memory and stop for a few seconds for broadcasting.
9.	BND	<u>Radio Mode</u> Press repeatedly to select the desired radio band for broadcasting.
		<u>Disc / USB / SD Input Mode</u> At video playback mode under disc input, press to stop playback. At music / photo playback mode under disc input and playback mode under USB / SD input, press to stop playback temporary and will resume normal playback after a few seconds.
		<u>BT Mode</u> Press to hang up or refuse an incoming call.
10.	RDM	At disc / USB / SD input playback mode, press & hold shortly to turn on or off of random playback of the input device
11.	INT	At music playback mode, press & hold shortly to turn on or off of intro playback of the input device. (Note: Not available at BT mode)
12.		At disc / USB / SD / input & BT mode, press to pause, resume or start start playback.

13.		<u>DISC Mode</u> At DISC menu/title display mode, press to select the desired setting/setup and press ENT to confirm/enter. <u>Folder / Playlist Mode</u> During folder/playlist display at media playback mode, press to shift page up or down on playlist. <u>Photo Playback Mode</u> Press to rotate photo position or show up-down, left-right mirror image.
14.	ENT	<u>DISC Mode</u> At DISC menu/title display mode, press  to select the desired setting/setup and press ENT to confirm/enter.
15.		<u>Radio Mode</u> Press repeatedly to fine tune radio frequency upward or downward. Press & hold shortly to tune radio frequency to the upward or downward station for broadcasting. <u>Disc / USB / SD Input Mode (Playback Mode)</u> Press repeatedly to shift track upward or downward for playback. Press & hold shortly to activate fast forward or fast rewind mode. At this mode, press repeatedly to select various speeds of fast forward or fast rewind. (Note: Not available for operate at photo playback mode)
		<u>BT Mode</u> Press to shift track upward or downward for playback.
16.	REP	At playback mode under disc / USB / SD input, each time press & hold shortly to activate various repeat playback setting.
17.	ANGLE	At video playback mode, each time press & hold shortly to view angle changes in sequential order (available on media files recorded with this features).
18.	TITLE	<u>Radio Mode</u> Press to select stereo (ST) or mono mode at FM radio band. (Note: At stereo mode and when stereo signal received, stereo indicator appeared on screen whereas this is not indication for mono mode and mode signal received) <u>DISC Mode</u> Press & hold shortly to display on screen the menu of the entire disc and resume playback after a while.
19.	SUB-T	<u>Video Playback Mode</u> Each time press & hold shortly to select different sub-titles that recoded in the input device or media files. (Note: Available on input device or media files recorded with sub-titles) <u>Radio Mode</u> At radio band, press to select local setting for reception of strong signal stations and distant setting for reception of weak signal stations. (Note: LOC appears on screen on local setting whereas no indication for distant setting)
20.	SLOW	At video playback mode, each time press & hold shortly to select different speeds on slow motion playback.
21.	VOL + / VOL -	Press repeatedly or press & hold to adjust sound output level.