



# MULTIMEDIA NAVIGATION

## KOROMO CITY 1150 TY

## OKAZAKI CITY 1150 TY

OKAZAKI CITY 1150 TY



KOROMO CITY 1150 TY



*Enjoy it.*

# CAUTIONS

---

## Safety Notes

This car radio has been manufactured according to established safety guidelines. However, dangers may still occur if the safety notes in this manual is not observed. This manual is intended to familiarize the user with the car radio's important functions. Read this carefully, prior to using the car radio. Keep this manual in an easily accessible location. In addition, do observe the instructions of the devices used in conjunction with this car radio

## Road Safety

Always observe the following notes for road safety:

- Car radio must be used in a way that compliments safety of the user when driving the vehicle. It is recommended for the user to park at an appropriate location when operating the car radio. While driving, user is not recommended to use applications that can be prone to distraction e.g. streaming to medias etc.
- Radios with Navigation : User is recommended to proceed with proposed driving routes only if it does not violate any traffic regulations. Local traffic signs and regulations always prevail over the routes proposed.
- User is advised to keep the volume of the car radio to a moderate level for the protection of the ears and to increase the ability to hear any emergency warning signals (e.g. police and ambulance sirens). Do not increase the car radio volume while the car radio is muted as it is not audible. The car radio volume can be too loud when the car radio is unmuted.

## General Safety Notes:

Observe the following for protection against injuries:

- This car radio is intended for installation and operation in a vehicle with 12V vehicle system outage, hence the radio unit must be installed in a DIN slot. Observe the output limits of the car radio. Do not dismantle or modify the car radio. Installation and repairs, if necessary, should be performed by a specialist. We are not liable for any loss or damage caused or resulting from unauthorized disassembly or modification to the product.
- This car radio's core components may result to damage when the car is driven on bumpy roads for a prolonged period of time or if it is used to play non-standard or severely damaged discs.

- Please do not operate the car radio under extreme temperature conditions (extremely high temperature or extremely low temperature); make sure that temperature within the car ranges from -20°C to 70°C before you connect the car radio to the power supply.
- For abnormalities, please refer to the "Troubleshooting" section. If the problem cannot be resolved, please press the Reset button to recover its factory settings. Otherwise, please contact respective installer/seller directly for help.
- As SD/USB file formats, codecs, bitrate, resolution and other parameters available in the market are not all the same, there is no guarantee that this car radio can play all media file formats.
- Different cars may have different configurations. It is normal that some CAN-Bus functions cannot be enabled because it is not supported by the user's car or this car radio.
- Solvents, cleaning and scouring agents as well as dashboard spray and plastics care products may contain materials which can damage the surface and screen of the car radio. Use only dry or slightly moistened cloth to clean the car radio surface and screen.

This manual may be updated from time to time without any notice. Visit [www.blaupunkt.com](http://www.blaupunkt.com) for more info.

## Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

# CAUTIONS

---

## Disposal Notes



Do not dispose of your old unit in the household trash!  
Use the return and collection systems available to dispose of the old device.

## Radios with Detachable Panel - Damage to the control panel

- Never drop the control panel.
- Transport the control panel so that it is protected against impacts and the contacts cannot become dirty.
- Do not expose the control panel to direct sunlight or another heat source.
- Avoid direct skin contact

## Scope of Delivery

- User Manual
- 1x Connecting Cables
- 2x USB Cables
- 2x Antenna
- 3x Vehicle Double Signal Cable
- 1x External Microphone
- 1x GPS Antenna
- 1x Reverse Harness
- 1x RCA Cable
- 1x Coaxial Cable

# KEY FUNCTIONS



## Functions

### 1. Microphone

### 2. Previous/ Next Control Knob

- Turn left to previous; turn right to next
- Press to Play/ Pause

### 3. Home Button

### 4. Map Button

### 5. Menu Button

### 6. Audio Button

### 7. Vehicle Double Signal Button

### 8. Phone Button

### 9. CH < Button

- Previous/ Answer Call

### 10. CH > Button

- Next/ End Call

### 11. Info Button

### 12. Volume Control Knob

- Turn left to volume down; turn right to volume up
- Press to Mute

### 13. Reset

When the machine is not working properly, press this button to reboot the machine

# OPERATION

## HomePage

Koromo City 1150 TY



Okazaki City 1150 TY



## BT Pre-pair BT

- Ensure mobile phone supports Bluetooth function before pairing. Different mobile phone will have different emissive power. To get the best connection, the recommended distance range is 3m without any object obstruction. For the first user/reinstall the software is required to connect internet to fully register the Bluetooth.

## Pairing

- Turn on mobile phone's Bluetooth to set up. (Please refer to the instruction manual of the mobile phone on how to operate Bluetooth) "KOROMO CITY 1150 TY" or "OKAZAKI CITY 1150 TY" should appear on your available Bluetooth scanning list.
- Select "KOROMO CITY 1150 TY" or "OKAZAKI CITY 1150 TY" then insert default password "0000", if password is required. Select confirm buttons when pairing prompt message appear. It will appear in white colour in the Home Page when pairing successful.

## Delete Pairing

- In registered Bluetooth device list, choose which device want to delete and it will appear the confirmation to delete and select "OK" to continue.

## General

Power supply (12V)	10.6 V ~ 16 V DC
Standby current	≤ 10mA
Operating current	10A
Max. power output	4 x 50W
Dimension (WxLxH)	313x532x158mm
Weight	0.78kg
Operation temperature	-20°C ~ 70°C
Screen size	11.5 inch
Resolution	2000 x 1200 pixel
Aspect ratio	4:3 / 16:9

## FM Stereo Radio

Tuning range	87.5 - 108MHz
Preset memory stations	18
RDS	Supported

## AM/MW Radio

Frequency range	522~1620KHz
Preset memory stations	12

## Audio Specification

Frequency response	20Hz-20kHz
Parametric Equalizer	48-Band

## Input


USB	Audio : MP3, CDA Video : AVI, MP4
-----	--------------------------------------

Aux-in	RCA
--------	-----

## BT

Hands-Free Calling : Accept/ Hang Up/ Reject Call	HFP
Phone Book Access	PBAP
Audio Streaming	A2DP
Streaming Audio Control	AVRCP
Support for Bluetooth Headset	HSP

# WIRING DIAGRAM

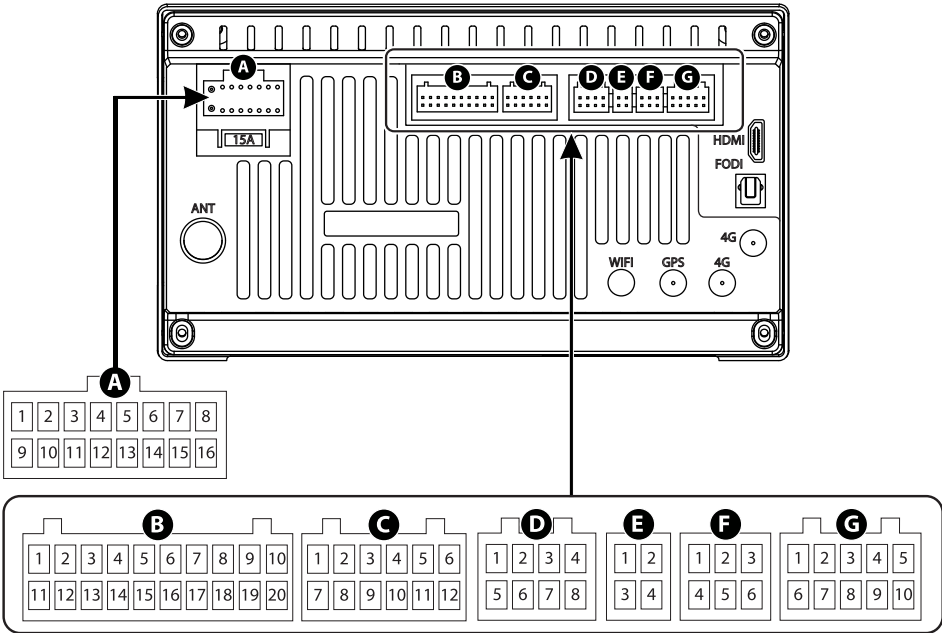

NO.	A
1	GND
2	ACC
3	REVERSE
4	KEY 1
5	FR-
6	FR+
7	FL-
8	FL+
9	B+
10	ILL
11	KEY 2
12	ANT CONT
13	RL-
14	RL+
15	RR+
16	RR-

NO.	B
1	AMP+12V
2	AUX-R
3	AUX-L
4	SIM 1-DA
5	SIM 1-DET
6	SIM 1-CLK
7	SIM 1-RST
8	VDDSIM1
9	VIN_ADS
10	GND
11	GND
12	RCA-FL-OUT
13	RCA-RR-OUT
14	GND
15	GND
16	GND
17	VIN_DSM
18	SUB
19	AUX_CVBS
20	MIC1-P

NO.	C
1	L-DET
2	GND
3	GND
4	GND
5	GND
6	360_VDD
7	R-DET
8	VIN-FRONT
9	VIN-RIGHT
10	VIN-REAR
11	VIN-LEFT
12	360_VDD

NO.	D
1	GND
2	RCA-RL OUT
3	SPDIF_OUT1
4	UART5_RXD
5	RCA-CTR-OUT
6	RCA-RR-OUT
7	UART5_TXD
8	SPDIF_OUT2

NO.	E
1	USB PWR
2	GND
3	USB-DP0
4	USB-DN0

NO.	F
1	USB PWR
2	GND
3	UART2_RXD
4	USB-DP2
5	USB-DN2
6	UART2_TXD

NO.	G
1	UART6_RXD
2	UART6_TXD
3	REVERSE
4	SW_B+
5	BRAKE
6	CAM+
7	V-GND
8	BACK CAM
9	GND
10	DOWNLOAD

# TROUBLESHOOTING

---

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
Unable to start up	The car key is not inserted into the ignition; ignition is off.	Insert the car key and turn on the ignition.
	Power Cable is not inserted into the main body.	Insert the power cable.
	Burnt power fuse .	Replace it with a new fuse.
	Drained car battery.	Charge or replace the car battery.
No sound	Audio cables are not properly connected to the unit.	Ensure proper connection of the audio cables.
	Mute setting is on.	Unmute the volume.
	Low volume.	Adjust the volume.
	No sound from front, rear, left & right speakers due to Fade-Balance settings.	Select Equalizer from Home Page to adjust setting.
No rear-view reverse image	The rear camera is not appropriately connected with power supply.	Examine the camera's power supply connectivity.
	Camera's signal line not plugged in.	Insert the camera's signal line into the interface port of this unit.
Key light does not light up	The cable didn't connect correctly.	Check the headlight line connection.
	The light button is not on.	Enable the button light on Setup.



**Blaupunkt Car Entertainment - Asia Pacific Competence Centre**

R0

KOROMO CITY 1150 TY  
1 104 24 065 65 01

OKAZAKI CITY 1150 TY  
1 104 24 066 65 01