

Wireless outdoor siren BP-WOSIR01-868




Technical specifications

- Voltage: DC 3V
- Battery: 4 *LR20 batteries
- Static current consumption: average <math><1.5\text{mA}</math>
- Alarm current: $\leq 150\text{mA}$
- Battery low voltage: <math><2.4\text{V}</math>
- Modulation method: FSK
- Working frequency: 433/868MHz (optional)
- Armed: the light flashes and the buzzer sounds 2 times each, and the light flashes once every 40S
- Disarm: the light flashes and the buzzer sounds once each
- Emergency alarm: LED light flashes, buzzer sounds, duration is set by the host
- Anti-dismantling alarm: LED light flashes, buzzer sounds for 1 minute
- Alarm loudness: about 110dB
- To cancel the alarm: long press the code key for 3S

- Wireless distance: $\leq 200\text{m}$ (open area)
- Size: (L*W*H) 288*201*14mm
- Applicable places: indoor
- Working temperature: $-10^{\circ}\text{C} \sim +60^{\circ}\text{C}$

Installation diagram

Method 1:

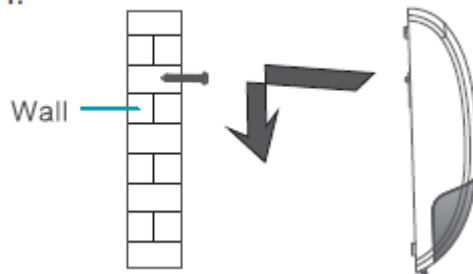

- A. Mark drill hole and drill on the wall.
B. Put the siren screw hook aiming at the wall screw, and pull it down until the siren is stable.

Method 2: First unscrew the screw to open the front cover of siren, second drill 4 screw hole on back cover and fix the back cover on the wall. Then fix the front cover.

Note: We installed battery already before out of the factory, please remove the insulation paper before using.

Battery replacement

You need to replace the battery when the siren sends low battery signal, please replace the battery as per the following steps:

1. Release the bottom screw and remove the front cover;
2. Release the screw on battery cover and remove it.
3. Replace 4 pieces LR20 battery as per correct polarity;
4. Fix battery cover.
5. Fix the front cover of siren

