

## CARD TICKET DISPENSER

### BP-PAR-EXD-01



### FEATURES

- The software can be applied to different systems, such as:

Credit card system, paper ticket parking system, Bluetooth system, UHF system.

- Software function introduction:

Can log in to see the operator handover;

Can set the number of days and paths for automatically saving pictures and data and automatically print tickets;

Payment rules setting (supports 4 car types);

Files of permissions, operator and parking lot management;

Card management (Card detection, issuance, extension, recharge, loss reporting, recovery, recycle, replacement, file processing, departure);


Real time monitoring (Vehicle presence, in and out conditions and charges);

View vehicle presence, entry and exit management information records;

View of operator charge report, entry & exit vehicle report and parking fee report.

## SPECIFICATION

Model: BP-PAR-EXD-01	
Hardware specification	
Applications	TCP, IP ports, Power supply ports
Cabinet material	Iron plate metal 2.0
Display size	64*16
Working temperature	-40°C ~ 80°C
Character color	grey
Support cards	IC/ID, RFID card etc
RFID card system	Ticket system
Main control board	Main control board
LED display	LED display
Card dispenser (Entry)	Automatic printer (Entry)
Card collector (Exit)	Bar code scanner (Exit)
Card reader	Card reader (optional)

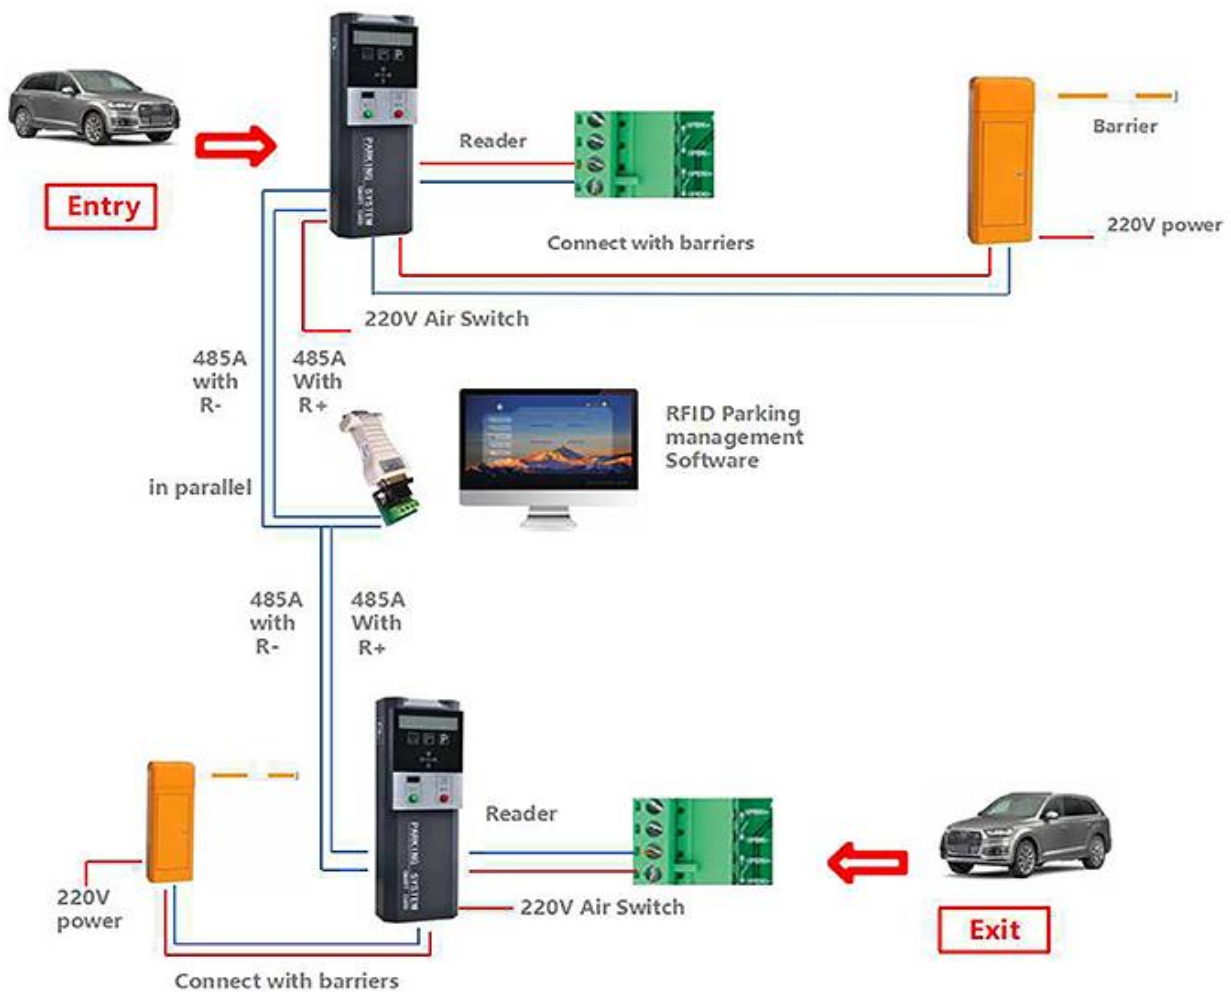

## CARD PARKING SYSTEM (CARD DISPENSER + CARD READER)

### For Temporary Cars:

1. Visitors push the button to get a card from the entry card dispenser machine then the barrier gate will open automatically.
2. When the car pass through, the barrier gate will close automatically.
3. When the visitors leave, they need pay the parking fee at management center. Or pay at parking payment machine. (Read the cards then calculate the parking fee).
4. After payment, the center staff open barrier gate for visitors to leave. (If pay at payment machine, visitors just put the card back to the exit machine with card receiver, then the barrier gate will open automatically.)
5. Barrier gate close after the car pass automatically.

### For VIP Cars:

They prepaid and got the registered cards then only need swipe the cards on the entry & exit machine and the barrier gate will open automatically.

## TICKET SYSTEM (TICKET DISPENSER + CARD READER)

### For Temporary Cars:

1. Visitors push the button to get a ticket from the entry ticket dispenser machine then the barrier gate will open automatically.
2. When the car pass through, the barrier gate will close automatically.
3. When the visitors leave, they need pay the parking fee at management center. Or pay at parking payment machine. (Scan the tickets then calculate the parking fee).
4. After payment, the center staff open barrier gate for visitors to leave. (If pay at payment machine, visitors just scan the ticket on the exit machine with ticket scanner, then the barrier gate will open automatically.)
5. Barrier gate close after the car pass automatically.

### For VIP Cars:

They prepaid and got the registered cards then only need swipe the cards on the entry & exit machine and the barrier gate will open automatically.

## DIMENSIONS

