
Lawn Mower Buttons Operation



Maintain a minimum 1.5 m/5 ft. straight boundary wire in front and behind of the docking station.

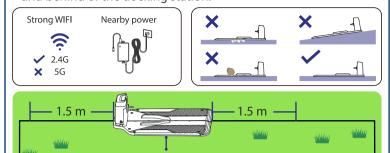

Warning: Please place the docking station on a flat and soft surface to ensure that the 40 cm long metal ground nails can be smoothly inserted into the ground. Watch for underground pipes.


<10 cm

Within the mowing area

Step 2


The boundary wire


Peel off the insulation layer of the wire end by 10-15 mm/0.39-0.59 in., and properly insert the boundary wire into the black socket.

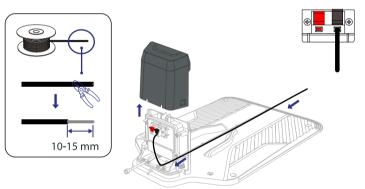

Step 3

  To ensure stability, we recommend securing the boundary wire with pegs every 75 cm/2.5 ft.







Warning:

Make sure the boundary wire is tightly attached to the ground. Do not place objects around the boundary wire to avoid affecting the obot's movement.

Step 4


Peel off the insulation layer of the other wire end by 10-15 mm/0.39-0.59 in., the boundary wire need to be properly inserted into the red socket.

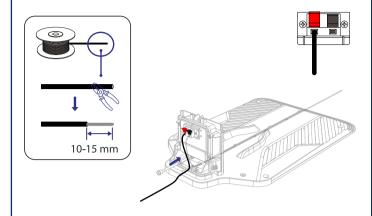

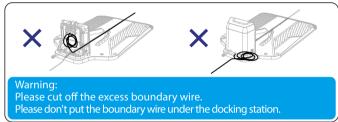


Step 5

Install the back cover to make sure the docking station waterproof.

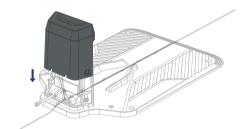

Step 6


Hammer the 2 metal nails into the lawn at the docking station head.

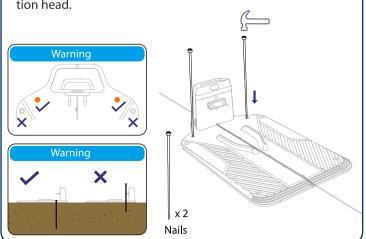

Step 7


Tighten the 4 plastic screws with a hex wrench to secure the station.

BLAUPUNKT

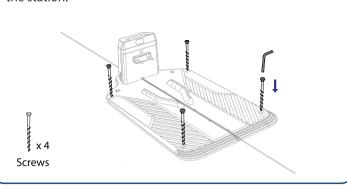


Step 8

Connect the aviation plug at one end of the adapter to the docking station, then connect the adapter to the power supply.

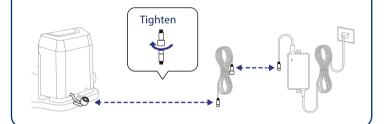


Step 9

 
If the docking station light is solid white, it indicates that the installation of the boundary wire has been completed.





Step 10


Move the mower onto the docking station and clear away obstacles such as branches on the lawn to prepare for operation.

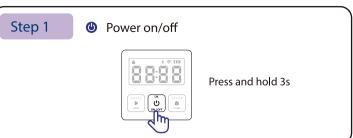

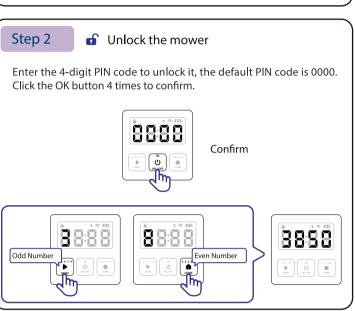

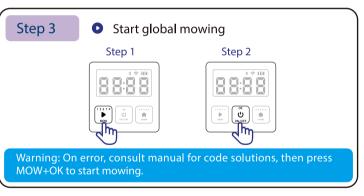

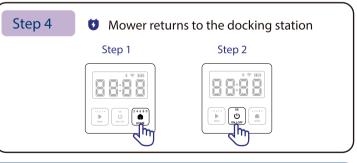

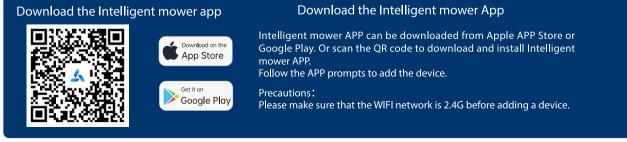

Install The Boundary Wire The corner should be great-Wire Connector Connection Guide er than 90°. The distance between the two boundary wires at the narrow passage should be greater than 60 cm/24 in. >60 cm Strong WIFI Nearby power **✓** 2.4G **X** 5G 1.5 m Maintain the wires 35 cm/14 in. away from obstacles higher than 5 cm/2 in. 35 cm The front and back of docking station 1.5 m need to lay at least 1.5 m/5 ft. 20 cm straight boundary wire. 35 cm The distance between the two parallel Maintain the wires at least 75 wires should be 20 cm/8 in. cm/2.5 ft. away from the pool. Maintain the wires 10 cm/4 in. away from ≤ 10 cm obstacles below 1 cm/0.39 in. >75 cm Maintain the wires 30 cm/12 in. away from obstacles below 5 cm/2 in. The boundary wire 30 cm Download the Intelligent mower app Download the Intelligent mower App Intelligent mower APP can be downloaded from Apple APP Store or Google Play. Or scan the QR code to download and install Intelligent App Store Follow the APP prompts to add the device. Get it on Google Play

The boundary wire

Please make sure that the WIFI network is 2.4G before adding a device.